 
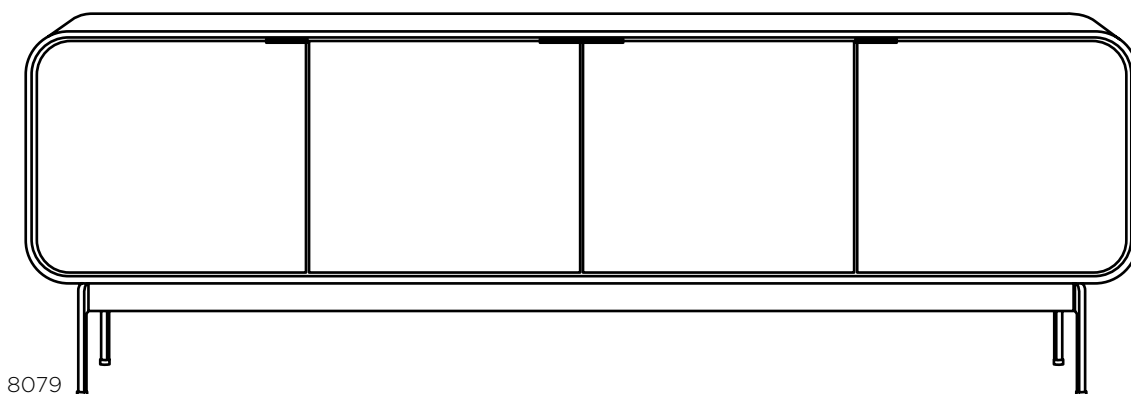 


PLUME™ 8077 & 8079

CABINET

USER MANUAL

LET'S GET STARTED.

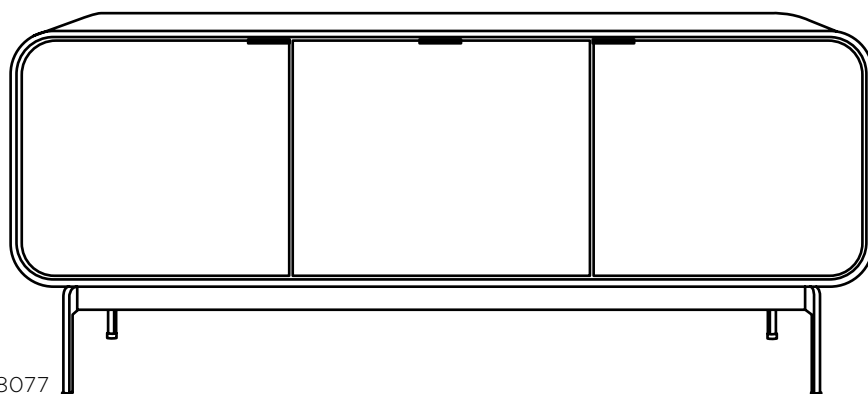

DESIGN MATTHEW WEATHERLY

BDi

BDIUSA.COM

Congratulations on the purchase of your Plume cabinet from BDI. Your cabinet has been designed to provide a lifetime of enjoyment. This manual will provide assembly instructions and other helpful information to ensure you get the most out of your product. Please save it for future reference.

Your Plume has been engineered for simple assembly. Please follow these directions carefully to prevent any damage.

Should you need further assistance, contact BDI at customerservice@bdiusa.com.

ENJOY!




HARDWARE AND COMPONENTS

Unpack and identify the parts listed below. The assembly workspace should be a non-marring surface, such as carpet. For missing hardware pieces, please contact BDI Customer Service at customerservice@bdiusa.com. For all other concerns, please contact your BDI retailer.


Do not use power tools for the assembly of this product.



 
**TOOL REQUIRED
(NOT INCLUDED)**
Phillips Screwdriver




4mm Ball Tip Hex Wrench (T1) QTY: 1




Leveler Wrench (T2) QTY: 1

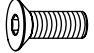


Screw M6 x 20 (H1) QTY: 8




Screw M6 x 80 (H2) QTY: 8




Screw M4 x 12 (H3)
QTY: 6 (8077) | QTY: 8 (8079)




Shelf Pin (H4)
QTY: 12 (8077) | QTY: 13 (8079)

 


8077 ONLY
Insert Cover (H5) QTY: 2

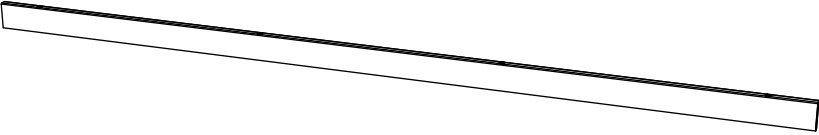


Base Rail (C1) QTY: 2

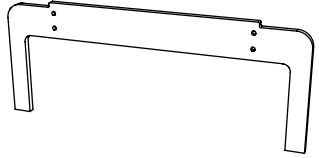

Base Leg (C2) QTY: 2

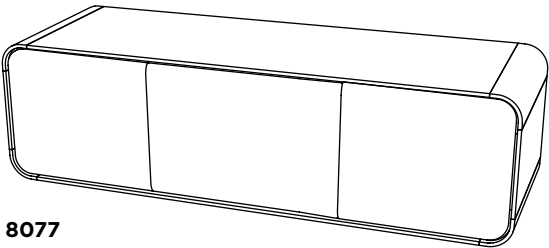


8077

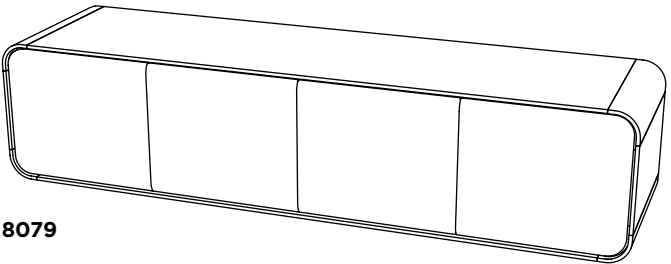

8079


Cabinet (C3) QTY: 1

 HARDWARE AND COMPONENTS




Door Pull (C4)

QTY: 3 (8077) | QTY: 4 (8079)

 


Side Shelf (C5)

 QTY: 2

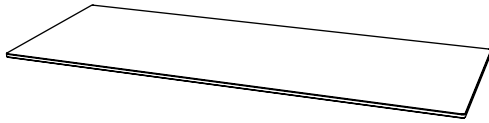

Center Shelf (C6)

 QTY: 1

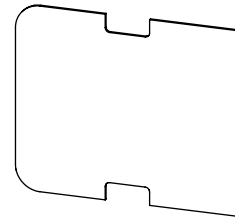



Back Panel (C7)

 
QTY: 2

STEP 1. ASSEMBLE BASE

ASSEMBLY

- Lay the **2 Base Rails (C1)** on a soft, non-marring surface like carpet.
- Attach the **2 Legs (C2)** to the **Base Rails (C1)** using **8 Screws (H1)**.

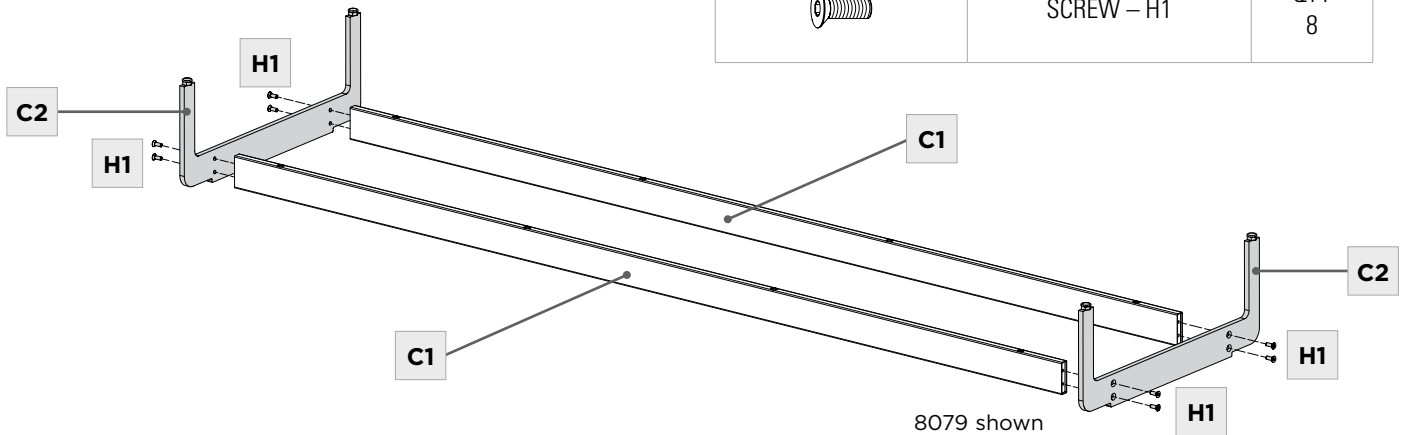

	HEX WRENCH – T1	QTY 1
	SCREW – H1	QTY 8





STEP 2. ATTACH BASE TO CABINET

ASSEMBLY

- With help from another person, place the **Cabinet (C3)** upside down on a soft, non-marring surface, such as carpet.
- Attach the **Base Assembly** to the **Cabinet (C3)** using **8 Screws (H2)**.

	HEX WRENCH – T1	QTY 1
	SCREW – H3	QTY 8

  
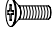 
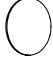 
NOTE: Insert all screws before fully tightening.

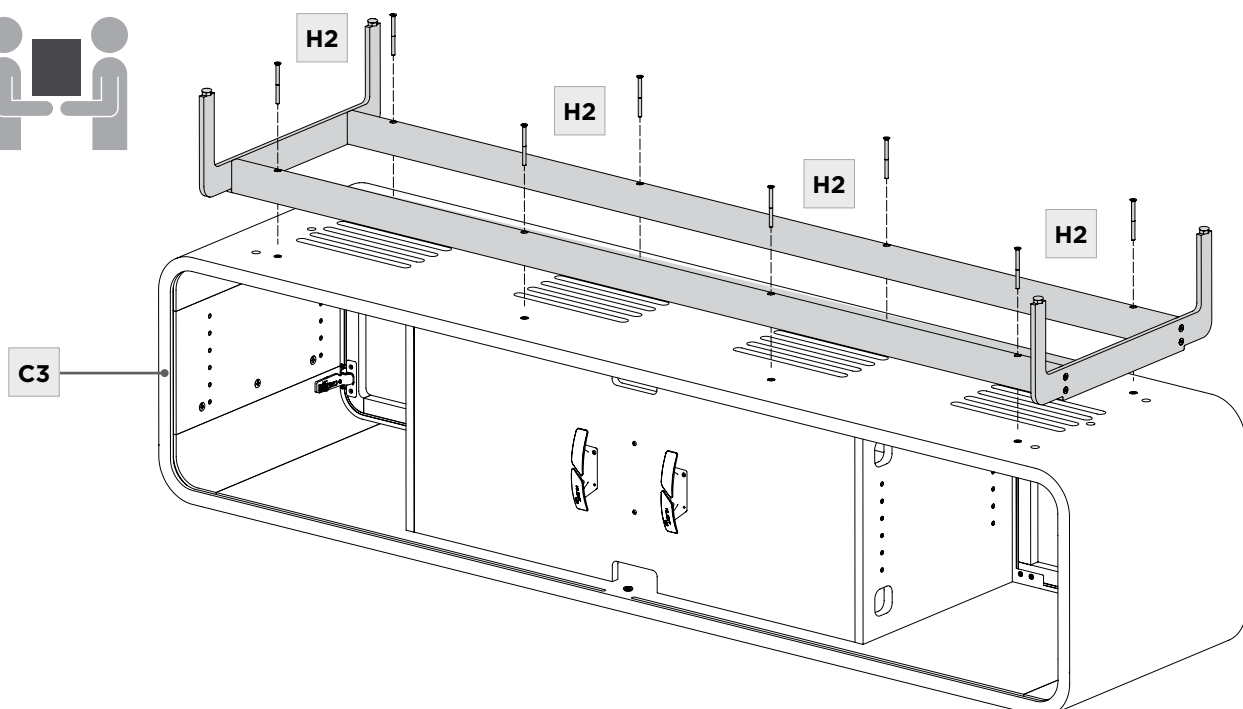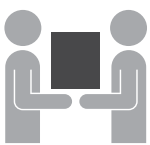

- With the help of another person, carefully turn the Cabinet onto its Base.






8077 CABINET

- Open the doors and attach the **3 Door Pulls (C4)** using **6 Screws (H3)**.
- The center door of the 3-Door Cabinet has 2 options for the Door Pull location. Choose the desired location and cover the remaining inserts with the provided **Insert Covers (H5)**.

	NOT INCLUDED PHILLIPS SCREWDRIVER	QTY 1
	SCREW – H3	QTY 6–8
	INSERT COVER – H5	QTY 2

8079 CABINET

     - Open the doors and attach the **4 Door Pulls (C4)** using **8 Screws (H3)**.

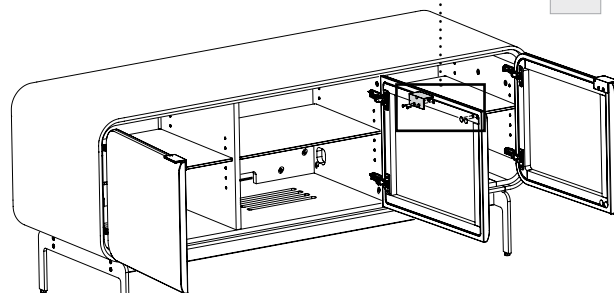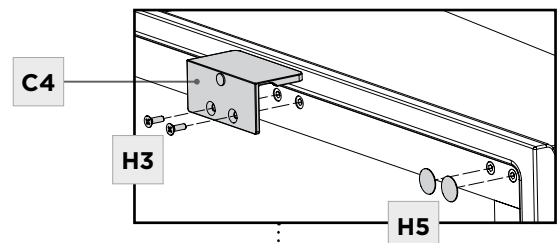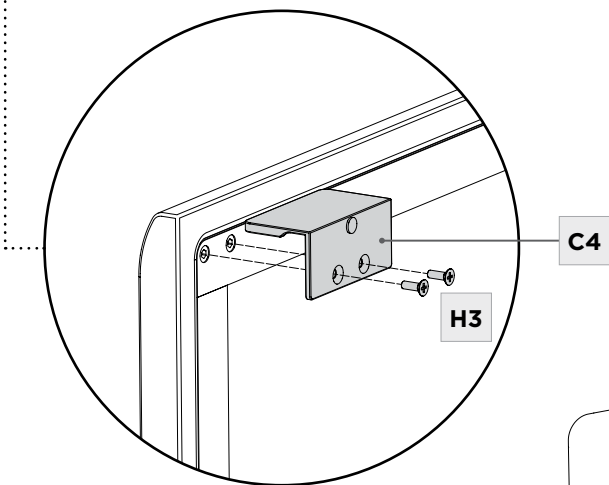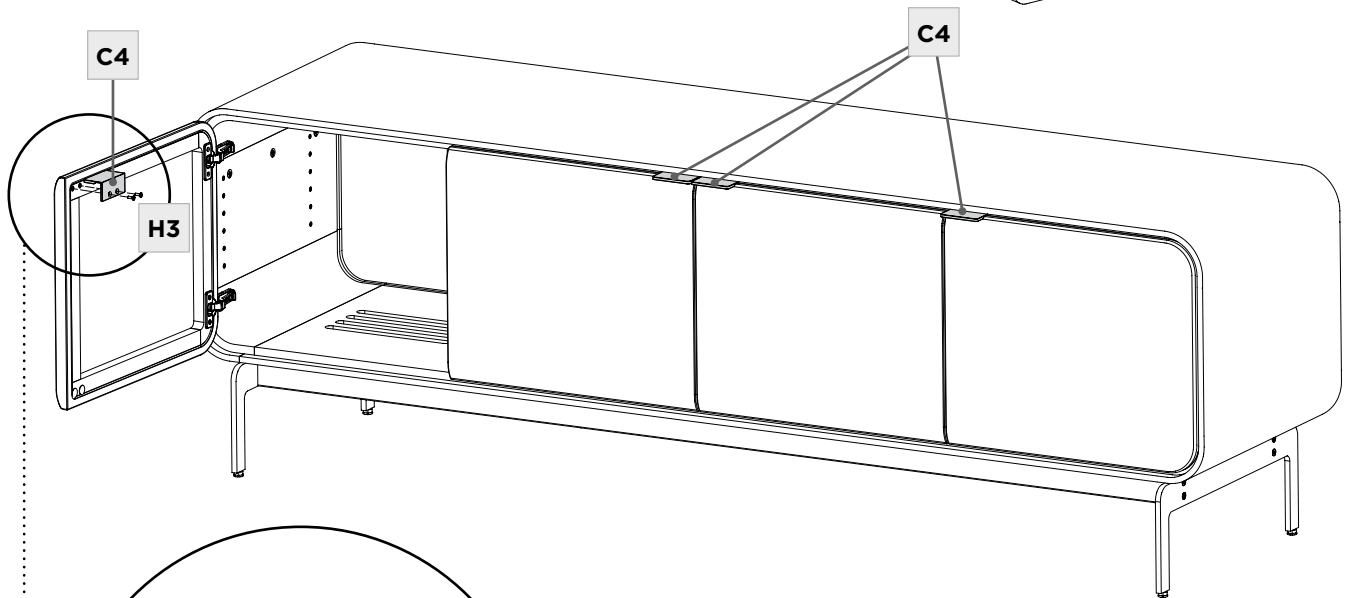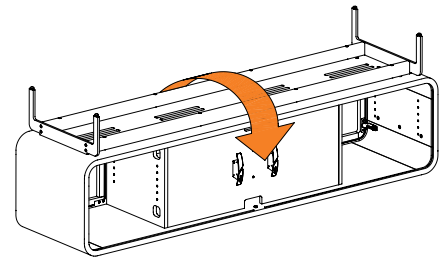
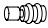 



8077 Middle Door & Insert Covers

STEP 4. INSTALL SHELF PINS & SHELVES


ASSEMBLY

- Install the **Shelf Pins (H4)** by screwing them into the desired position either by hand or with a Phillips Head Screwdriver.
- Install the **2 Side Shelves (C5)** by tilting them and placing them on the **Shelf Pins (H4)**.

	NOT INCLUDED PHILLIPS SCREWDRIVER	QTY 1
	SHELF PIN – H4	QTY 12–13

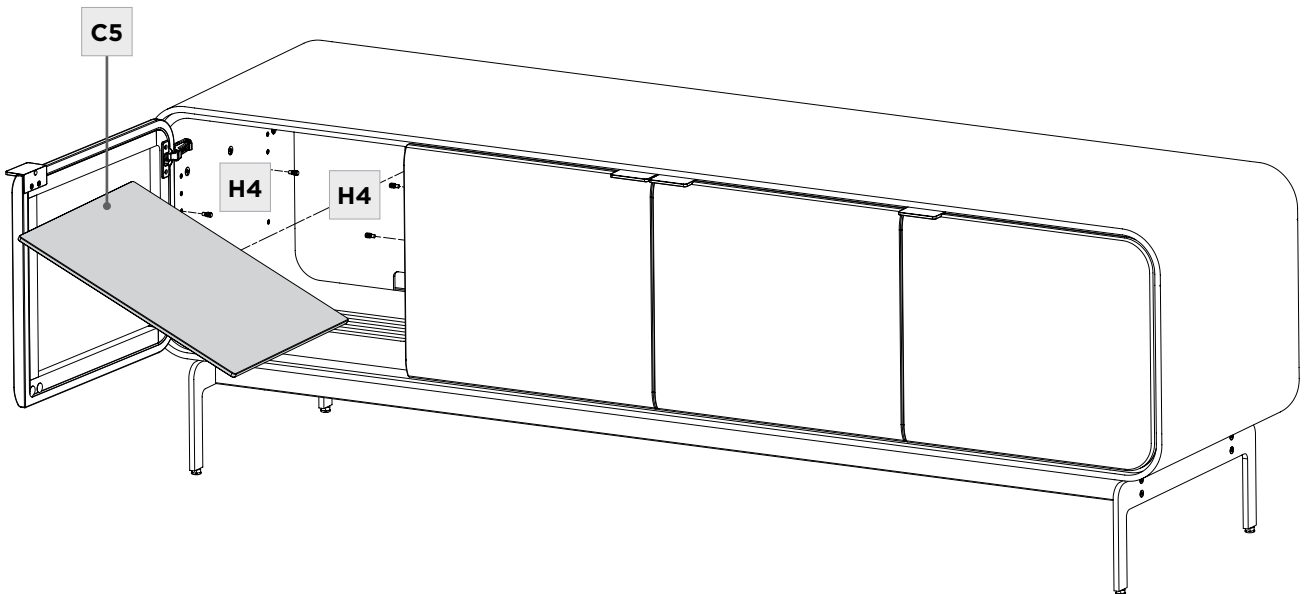 

 
- Repeat this process for the **Center Shelf (C6)**, noting the fifth **Shelf Pin (H4) (8079 ONLY)** that supports the rear center of the shelf.
- Install the **Center Shelf (C6)** by tilting it and placing it on the **Shelf Pins (H4)**.

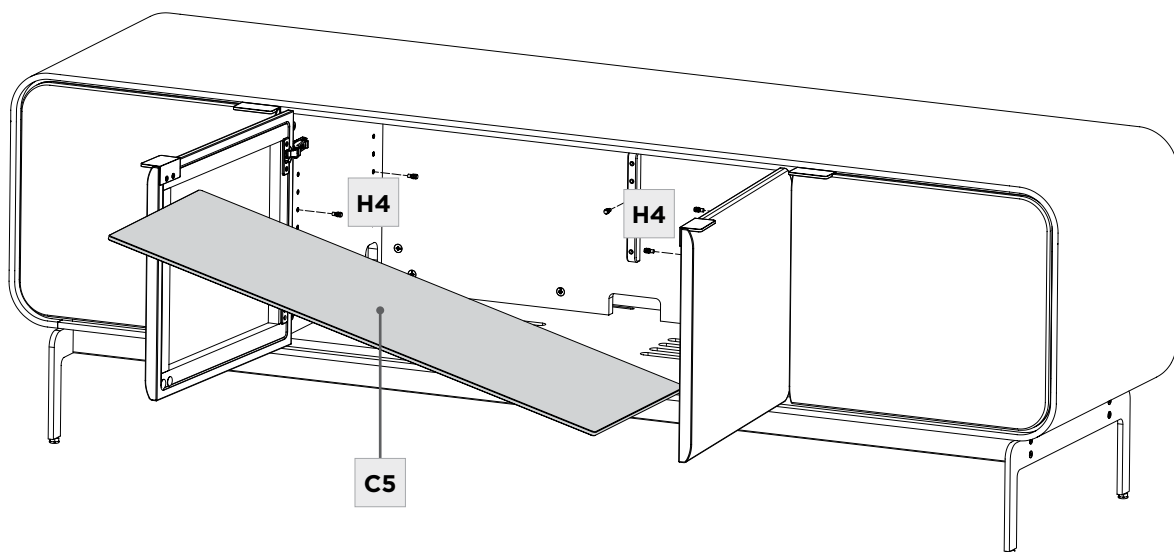


ASSEMBLY

STEP 5. ATTACH BACK PANELS

 - Install the **2 Back Panels (C7)** by inserting the Top Edge into the groove in the underside of the Cabinet's Top Panel.
- Align the Bottom Edge of the Back Panel over the groove in the cabinet's Bottom Panel and drop it into place.

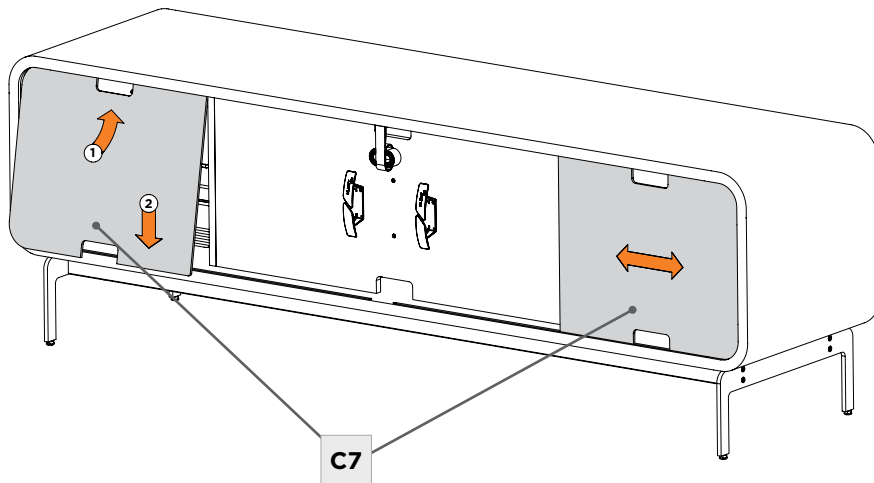

SIDE DETAIL

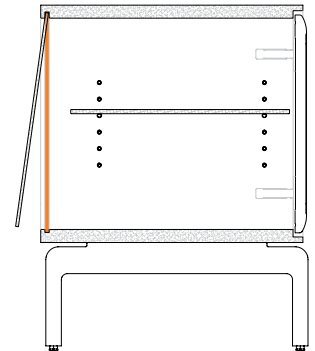 


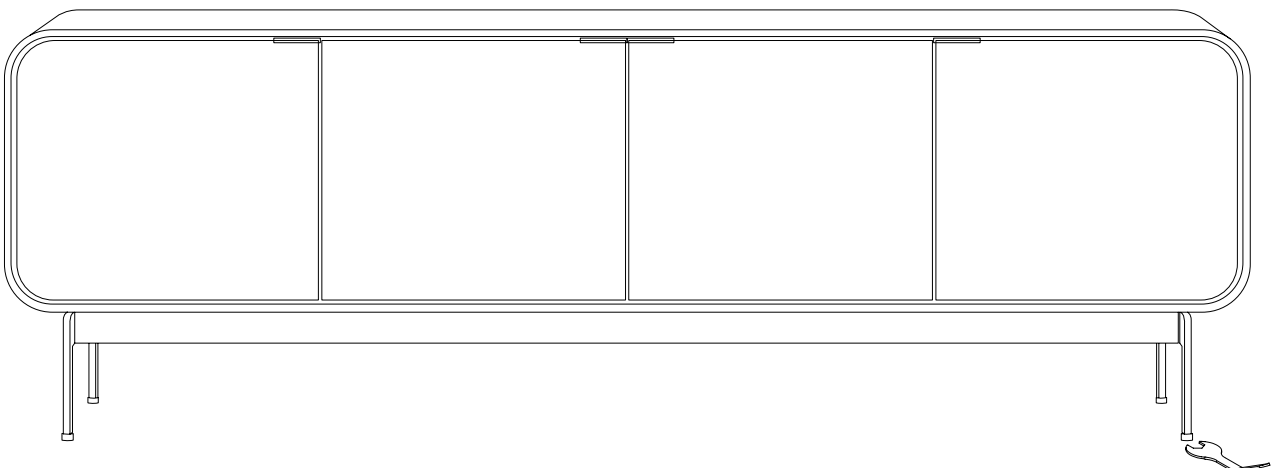 
Align Back Panel into the slotted grooves

FINE TUNING

LEVEL THE CABINET (IF NEEDED)

- Using a level (not provided), check that the cabinet is level side to side and front to back.
- If adjustments are needed, use the **Leveler Wrench (T2)** to fine-tune the levelers until the cabinet is properly balanced.

	LEVELER WRENCH – T2	QTY 1
--	---------------------	----------



These steps are to be followed after you have unpacked and completed the simple assembly instructions for your console. Due to jostling in freight or perhaps an uneven floor, the doors on your cabinet may not appear to be in perfect alignment. Making a few minor adjustments can rectify this situation. The high-quality European hinge hardware is adjustable. Through a little adjustment, you can modify the orientation of the cabinet doors to make sure that they are sitting perfectly on your unit.


The doors on your cabinet should be evenly spaced and the doors should open and close freely without rubbing against the door frame. If the cabinet's doors appear out of alignment, this condition can be corrected with minor adjustment to the European hinges on each door. Because

these hinges are adjustable, adjusting one hinge element can sometimes cause the need for adjustments to other elements. But with a few adjustments, you can modify the orientation of the cabinet doors to make sure that they hang perfectly within your cabinet.

	<p>NOT INCLUDED PHILLIPS SCREWDRIVER</p>	<p>QTY 1</p>
---	---	------------------



Use a **Phillips Screwdriver (T1)** to adjust the door hinges:

 - By adjusting **Screw 1**, the door will move LEFT or RIGHT within the frame. Make minor adjustments at both top and bottom hinges for best results.
- By adjusting **Screw 2**, the door will move UP or DOWN.
- By adjusting **Screw 3** the entire door will move IN or OUT, opening or closing the gap between the door frame and cabinet. (This screw rarely needs adjustment.)

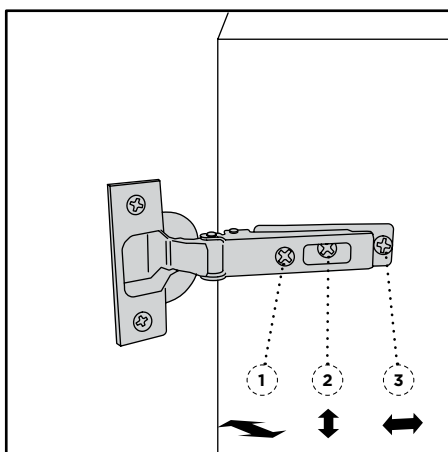

Tightening **Screw 1** on top hinge will open the seam between Door C & Door D here

  Loosening **Screw 1** on this hinge will close the seam between Door C & Door D here

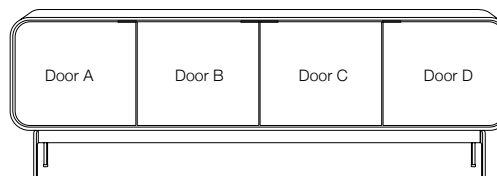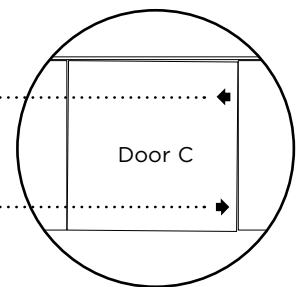




Hex wrench (included) and Phillips screwdriver (not included) are required.

Your BDI cabinet includes a pre-installed safety strap to help prevent accidents.

 1. Unbundle the strap as shown.
2. Locate the upper row of threaded holes on the back of your TV.
3. Find the corresponding pair of screws from the hardware bag bundled with the strap.
4. Loosen the buckles on the safety strap by sliding them away from the center of strap.
5. Attach the upper brackets of the strap to the TV using a screwdriver.
6. Add washers if the screws bottom out before fully tightening.
7. Once screws are installed, secure the TV by sliding the buckles evenly towards the center hub.
8. The upper safety straps should be equal in length and tight.

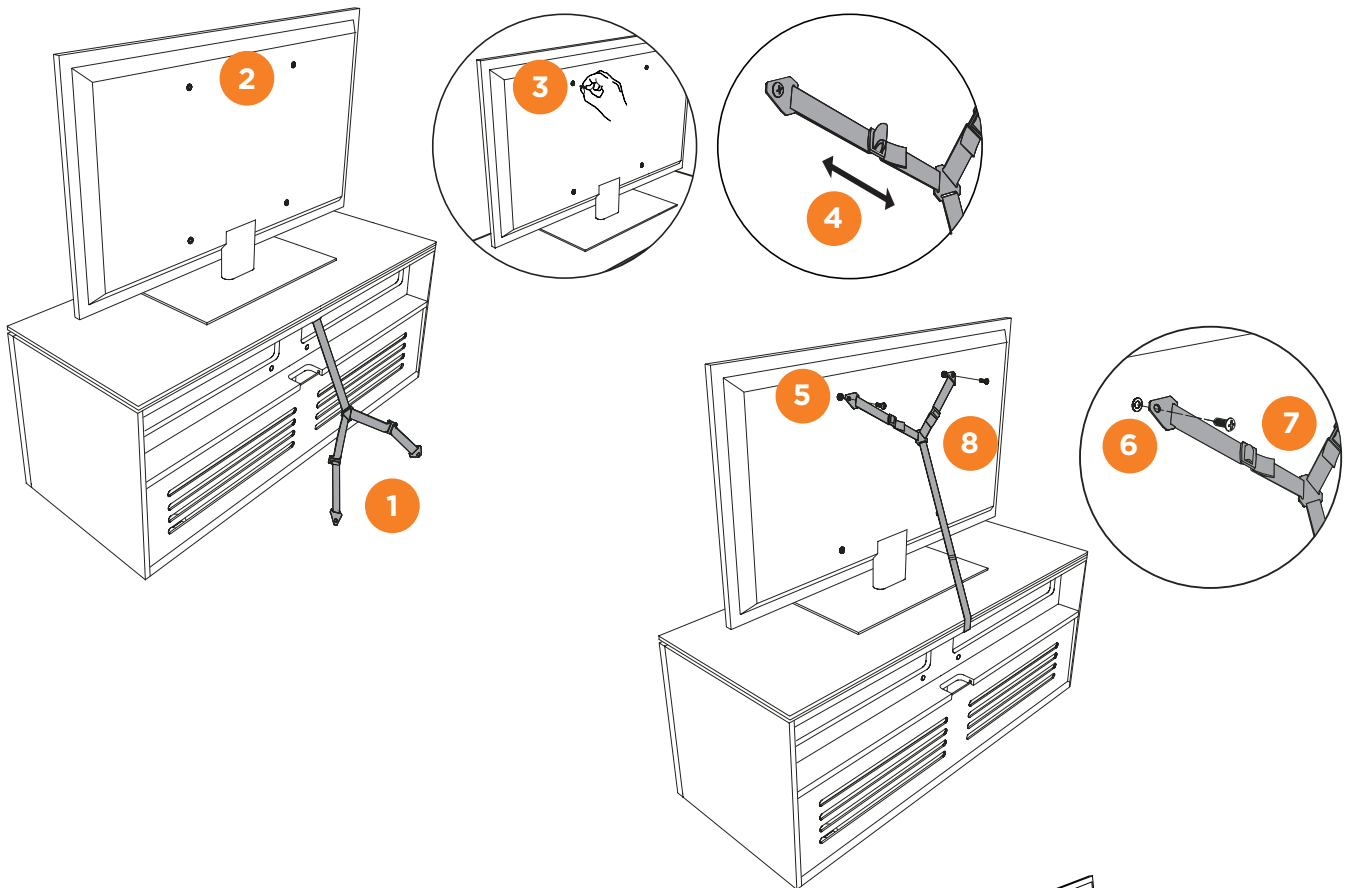

For added security, do not press down on open doors.



Your BDI furniture has been constructed with the finest materials, carefully manufactured, and designed to last a lifetime. Regular furniture care will prolong your enjoyment and keep it looking its best. Here are some general tips for taking care of BDI furniture. Your surfaces may vary.

GLASS

Glass surfaces are maintained using household glass cleaner and a paper towel or cloth.

SATIN-ETCHED GLASS

This uniquely smooth-to-the-touch glass surface can be regularly maintained using household glass cleaner and a paper towel or cloth.

A 'Magic Eraser' removes minor scratches or scuffs not eliminated using a paper towel or cloth. 'Magic Eraser' is a melamine foam product available at any grocery store or home improvement center. Dampen the entire glass surface and the Magic Eraser, then rub the whole surface in broad, even strokes using moderate pressure. Clean and dry the surface with a paper towel. Check for results and repeat as necessary. Any scratches or scuffing not eliminated by one of the above methods can often be addressed by 'refreshing' the glass. This process should not be required more than once per 6-12 months. See this brief video for the simple method: www.bdiusa.com/glass

WOOD

Wood surfaces should be cleaned with a slightly damp (not saturated) cloth or paper towel. Do not use glass cleaner on wood. If moisture remains, dry the surface with another cloth. If needed, a gentle, non-abrasive cleanser may be used, but wipe away all cleaner residue and dry the surface with a cloth.

BDI's wood finishes feature natural hardwood solids and veneers. Wood is a product of nature and—unlike man-made materials that can be manufactured to strict and consistent specifications—has natural imperfections that are part of its appeal and character. Every piece of wood differs from every other, even when coming from the very same tree. As such, grain, texture, and tone variation should be expected from one panel or piece of furniture to the next.

While BDI's stained wood finishes are stable in tone & appearance, all finishes are subject to some degree of discoloration with prolonged exposure to direct sunlight. Please avoid positioning your BDI cabinet in any area with ample direct sunlight. To learn more about the features of natural wood, visit www.bdiusa.com/wood

METAL, PORCELAIN, & PAINTED SURFACES

Surfaces should be cleaned with a slightly damp (not saturated) cloth or paper towel. If moisture remains, dry the surface with another cloth. If needed, a gentle, non-abrasive cleanser may be used, but be sure to wipe away all cleaner residue and dry the surface with a cloth.

WARRANTY

BDI warrants to the original purchaser that for the below-stated warranty term, BDI will replace any product, part, or component covered by this warranty that fails under normal use as a result of a defect in material or workmanship. The decision to replace a complete product versus the part or component in question will be at BDI's sole discretion.

Residential Use: BDI Furnishings carry warranty coverage for three (3) years from the date of product delivery, as shown on your sales receipt/documentation. Select chairs carry coverage for five (5) years from the date of product delivery.

 
Commercial Use: BDI Furnishings carry warranty coverage for one (1) year from the date of product delivery, as shown on your sales receipt/documentation. Select chairs carry coverage for five (5) years from the date of the product delivery, based on an 8-hour daily use pattern.

BDI reserves the right to refine or update its warranty from time to time. See the complete and latest warranty document at www.bdiusa.com/warranty.

PRODUCT REGISTRATION

Registering your new BDI product allows us to send you important product updates, service information, and helpful hints related to your BDI products.

Register today, and you will be **entered to win free a BINK table** from BDI: www.bdiusa.com/register

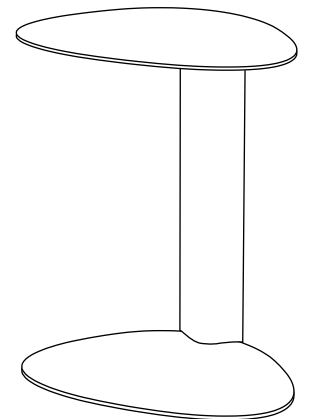

BDIUSA.COM

These distinctive product configurations are protected by US and international patents, trade dress, and/or copyright laws. Plume & BDI are trademarks of Becker Designed, Inc. All rights reserved. ©2026, BDI | V.03.06.2026