

CORRIDOR® 5601 & 5602
SHELF

USER MANUAL

LET'S GET STARTED.

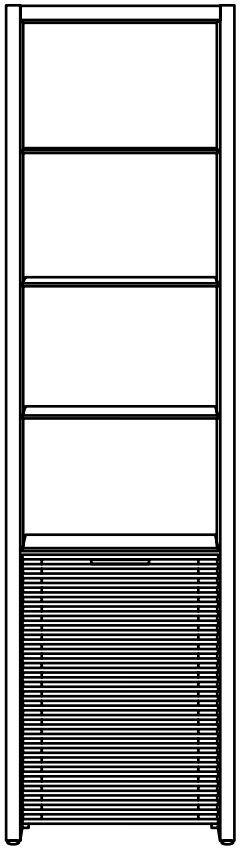

5601

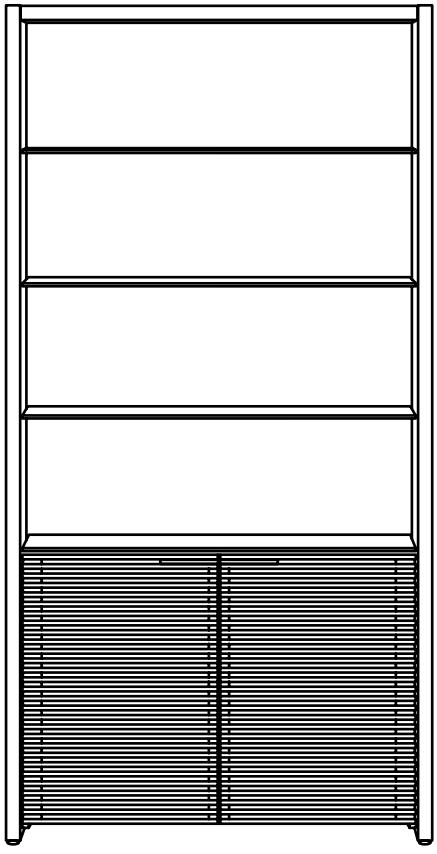

5602

DESIGN MATTHEW WEATHERLY

BDIUSA.COM

Congratulations on the purchase of your Corridor shelf from BDI. It has been designed to provide a lifetime of enjoyment. This manual will provide assembly instructions and other helpful information to ensure you get the most out of your product. Please save it for future reference.

Your Corridor has been engineered for simple assembly. Please follow these directions carefully to prevent any damage.


Should you need further assistance, contact BDI at customerservice@bdiusa.com.

ENJOY!


HARDWARE AND COMPONENTS

Unpack and identify the parts listed below. The assembly workspace should be a non-marring surface, such as carpet. For missing hardware pieces, please contact BDI Customer Service at **customerservice@bdiusa.com**. For all other concerns, please contact your BDI retailer.

Do not use power tools for the assembly of this product.




Hex Driver (T1)	QTY: 1



Phillips Screwdriver (T2)	QTY: 1




Leveler Wrench (T3)	QTY: 1



Screw M6 x 35 (H1)	QTY: 12



Cam Bolt (H2)	QTY: 4




Wood Dowel (H3)	QTY: 8




Barrel Nut Insert (H4)	QTY: 4




Barrel Nut Set Screw (H5)	QTY: 4



Patch Cord (H6)	QTY: 1

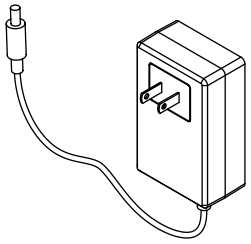

Power Adapter (H7)	QTY: 1



Wall Anchor Strap (H8)	QTY: 1



Screw M6 x 16 (H9)	QTY: 5



Adhesive Felt Discs (H10)	QTY: 6



Screw M4 x 30 (H11)	QTY: 2/door




Rubber Bumper (H12)	QTY: 4 or 6
4 for Single; 6 for Double	




Shelf Pin (H13)	QTY: 16




Hook and Loop Straps (H14)	QTY: 3

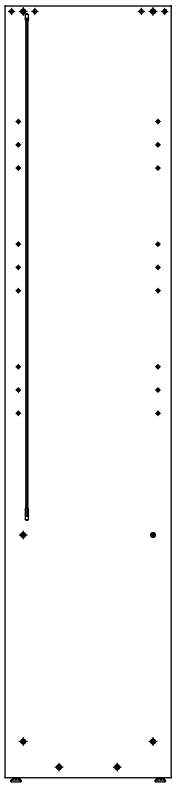


Left Side Panel (C1) | QTY: 1

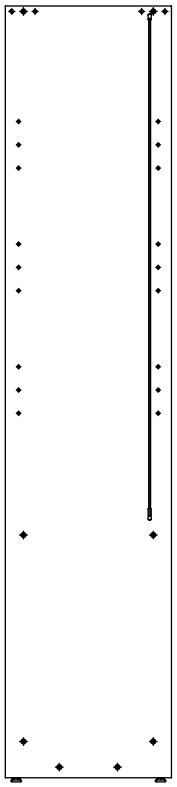

Right Side Panel (C2) | QTY: 1



Cabinet Block (C3) | QTY: 2

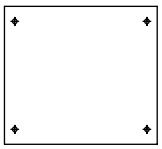


Single




Double

Top Panel (C4) | QTY: 1

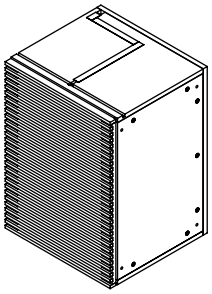


Single

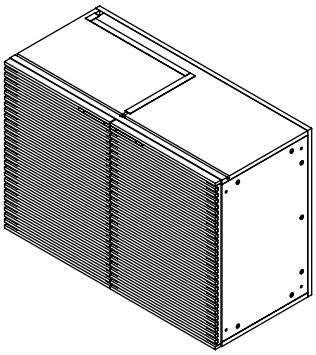


Double

Cabinet (C5) | QTY: 1




Connection Plate (C6) | QTY: 1

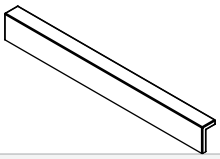


Door Pull (C7) | QTY: 1 or 2

1 for Single; 2 for Double

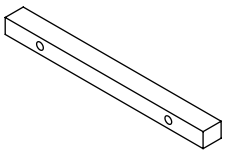


Door Pull Filler Block (C8) | QTY: 1

For Single Only

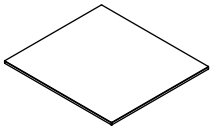


Single

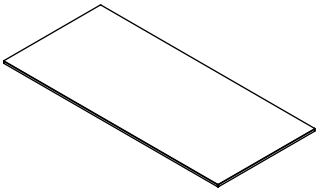


Double

Black Glass Shelf (C9) | QTY: 4



Single

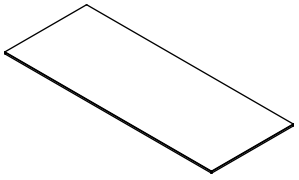

Double



Clear Glass Shelf (C10) | QTY: 1


ASSEMBLY

STEP 1. ATTACH CABINET BLOCKS TO SIDE PANELS

- Lay **Left Side Panel (C1)** and **Right Side Panel (C2)** on a soft, non-marring surface like carpet.
- Attach **1 Cabinet Block (C3)** to the bottom end of each panel using **2 Screws (H1)** per Block and tighten with **Hex Driver (T1)**.

Please note the orientation of the LED strips.



	HEX DRIVER – T1	QTY 1
	SCREW – H1	QTY 4

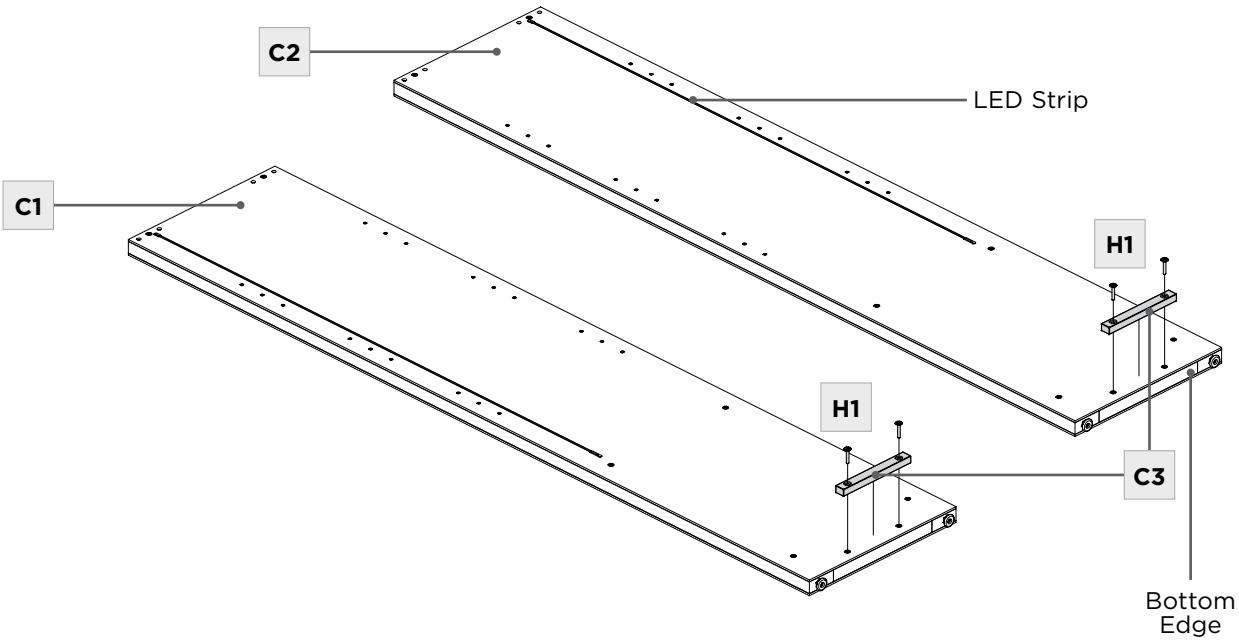


ASSEMBLY

STEP 2. INSTALL CAMS AND DOWELS

- Find the groups of 3 holes near the top edge of one side panel.
- Screw **Cam Bolts (H2)** into the threaded holes using the **Phillips Screwdriver (T2)**.
- Push the **Wood Dowels (H3)** into the remaining holes.
- Repeat for the second side panel.

	PHILLIPS SCREWDRIVER – T2	QTY 1
	CAM BOLTS – H2	QTY 4
	WOOD DOWELS – H3	QTY 8

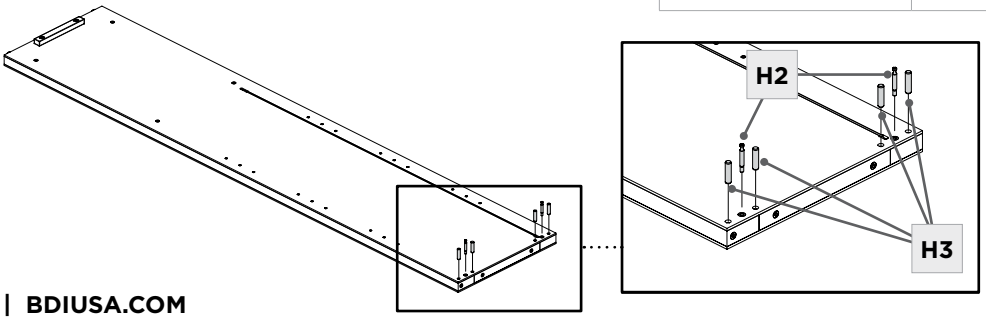



STEP 3. INSERT BARREL NUTS

ASSEMBLY

- Insert **4 Barrel Nut Inserts (H4)** into the holes on the top of the **Top Panel (C4)**.
- Align the notch on the **Barrel Nut Insert (H4)** with the notch on the **Top Panel (C4)**.
- Begin threading **4 Barrel Nut Set Screws (H5)** into **4 Barrel Nut Inserts (H4)**. Only thread for **1 ROTATION**. Do not tighten further.

	BARREL NUT INSERT – H4	QTY 4
	BARREL NUT SET SCREW – H5	QTY 4

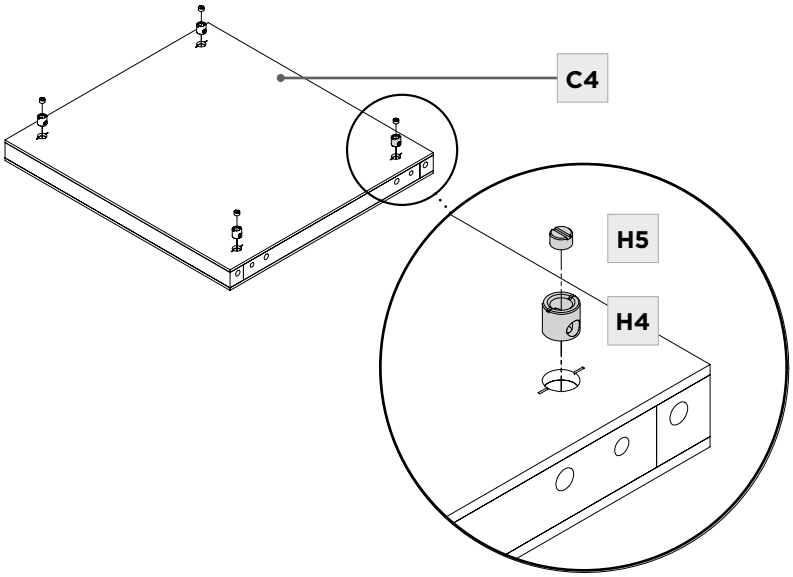

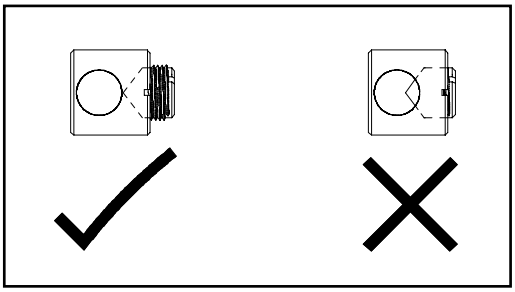


NOTE: Look into the side hole of the barrel nut and make sure the set screw is not blocking the hole.


If the hole is blocked, unscrew the set screw a few turns until the hole is clear, which will allow the cam bolts to enter.

STEP 4. ATTACH TOP PANEL TO SIDE PANEL

ASSEMBLY


- Attach **Top Panel (C4)** to **Right Side Panel (C2)** by sliding dowels and cam bolts into the holes on the edge of **Top Panel (C4)**. If the **Cam Bolts (H2)** do not enter the **Barrel Nut Inserts (H4)**, make sure each **Barrel Nut Insert** is aligned with the side hole and the set screw is sufficiently loosened.
- Tighten the **Barrel Nut Set Screws (H5)** using the **Phillips Screwdriver (T2)**, turning clockwise until tight.
- Position **Cabinet (C5)** as shown, making sure wiring is facing towards **Top Panel (C4)**.
- Make sure the door is facing upward.

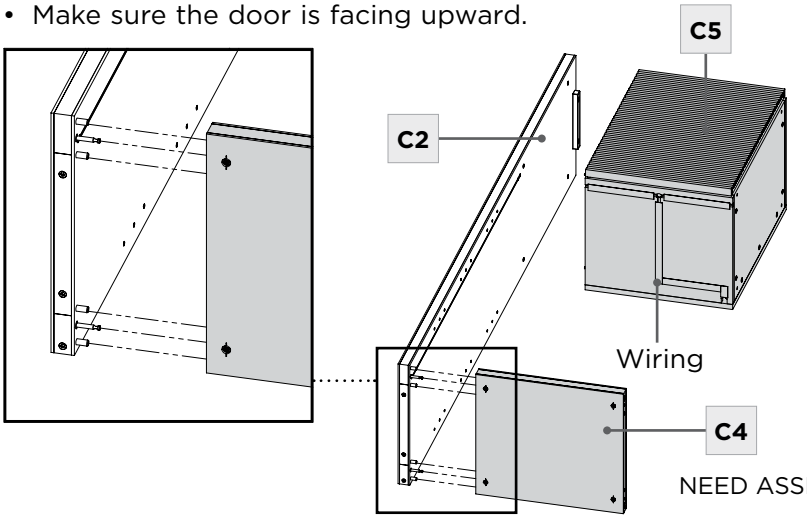

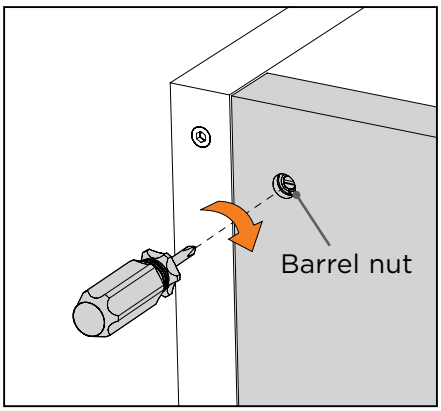


ASSEMBLY **STEP 5.** ATTACH SECOND SIDE PANEL



- Attach the **Left Side Panel (C1)** to the other side of the **Top Panel (C4)** by sliding dowels and cams into the holes on the side of the **Top Panel (C4)**.
- Tighten the **Barrel Nut Set Screws (H5)** using the **Phillips Screwdriver (T2)**.

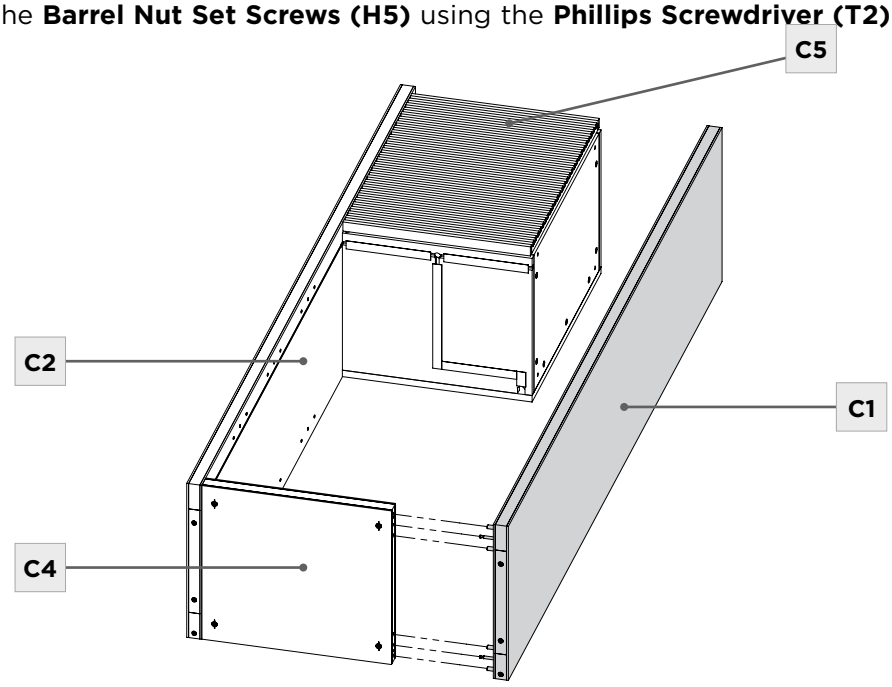



ASSEMBLY **STEP 6.** ATTACH CABINET TO SIDE PANELS


- Making sure the bottom of the cabinet is against the **Cabinet Blocks (C3)**, carefully open the cabinet door.
- Attach the **Cabinet (C5)** to the side panels using **8 Screws (H1)**.
- Install all screws before tightening with **Hex Driver (T1)**.
- With help from another person, carefully stand shelf upright.

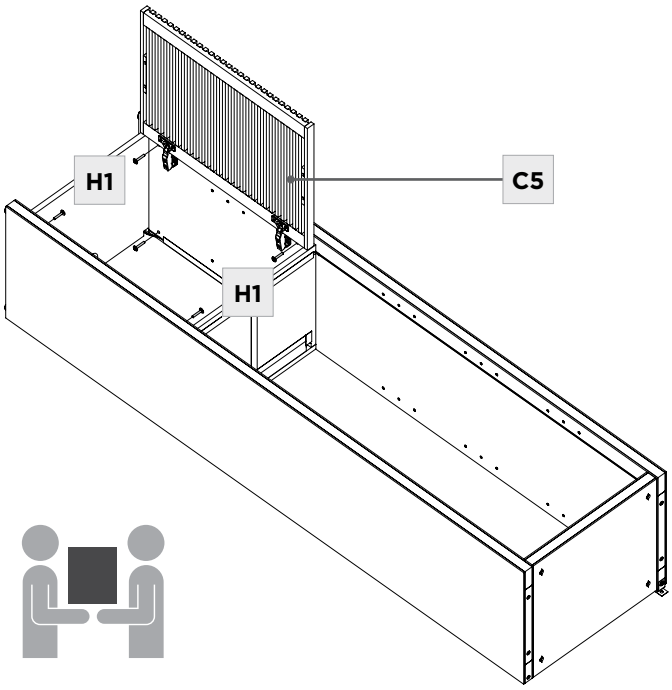



	HEX DRIVER – T1	QTY 1
	SCREW – H1	QTY 8

- Locate the bundled wires inside the Cabinet.
- Unwrap the wires and feed them through the small hole in the bottom panel.
- Connect these wires to the **Patch Cord (H6)**, then connect the **Patch Cord (H6)** to the **Power Adapter (H7)**.

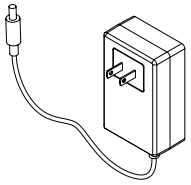	PATCH CORD – H6	QTY 1
	POWER ADAPTER – H7	QTY 1

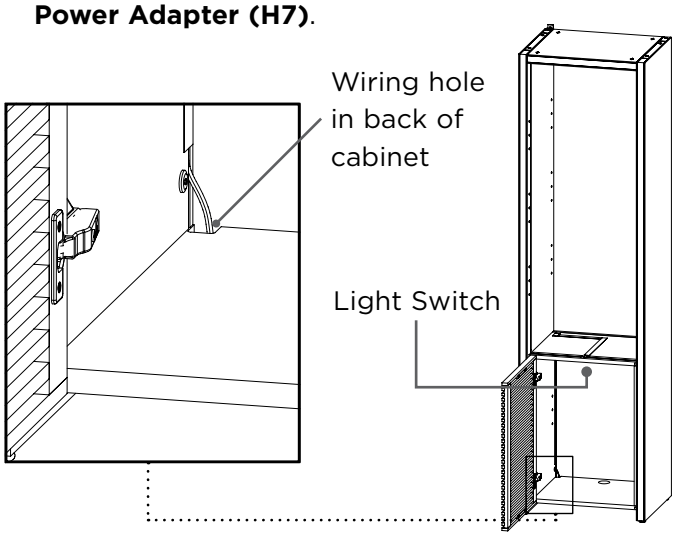

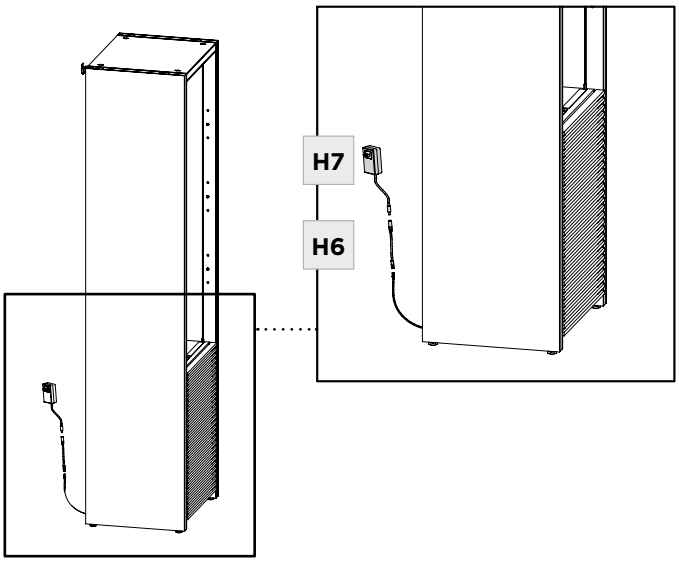

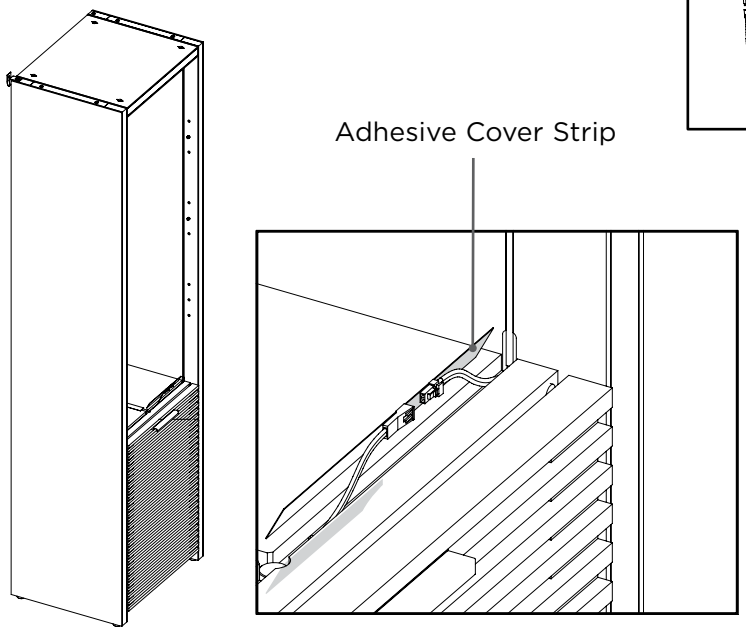



- Connect the LED wires from the side panels to the Touch Switch wires located in the channel on top of the cabinet.
- Repeat on the left and right sides.
- Tuck the connected wires into the channel.
- Test that the lighting is wired correctly by turning the lights on and off.
- Peel the backing from the pre-attached Adhesive Cover Strip and press it over the channel to secure the wires.

The Corridor Shelf is equipped with dimmable accent lighting. Plug the cord into a wall outlet. Tap the switch inside the cabinet on the underside of the top panel to turn it on or off. To dim the light, touch and hold the touch switch and release it when the light level is to your liking. When the light is turned off, it will hold the last setting until the next time it is turned on.

STEP 8. WALL CONNECTION


- With help from another person, carefully move the shelf into the desired position against the wall.
- Attaching your Corridor Shelving to the wall **IS REQUIRED** to ensure your safety.
- Use painter's tape to mark an upper corner of the shelf.
- With help from another person, carefully move the shelf away from the wall.
- Measure and mark 1″ in from the vertical strip of painter's tape, and 1″ below the horizontal strip, as shown.

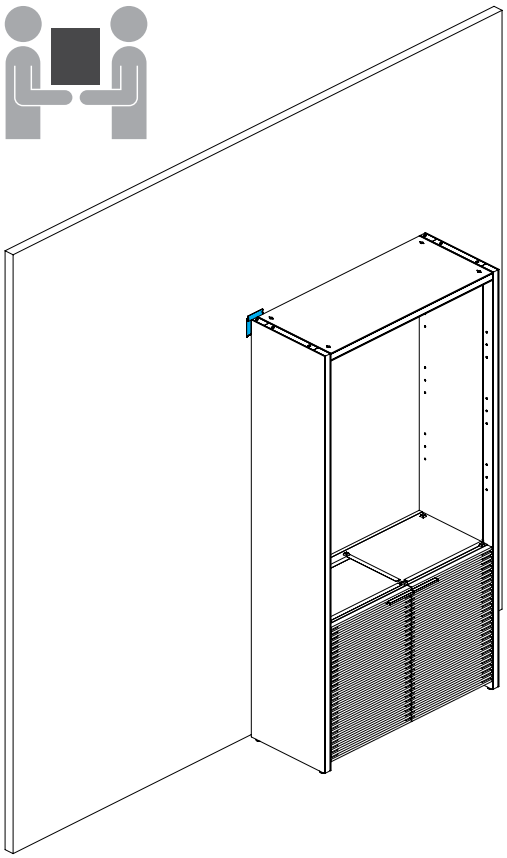

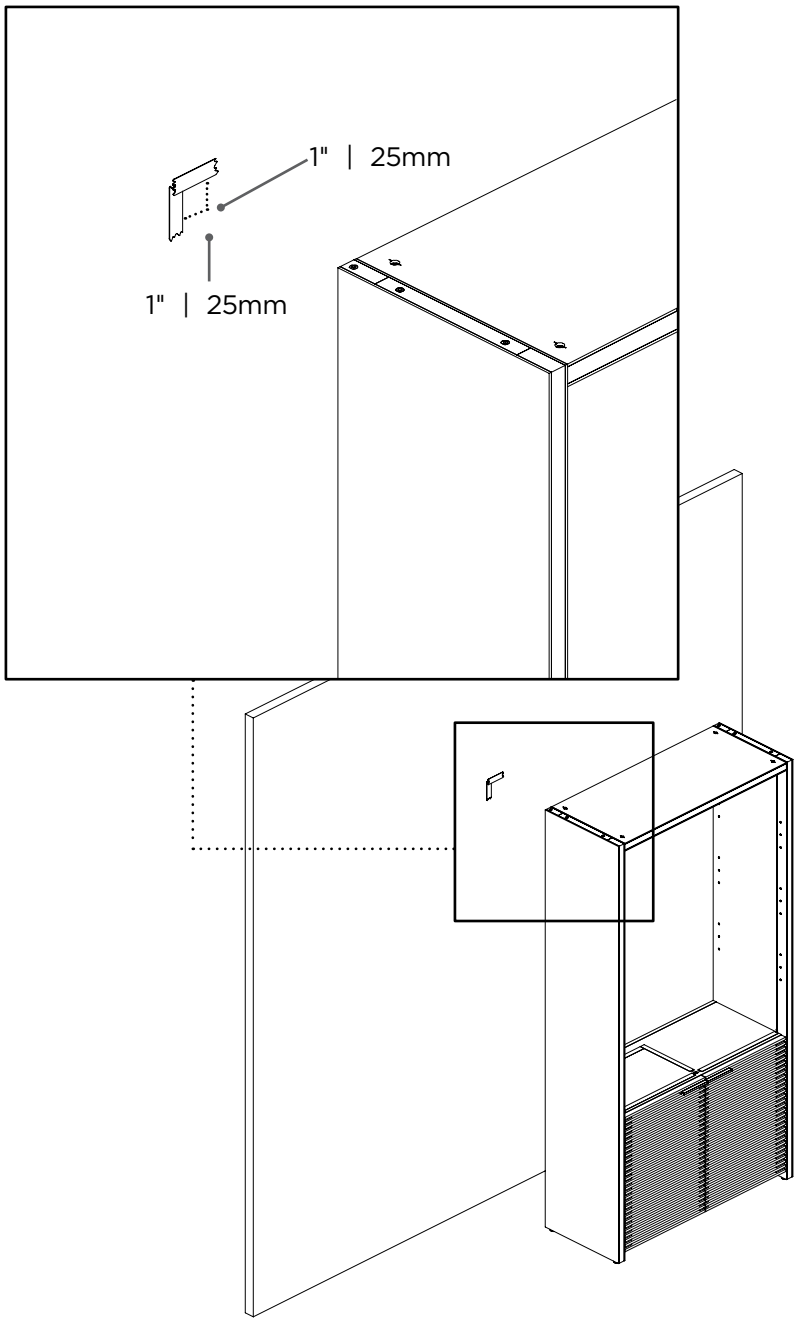


- Attach one end of the **Anchor Strap (H8)** to the wall with an appropriate wall anchor and fastener (not included).
- With help from another person, return the shelf to the desired position. Remove tape from wall after anchoring is complete. Plug the **Power Adapter (H7)** into a wall outlet.
- Attach the other end of the **Anchor Strap (H8)** to the top of a Side Panel with **1 Screw (H9)**.


	ANCHOR STRAP – H8	QTY 1
	SCREW – H9	QTY 1
	NOT INCLUDED WALL ANCHOR	1
	NOT INCLUDED SCREW	1

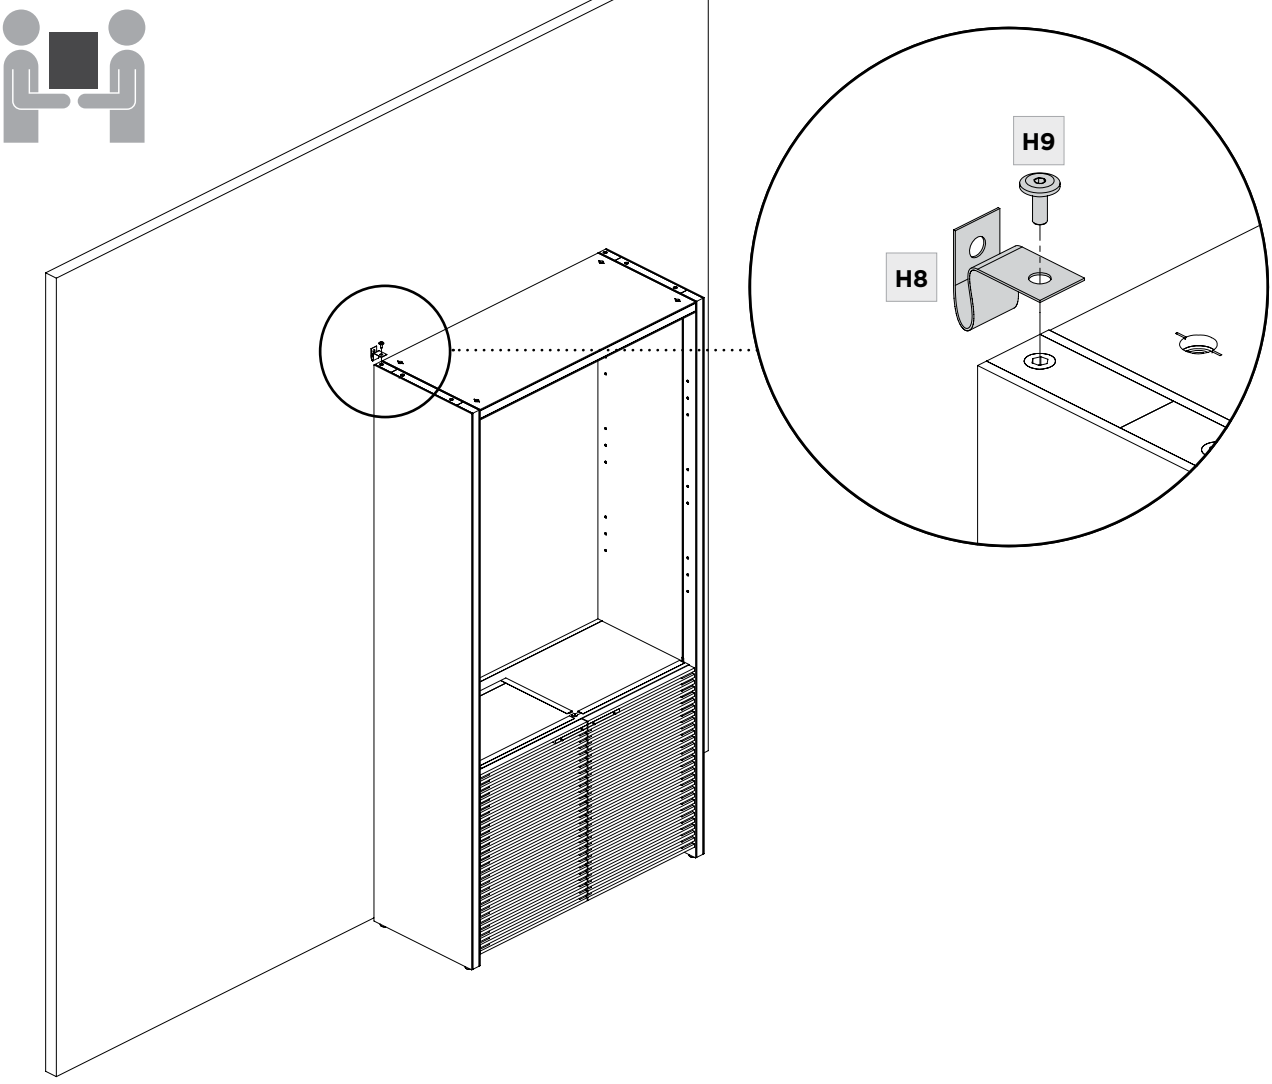

STEP 8. WALL CONNECTION (CONTINUED)

NOTE: If placing your Corridor Shelf perpendicular to the wall, you must measure and mark the rear corner of the Side Panel, as shown.

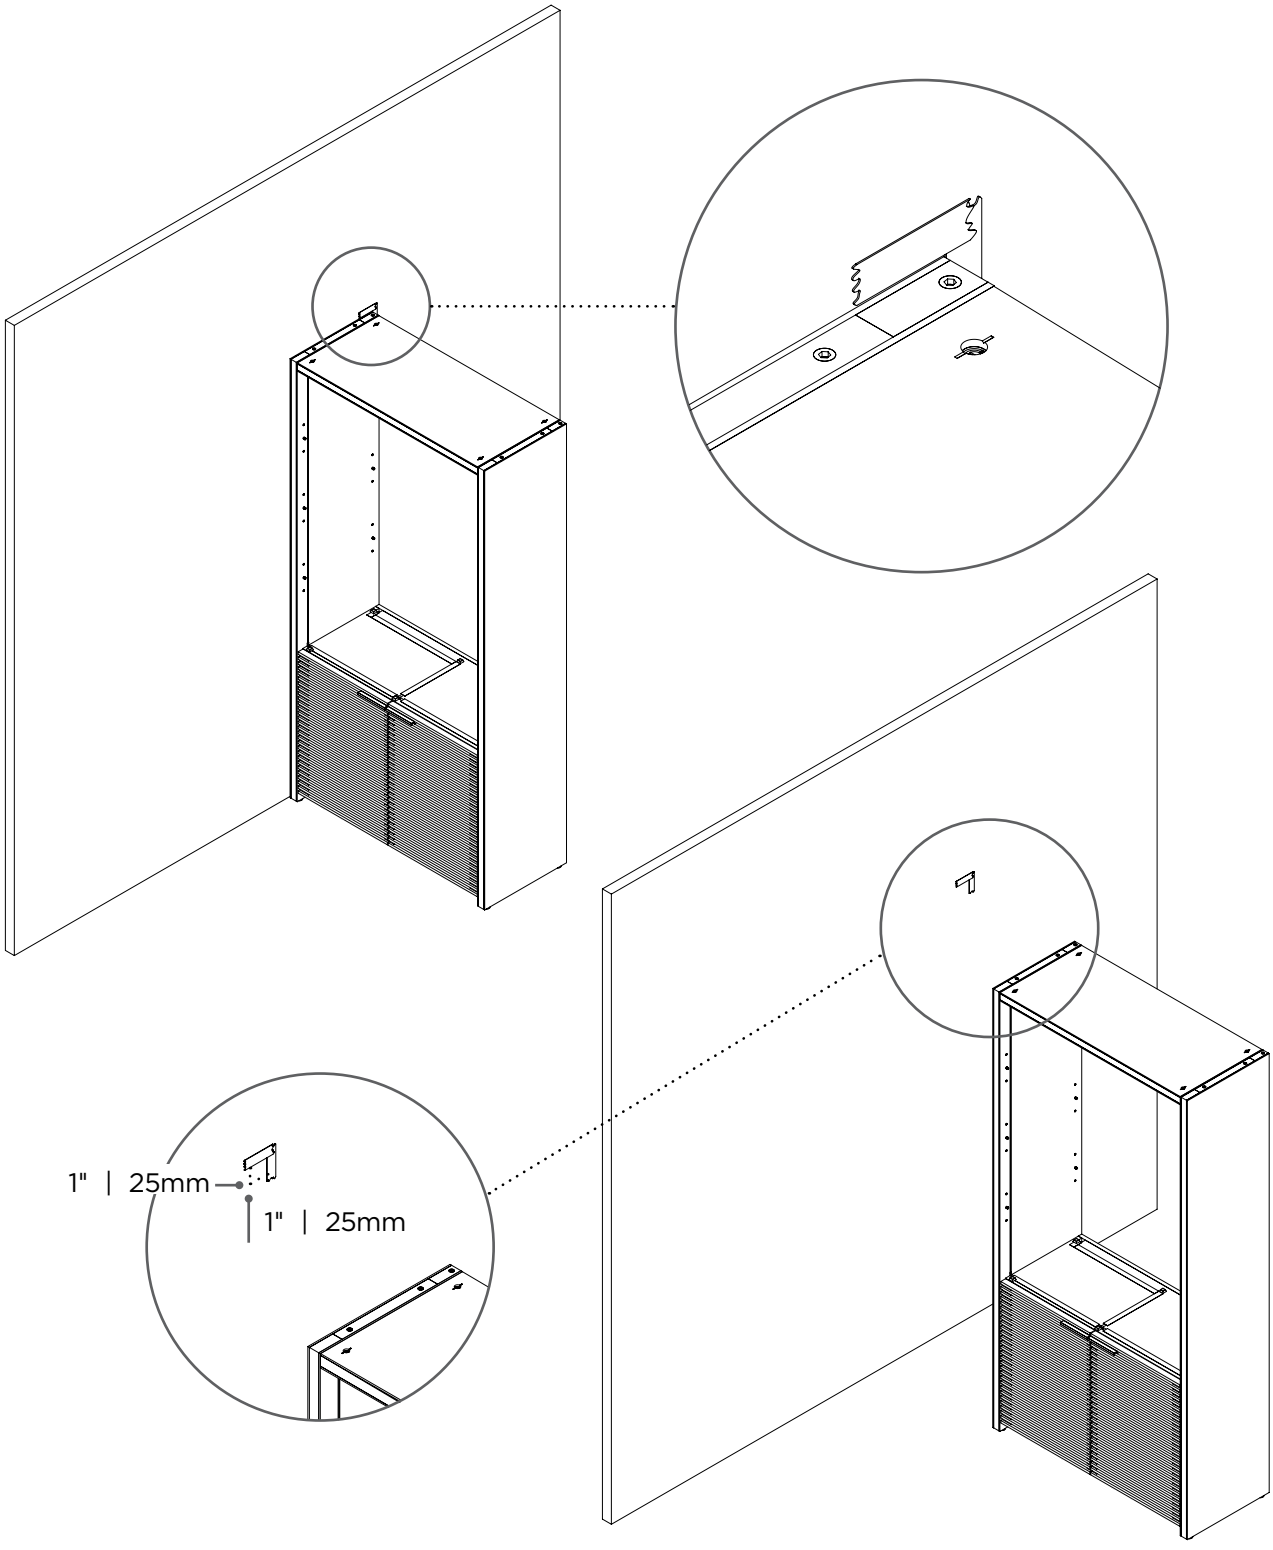

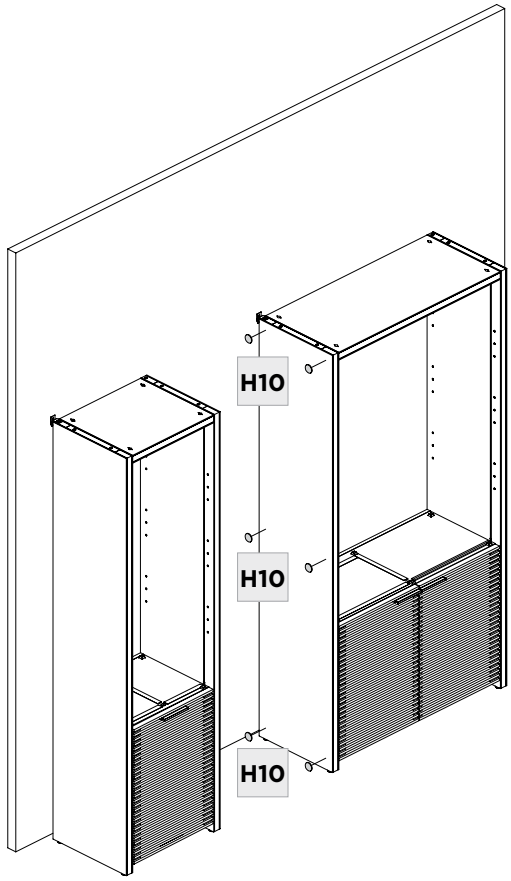


For multi-unit shelving only, please follow the steps listed below.


- Apply **6 Self-Adhering Felt Discs (H10)** to the side of the anchored shelf.
- Position 4 of the discs near each corner and center the remaining 2 as shown.

	FELT DISCS – H10	QTY 6


- With help from another person, carefully position the second shelf next to the anchored shelf.
- Repeat previous steps to anchor the second shelf to the wall.
- Join shelves together with **1 Connection Plate (C6)** and **4 Screws (H9)**.

	SCREW – H9	QTY 4

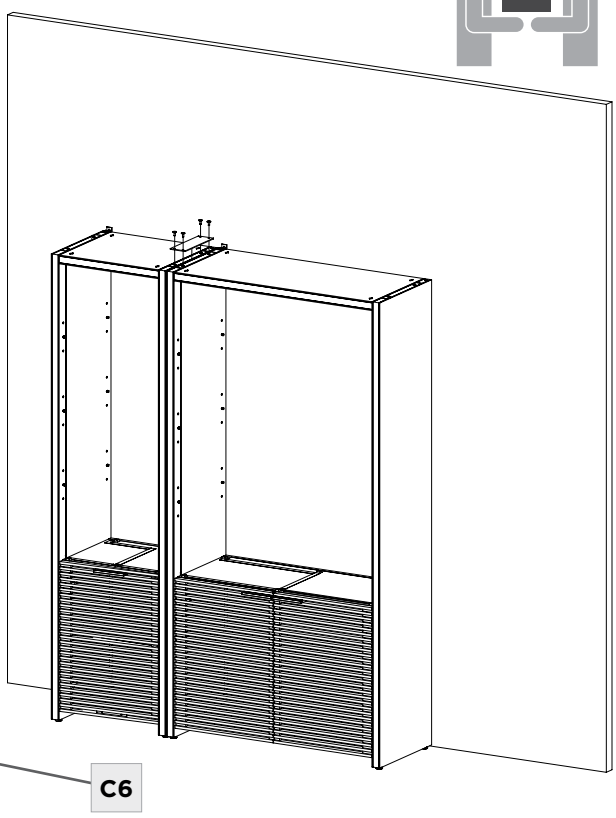


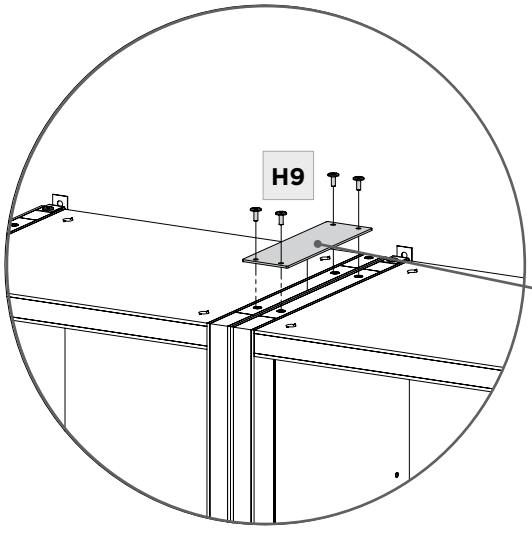

STEP 10. OPTIONAL DOOR POSITION


	PHILLIPS SCREWDRIVER – T2	QTY 1


- The door on the **Corridor Single Cabinet** can be positioned to swing open to the left or right.
- To change sides, follow the steps below.
- Using a **Phillips Screwdriver (T2)** and with the help of another person to hold the door steady, **remove the 2 machine screws from each hinge plate**. Remove 4 screws total.
- Flip the door over and realign the oval holes of the hinge plate with the holes on the opposite side of the cabinet.
- Reattach using the machine screws removed earlier. Install all screws before tightening with **Phillips Screwdriver (T2)**.

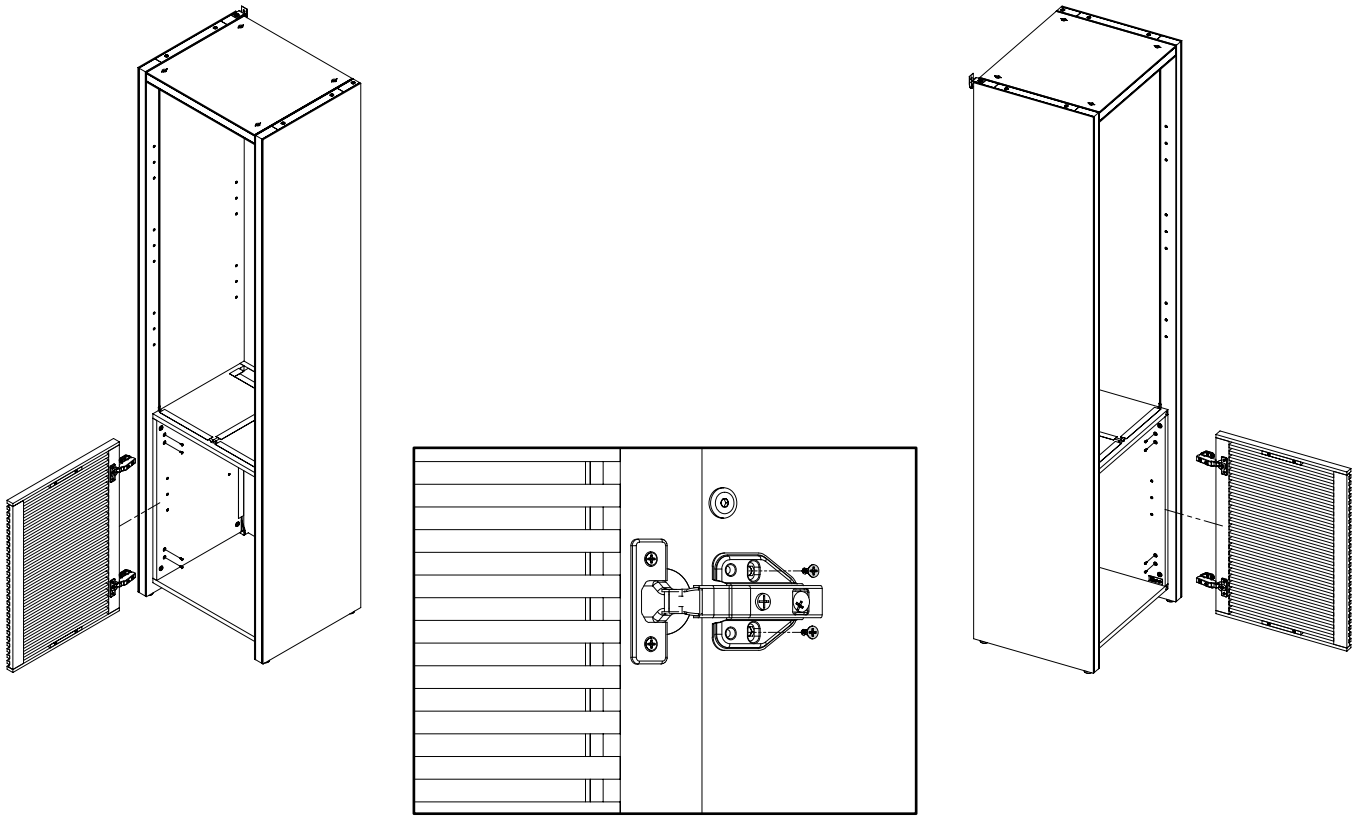

- For the Single Wide Shelf, open the door and attach **1 Door Pull (C7)** and **1 Door Pull Filler Block (C8)** using **2 Screws (H11)**.
- For the Double Wide Shelf, open the doors and attach **2 Door Pulls (C7)** using **4 Screws (H11)**.

	SCREW – H11	QTY 2–4

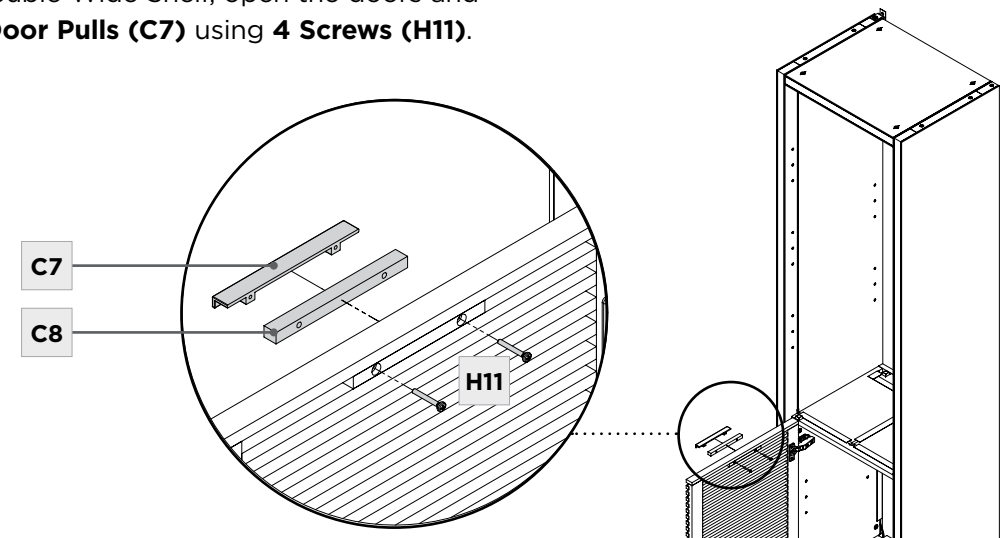


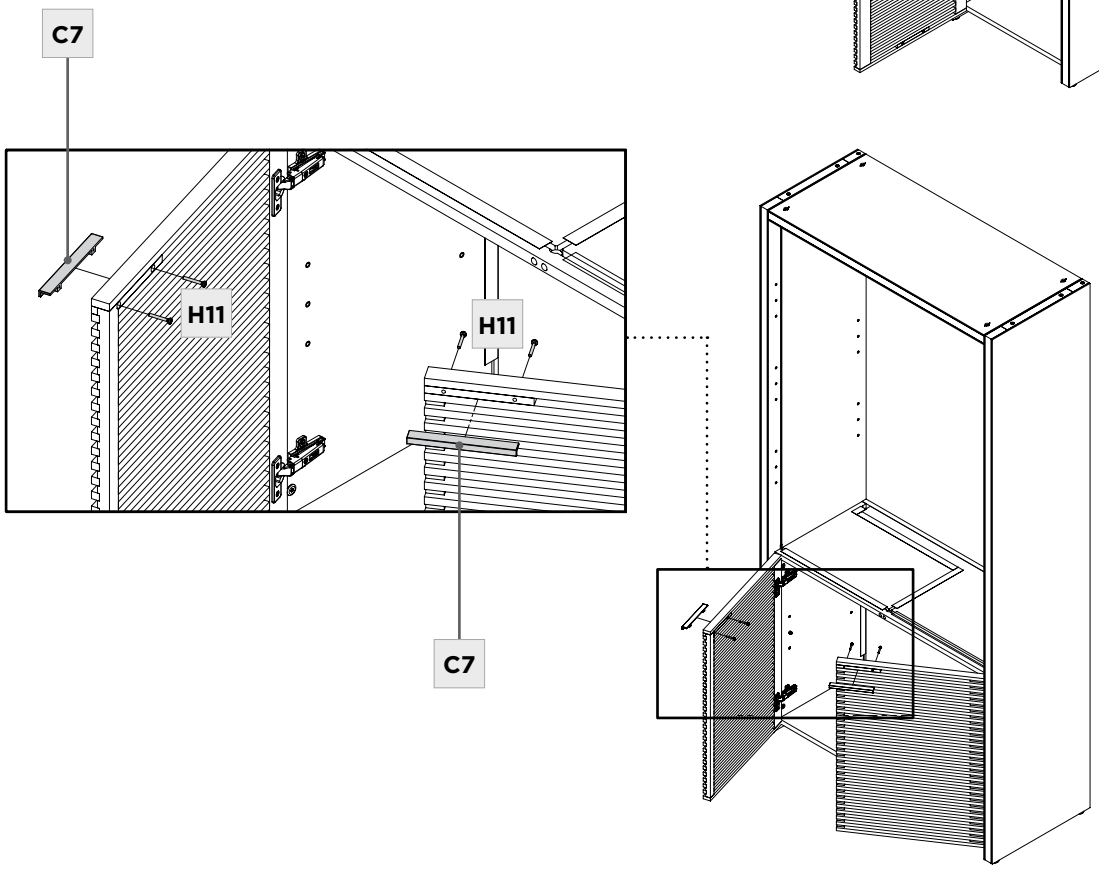



STEP 12. INSTALL RUBBER BUMPERS


- Install the **Rubber Bumpers (H12)** by removing the adhesive film and attaching them as shown in the illustration.

	RUBBER BUMPERS – H12	QTY 4–6

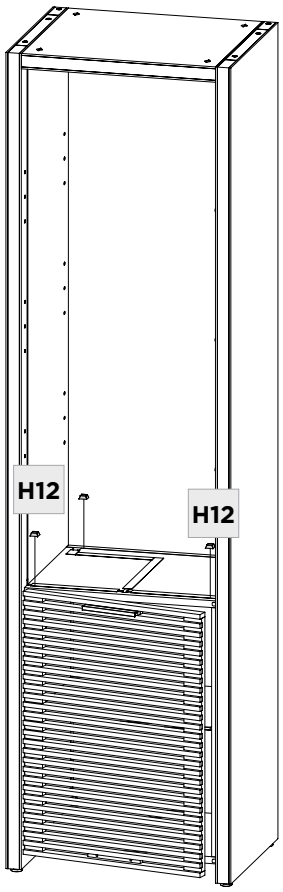


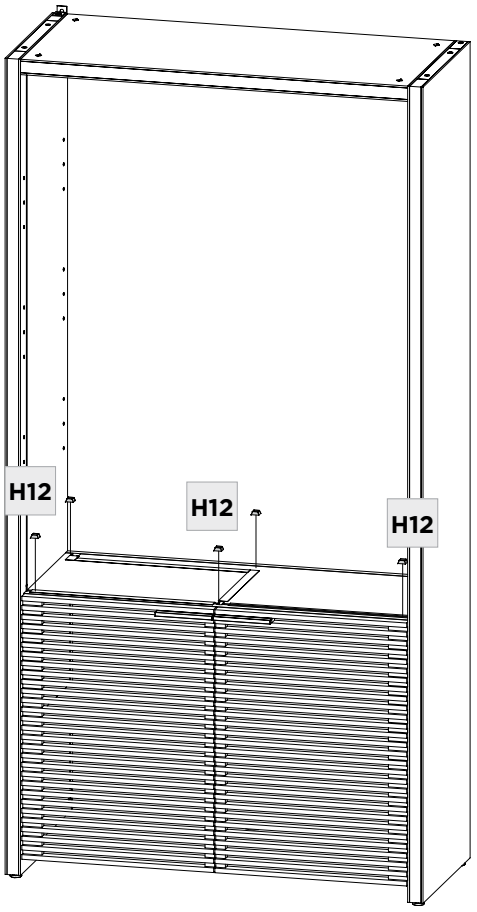

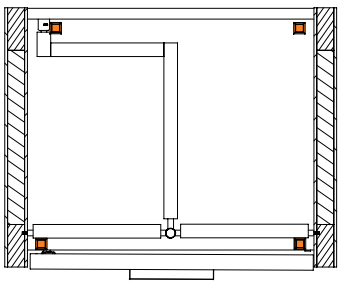


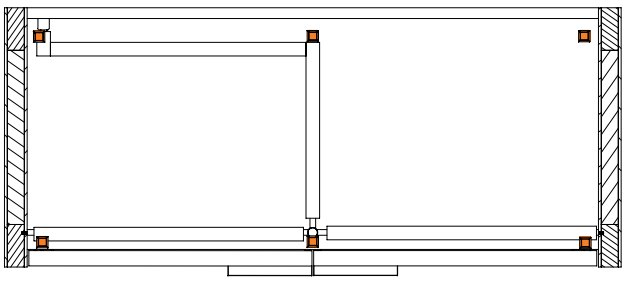

- Attach **16 Shelf Pins (H13)** into the threaded holes using a **Phillips Screwdriver (T2)**. Choose the preferred interior and exterior shelf heights.
- Gently place **3 Black Glass Shelves (C9)** onto the **Shelf Pins (H13)** and **1 Black Glass Shelf (C9)** onto the **Rubber Bumpers (H12)**.
- Tilt and install the **Clear Glass Shelf (C10** inside the cabinet.
- Use **Leveler Wrench (T3)** to level the cabinets.
- Use the **Hook and Loop Straps (H14)** to bundle and organize cables.

	PHILLIPS SCREWDRIVER – T2	QTY 1
	LEVELER WRENCH – T3	QTY 1
	SHELF PIN – H13	QTY 16
	HOOK AND LOOP STRAP – H14	QTY 3

PRO TIP: If your top shelf is above eye level, consider inverting it so that the satin-etched side is facing downward, giving the lighting feature a more diffuse surface to reflect upon from most common viewing angles.

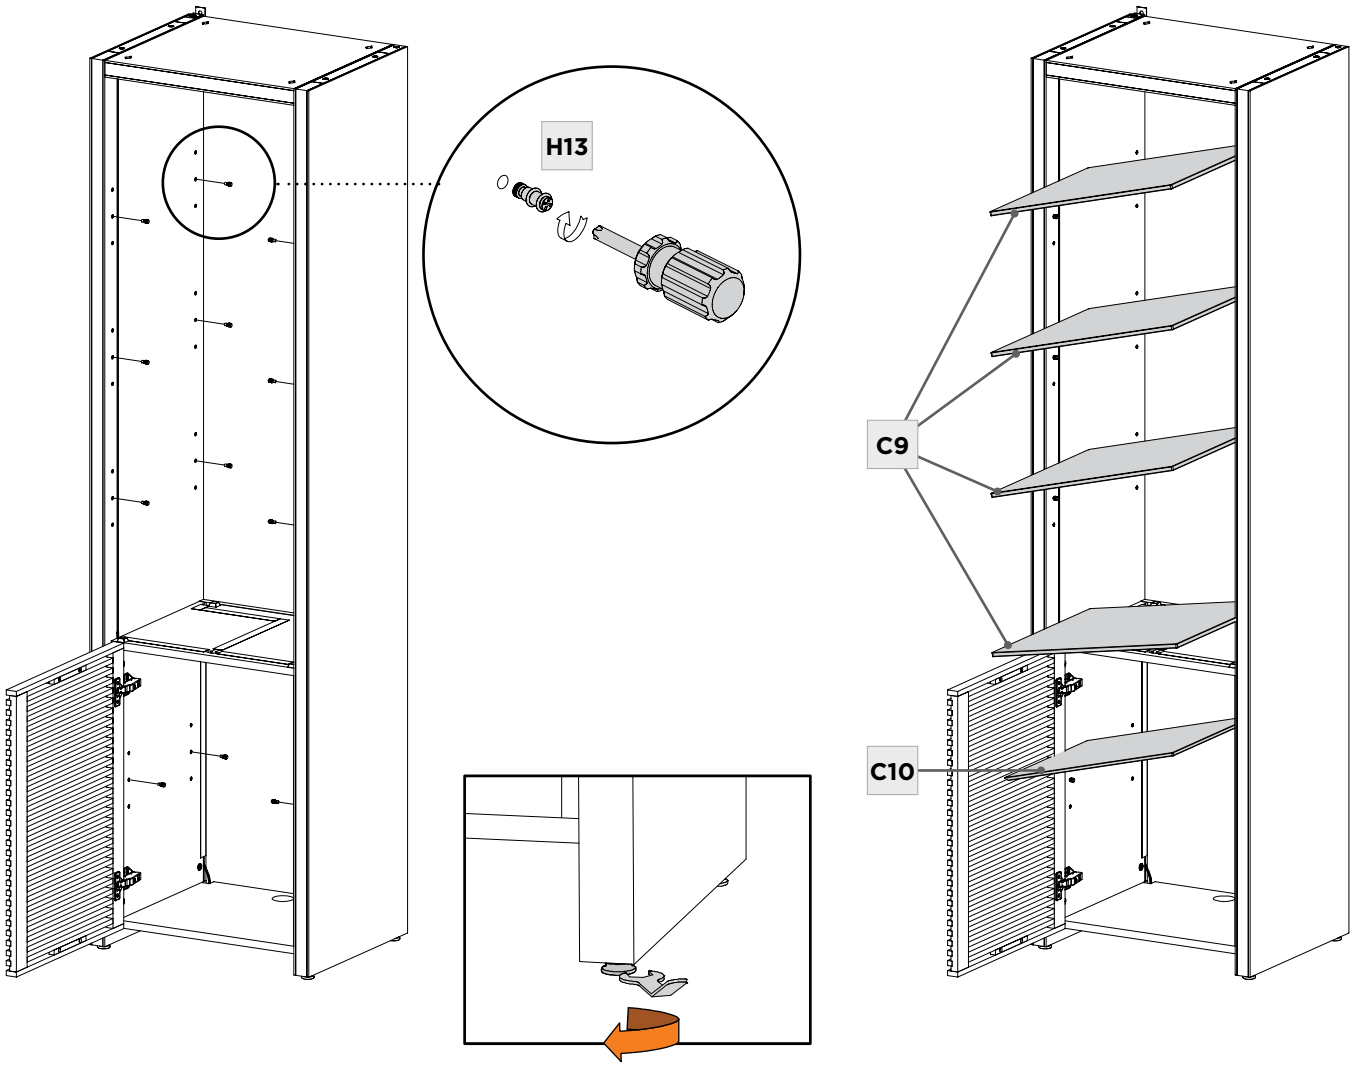

CARE & MAINTENANCE

Your BDI furniture has been constructed with the finest materials, carefully manufactured, and designed to last a lifetime. Regular furniture care will prolong your enjoyment and keep it looking its best. Here are some general tips for taking care of BDI furniture. Your surfaces may vary.

GLASS

Glass surfaces are maintained using household glass cleaner and a paper towel or cloth.

SATIN-ETCHED GLASS

This uniquely smooth-to-the-touch glass surface can be regularly maintained using household glass cleaner and a paper towel or cloth.

A 'Magic Eraser' removes minor scratches or scuffs not eliminated using a paper towel or cloth. 'Magic Eraser' is a melamine foam product available at any grocery store or home improvement center. Dampen the entire glass surface and the Magic Eraser, then rub the whole surface in broad, even strokes using moderate pressure. Clean and dry the surface with a paper towel. Check for results and repeat as necessary. Any scratches or scuffing not eliminated by one of the above methods can often be addressed by 'refreshing' the glass. This process should not be required more than once per 6–12 months. See this brief video for the simple method: **www.bdiusa.com/glass**

WOOD

Wood surfaces should be cleaned with a slightly damp (not saturated) cloth or paper towel. Do not use glass cleaner on wood. If moisture remains, dry the surface with another cloth. If needed, a gentle, non-abrasive cleanser may be used, but wipe away all cleaner residue and dry the surface with a cloth.

BDI's wood finishes feature natural hardwood solids and veneers. Wood is a product of nature and—unlike man-made materials that can be manufactured to strict and consistent specifications—has natural imperfections that are part of its appeal and character. Every piece of wood differs from every other, even when coming from the very same tree. As such, grain, texture, and tone variation should be expected from one panel or piece of furniture to the next.

While BDI's stained wood finishes are stable in tone & appearance, all finishes are subject to some degree of discoloration with prolonged exposure to direct sunlight. Please avoid positioning your BDI furniture in any area with ample direct sunlight. To learn more about the features of natural wood, visit **www.bdiusa.com/wood**

METAL, PORCELAIN, SINTERED STONE, & PAINTED SURFACES

Surfaces should be cleaned with a slightly damp (not saturated) cloth or paper towel. If moisture remains, dry the surface with another cloth. If needed, a gentle, non-abrasive cleanser may be used, but be sure to wipe away all cleaner residue and dry the surface with a cloth.

WARRANTY

BDI warrants to the original purchaser that for the below-stated warranty term, BDI will replace any product, part, or component covered by this warranty that fails under normal use as a result of a defect in material or workmanship. The decision to replace a complete product versus the part or component in question will be at BDI's sole discretion.

Residential Use: BDI Furnishings carry warranty coverage for three (3) years from the date of product delivery, as shown on your sales receipt/documentation. Select chairs carry coverage for five (5) years from the date of product delivery.


Commercial Use: BDI Furnishings carry warranty coverage for one (1) year from the date of product delivery, as shown on your sales receipt/documentation. Select chairs carry coverage for five (5) years from the date of the product delivery, based on an 8-hour daily use pattern.

BDI reserves the right to refine or update its warranty from time to time. See the complete and latest warranty document at **www.bdiusa.com/warranty**.

PRODUCT REGISTRATION

Registering your new BDI product allows us to send you important product updates, service information, and helpful hints related to your BDI products.

Register today, and you will be **entered to win a free BINK table** from BDI: **www.bdiusa.com/register**

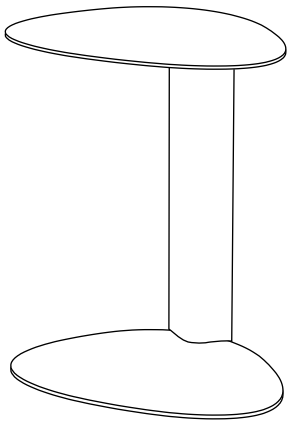

BDIUSA.COM

These distinctive product configurations are protected by US and international patents, trade dress, and/or copyright laws. Corridor & BDI are trademarks of Becker Designed, Inc.
All rights reserved. ©2026, BDI | V.11.03.2026