




LINEA™ 580001/3, 580002/4

SHELVING

Formerly 5801(A)/5802(A)

INSTRUCTION MANUAL

LET'S GET STARTED.

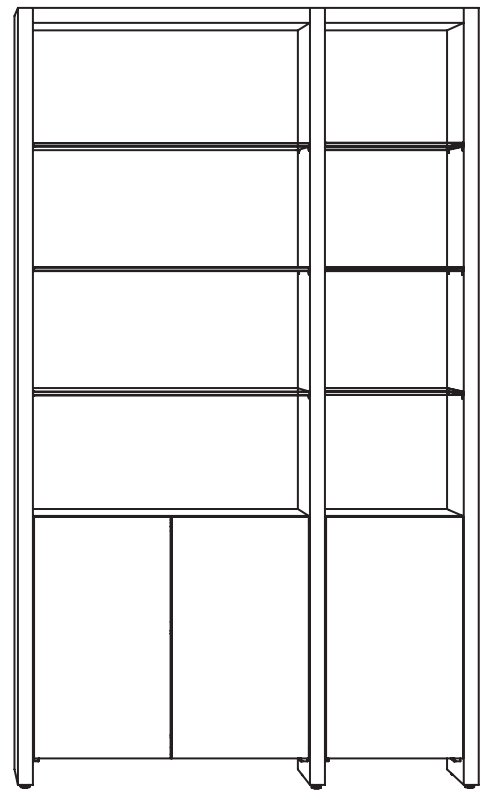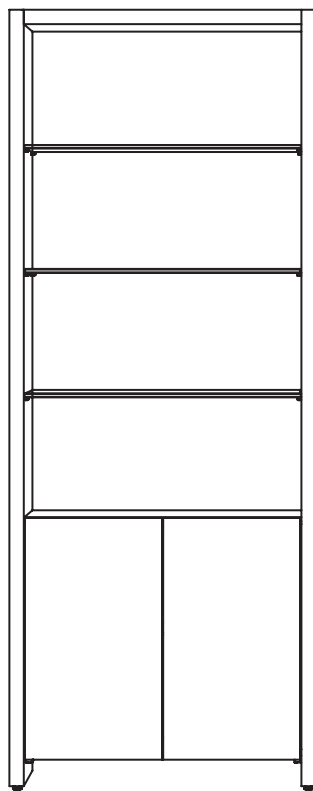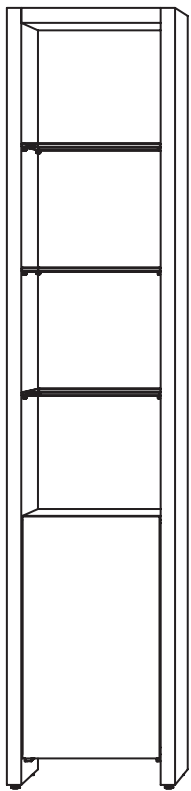

DESIGN MATTHEW WEATHERLY

BDi

BDIUSA.COM



Congratulations on purchasing your Linea Shelving from BDI. Your shelving has been designed to provide a lifetime of enjoyment. This manual will provide you with assembly instructions and other helpful information to ensure that you get the most out of your shelving. Please save it for future reference.

Your Linea shelving has been engineered for simple assembly. Please follow these directions carefully to prevent any damage.

Should you need further assistance, contact BDI at customerservice@bdiusa.com.

ENJOY!

MODEL NUMBER UPDATE

Note that Linea Shelving model numbers have been updated.

Single Shelf 5801 is now **580001**

Single Shelf Extension 5801A is now **580003**

Double Shelf 5802 is now **580002**


Double Shelf Extension 5802A is now **580004**

HARDWARE AND COMPONENTS


Unpack and identify the parts listed below. Note that some components are shipped inside the cabinet. The assembly workspace should be a non-marring surface such as carpet. For missing hardware pieces, please contact BDI Customer Service at customerservice@bdiusa.com.

Do not use power tools for the assembly of this product.

For all other concerns, please contact your BDI retailer.




PART #	T1
DESCRIPTION	Phillips Screwdriver
QUANTITY	1




PART #	T2
DESCRIPTION	Hex Driver
QUANTITY	1



PART #	T3
DESCRIPTION	Leveler Wrench
QUANTITY	1

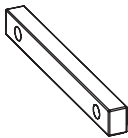

PART #	C3
DESCRIPTION	Cabinet Block
QUANTITY	2 per unit



PART #	H1
DESCRIPTION	M6 x 30mm Screw
QUANTITY	12 per unit




PART #	H2
DESCRIPTION	Cam Bolt
QUANTITY	4 per unit



PART #	H3
DESCRIPTION	Wooden Dowel
QUANTITY	8 per unit




PART #	H4
DESCRIPTION	Barrel Nut
QUANTITY	4 per unit




PART #	H11
DESCRIPTION	Shelf Pin
QUANTITY	16 per unit

HARDWARE AND COMPONENTS



PART #	C1
DESCRIPTION	End Panel
QUANTITY	2 per Base Unit



PART #	C2
DESCRIPTION	Inner Panel
QUANTITY	1 per extension unit




580001/580003




580002/580004

PART #	C4
DESCRIPTION	Top Panel
QUANTITY	1 per unit


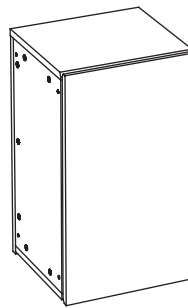


580001/580003


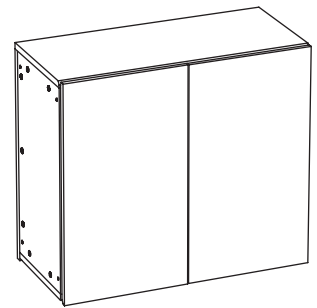


580002/580004

PART #	C5
DESCRIPTION	Cabinet
QUANTITY	1 per unit



PART #	C6
DESCRIPTION	Outer Glass Shelf
QUANTITY	3 per unit

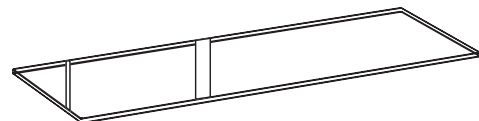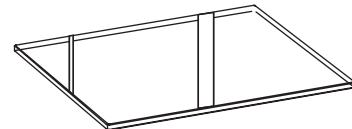

PART #	C7
DESCRIPTION	Inner Glass Shelf
QUANTITY	1 per unit

HARDWARE AND COMPONENTS

Wall Mounting Kit




PART #	H5
DESCRIPTION	Wall Bracket
QUANTITY	2



PART #	H6
DESCRIPTION	Cabinet Bracket
QUANTITY	2




PART #	H7
DESCRIPTION	Fastener Screw
QUANTITY	4



PART #	H8
DESCRIPTION	Sheetrock Anchor
QUANTITY	4



PART #	H9
DESCRIPTION	Plaster/Block Anchor
QUANTITY	4




PART #	H10
DESCRIPTION	Bracket Screw
QUANTITY	2


SINGLE OR MULTIPLE UNITS

Linea can be configured as stand-alone units or multiple combinations of narrow and wide units.

GO TO **PAGE 8**

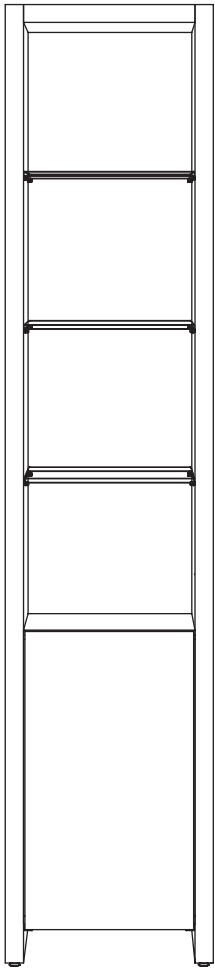


580001
(formerly 5801)

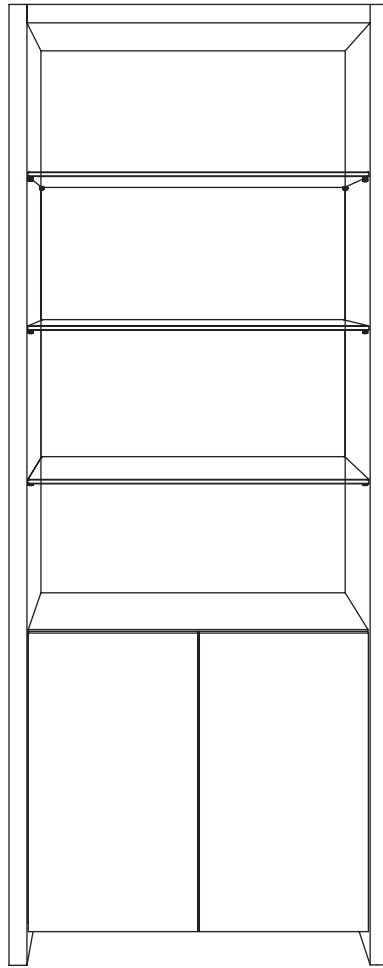




580002
(formerly 5802)


GO TO **PAGE 20**

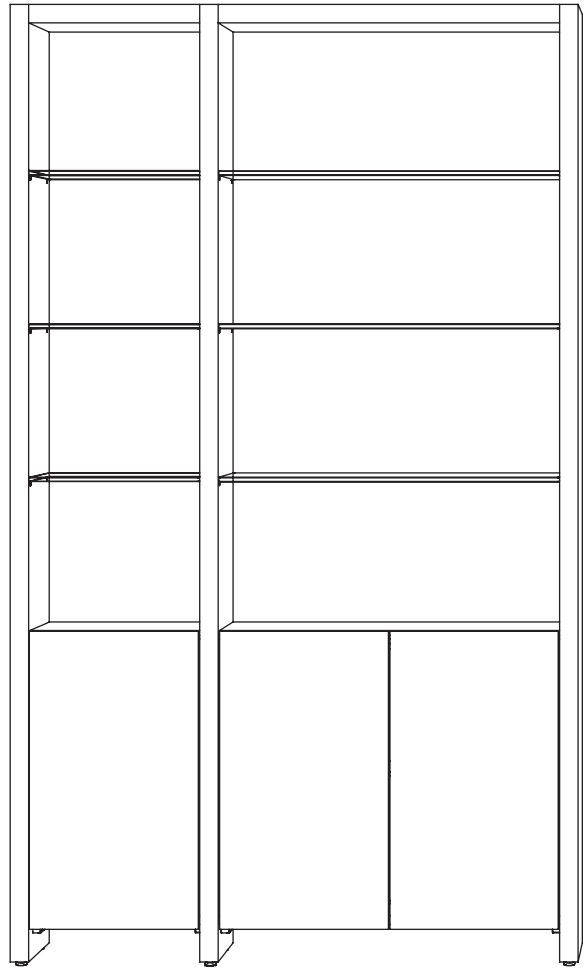

Multi-unit combinations

Attach **1 (C3) Cabinet Block** to each **(C1) End Panel** using **(H1) Screws** and **(T2) Hex Driver**.



	PART/DESCRIPTION	QTY
	T2-HEX DRIVER	1
	H1-SCREW	4
	C3-CABINET BLOCK	2


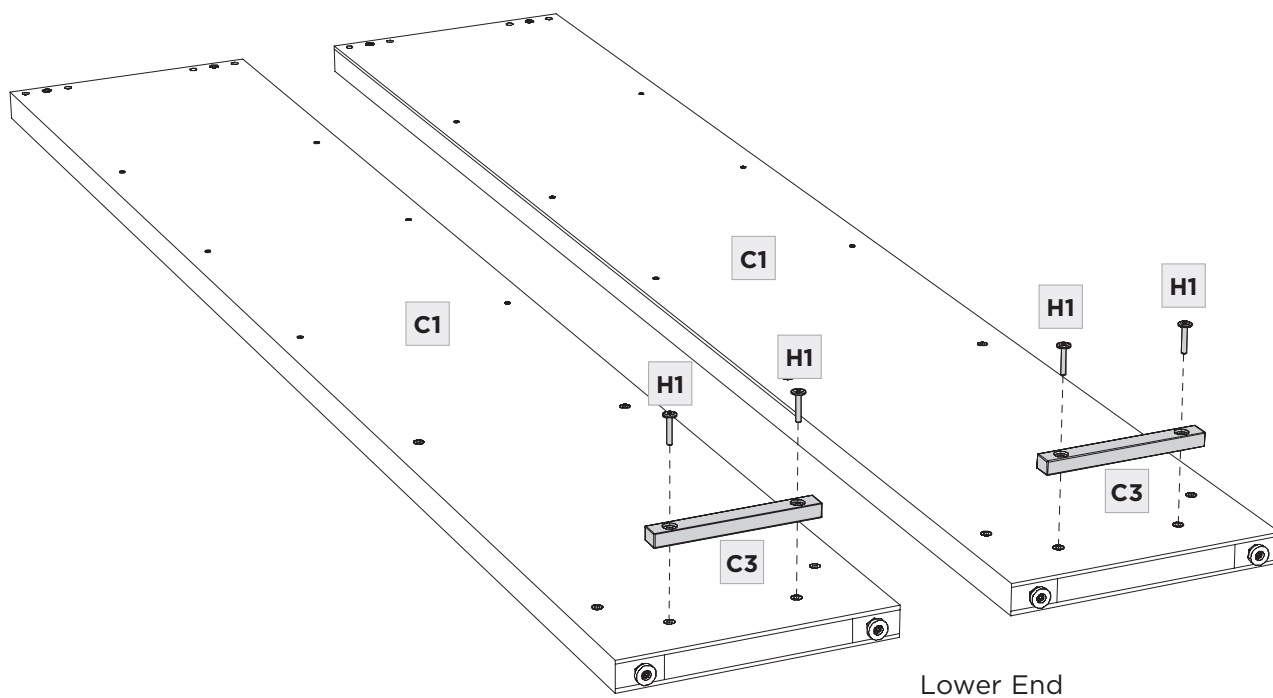


STEP 2. INSTALL CAMS AND DOWELS

ASSEMBLY



Find the sets of 3 holes near the top edge of the **(C1) Side Panels**. Screw **(H2) Cam Bolts** into the threaded holes using **(T1) Phillips Screwdriver** and push **(H3) Wooden Dowels** into the outer holes.

	PART/DESCRIPTION	QTY
	T1-PHILLIPS SCREWDRIVER	1
	H2-CAM BOLT	4
	H3-WOODEN DOWEL	8

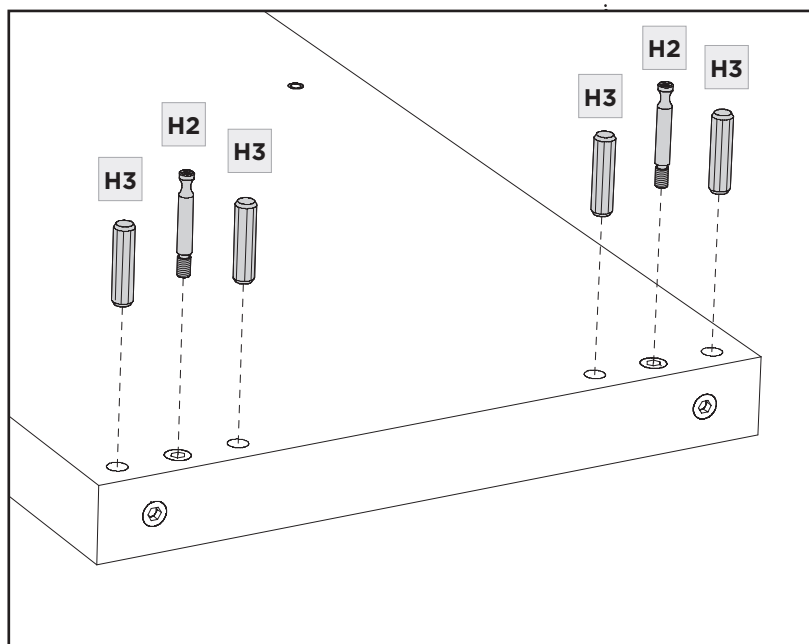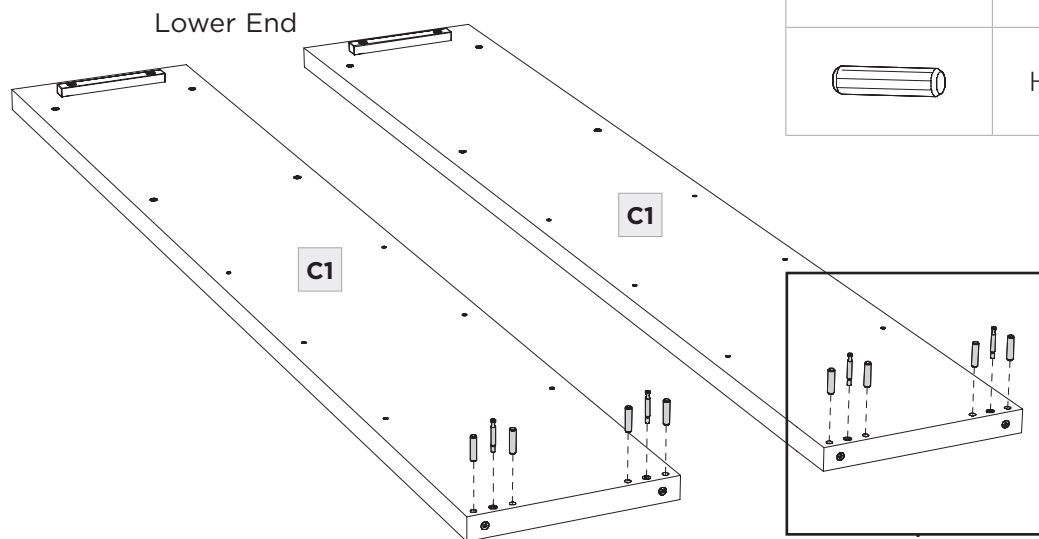

Insert **4 (H4) Barrel Nuts** into the holes on the top of the **(C4) Top Panel**, making sure that the hole on the side of the barrel nuts align with the holes on the edges of the panel.

	PART/DESCRIPTION	QTY
	H4-BARREL NUT	4

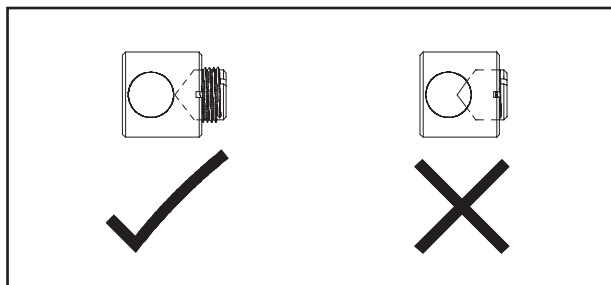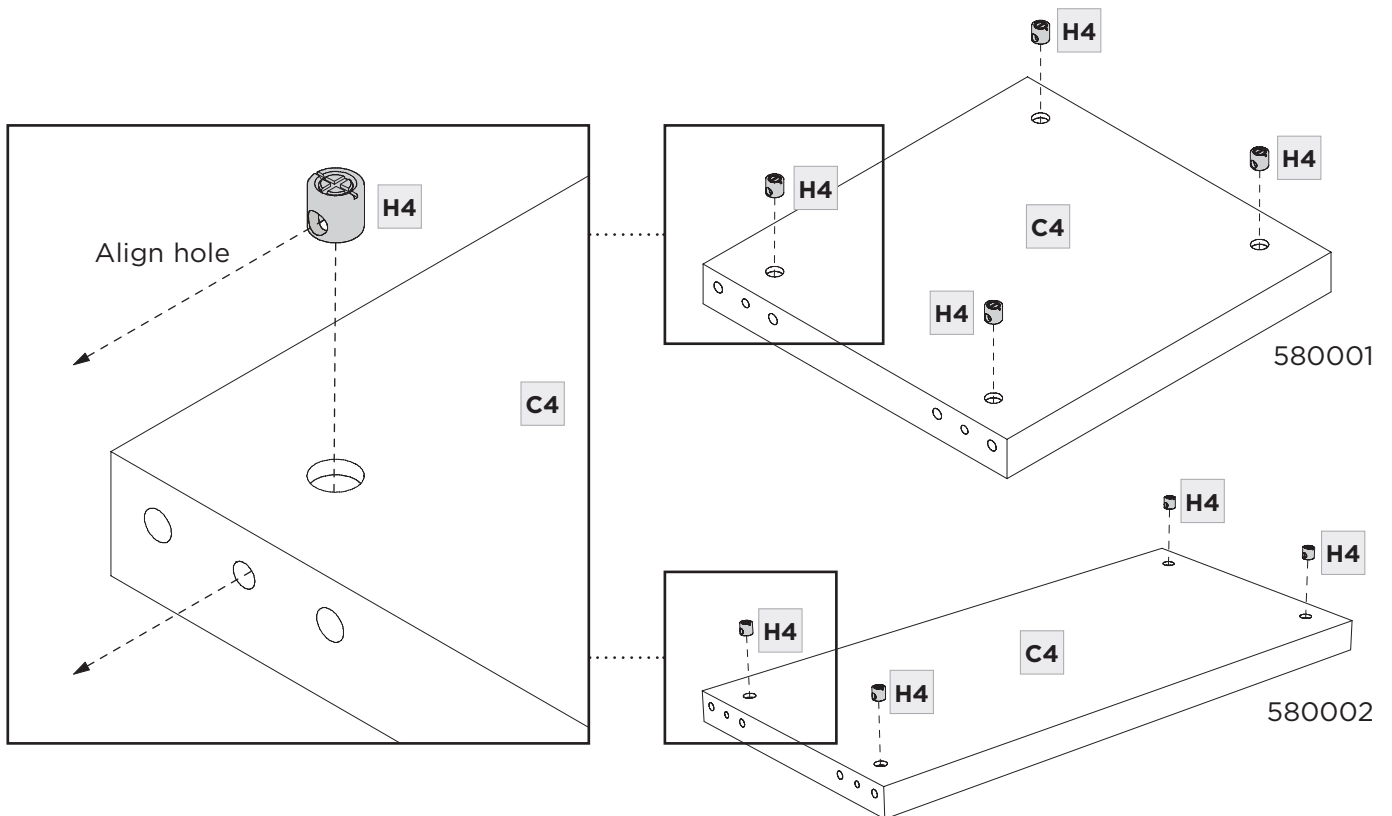

NOTE: Look into the side hole of the barrel nuts and make sure, the set screw is not blocking the hole.


If the hole is blocked, unscrew set screw a few turns until the hole is clear, which will allow the cam bolts to enter.


STEP 4. ATTACH TOP PANEL TO SIDE PANEL

ASSEMBLY


Attach **(C4) Top Panel** to **(C1) End Panel** by sliding dowels and cam bolts into the holes on the edge of **(C4) Top Panel**. If cams don't go into barrel nuts, check to make sure the barrel nut is aligned with the side hole and make sure the set screw is loosened before insertion of the cam bolts.


Tighten barrel nuts using **(T1) Phillips Screwdriver** with a **clockwise** turn. Position **(C5) Cabinet** as shown. Make sure rectangular opening on back of cabinet is facing upward towards **(C4) Top Panel**. Make sure the door is facing upward.

	PART/DESCRIPTION	QTY
	T1-PHILLIPS SCREWDRIVER	1

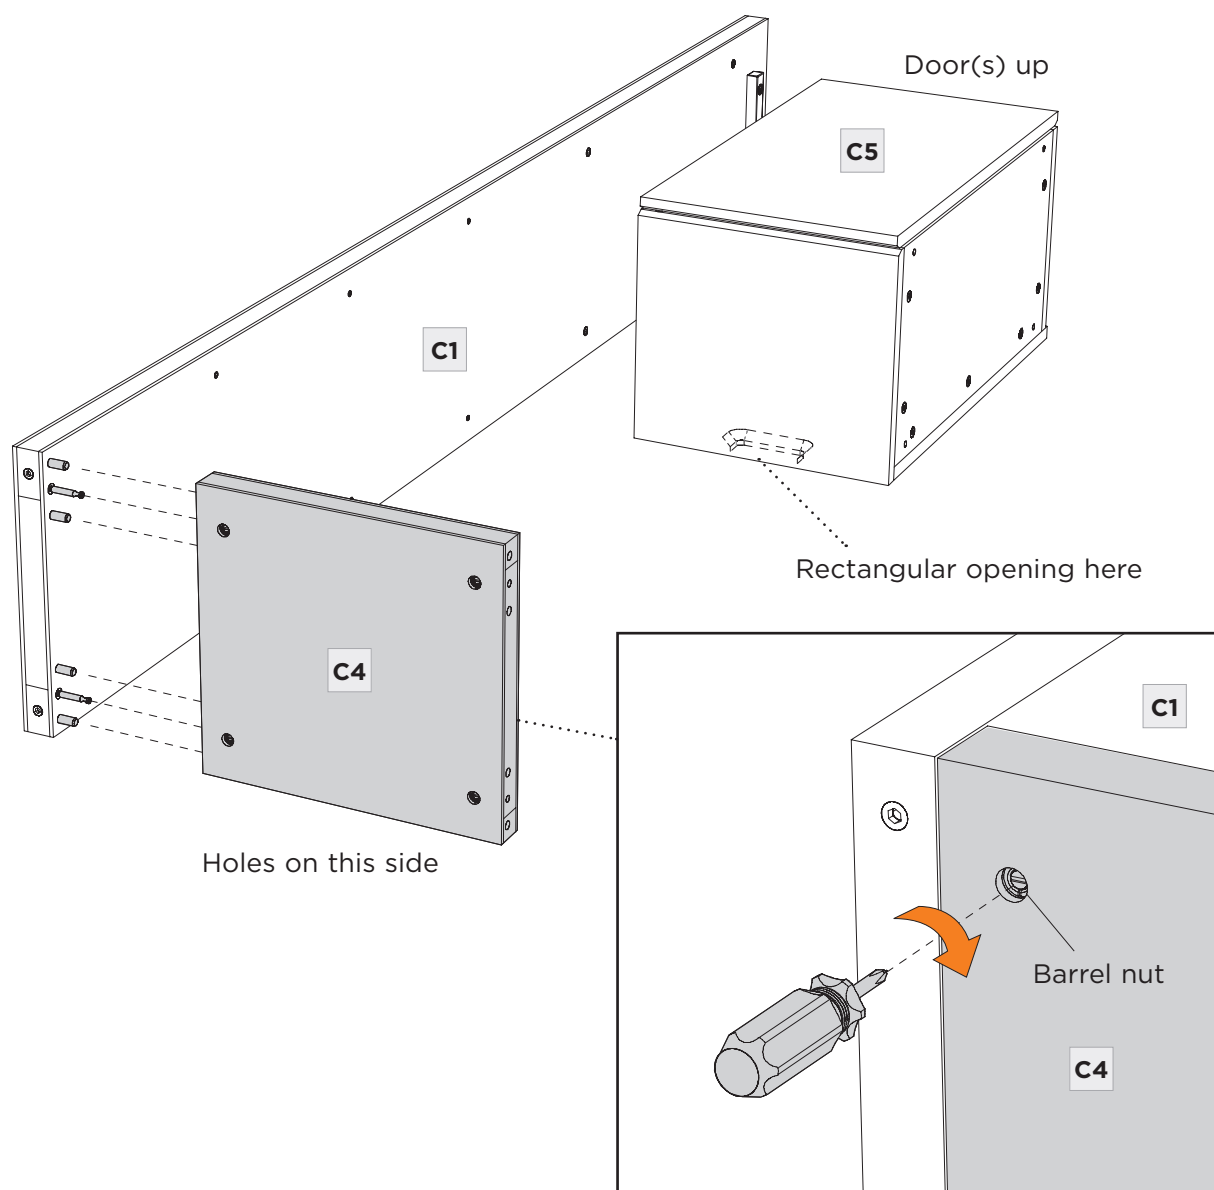

Attach the next **(C1) End Panel** to the other side of **(C4) Top Panel** by sliding dowels and cams into the holes on the side of **(C4) Top Panel**. Tighten barrel nuts using **(T1) Phillips Screwdriver**.



	PART/DESCRIPTION	QTY
	T1-PHILLIPS SCREWDRIVER	1


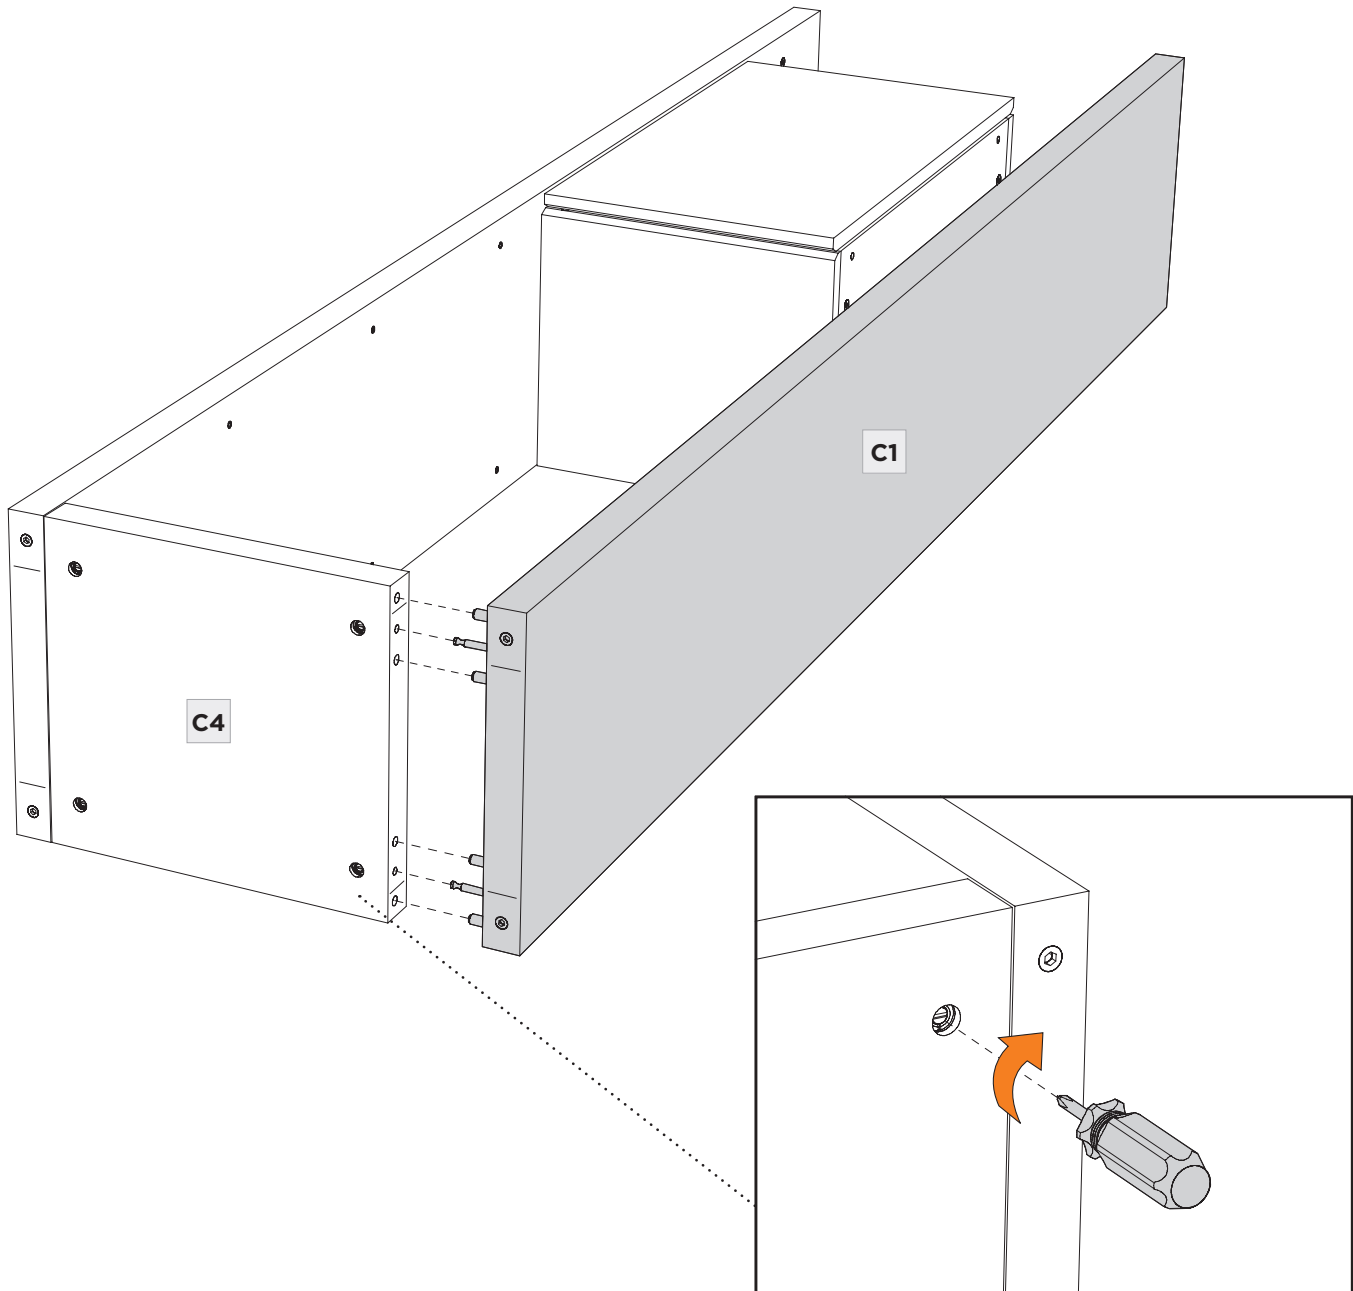


STEP 6. ATTACH CABINET TO END PANELS

ASSEMBLY


Making sure the bottom of the cabinet is against the **(C3) Cabinet Blocks**, carefully open the cabinet door and attach the **(C5) Cabinet** to **(C1) End Panels** using **8 (H1) Screws** and tighten with **(T2) Hex Driver**.

	PART/DESCRIPTION	QTY
	T2-HEX DRIVER	1
	H1-SCREW	8

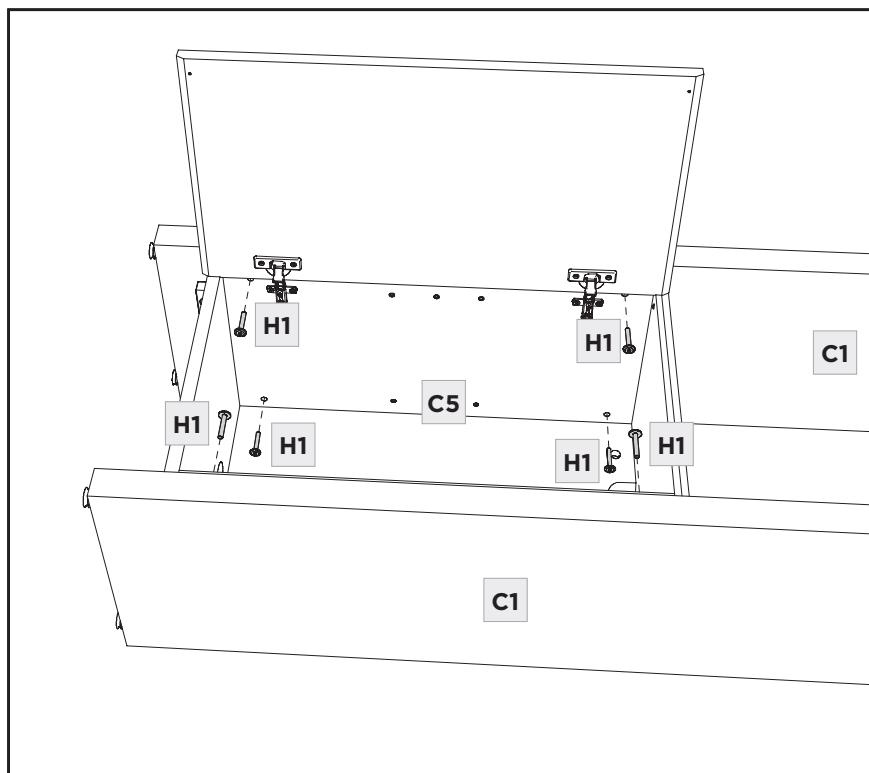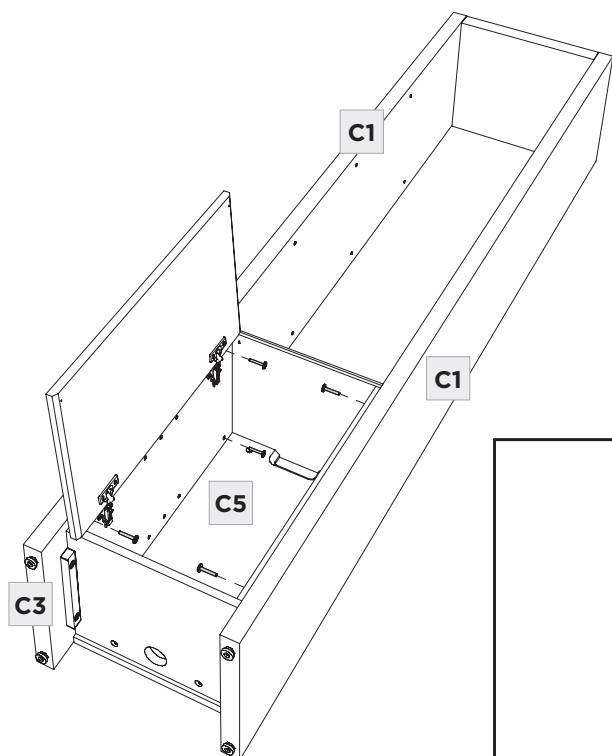





With help from another person, carefully stand the cabinet onto its base. Carefully walk it into position. Attaching your Linea shelving to the wall **is required** to ensure your safety. Use painter's tape to mark both upper back corners of the unit, as shown.

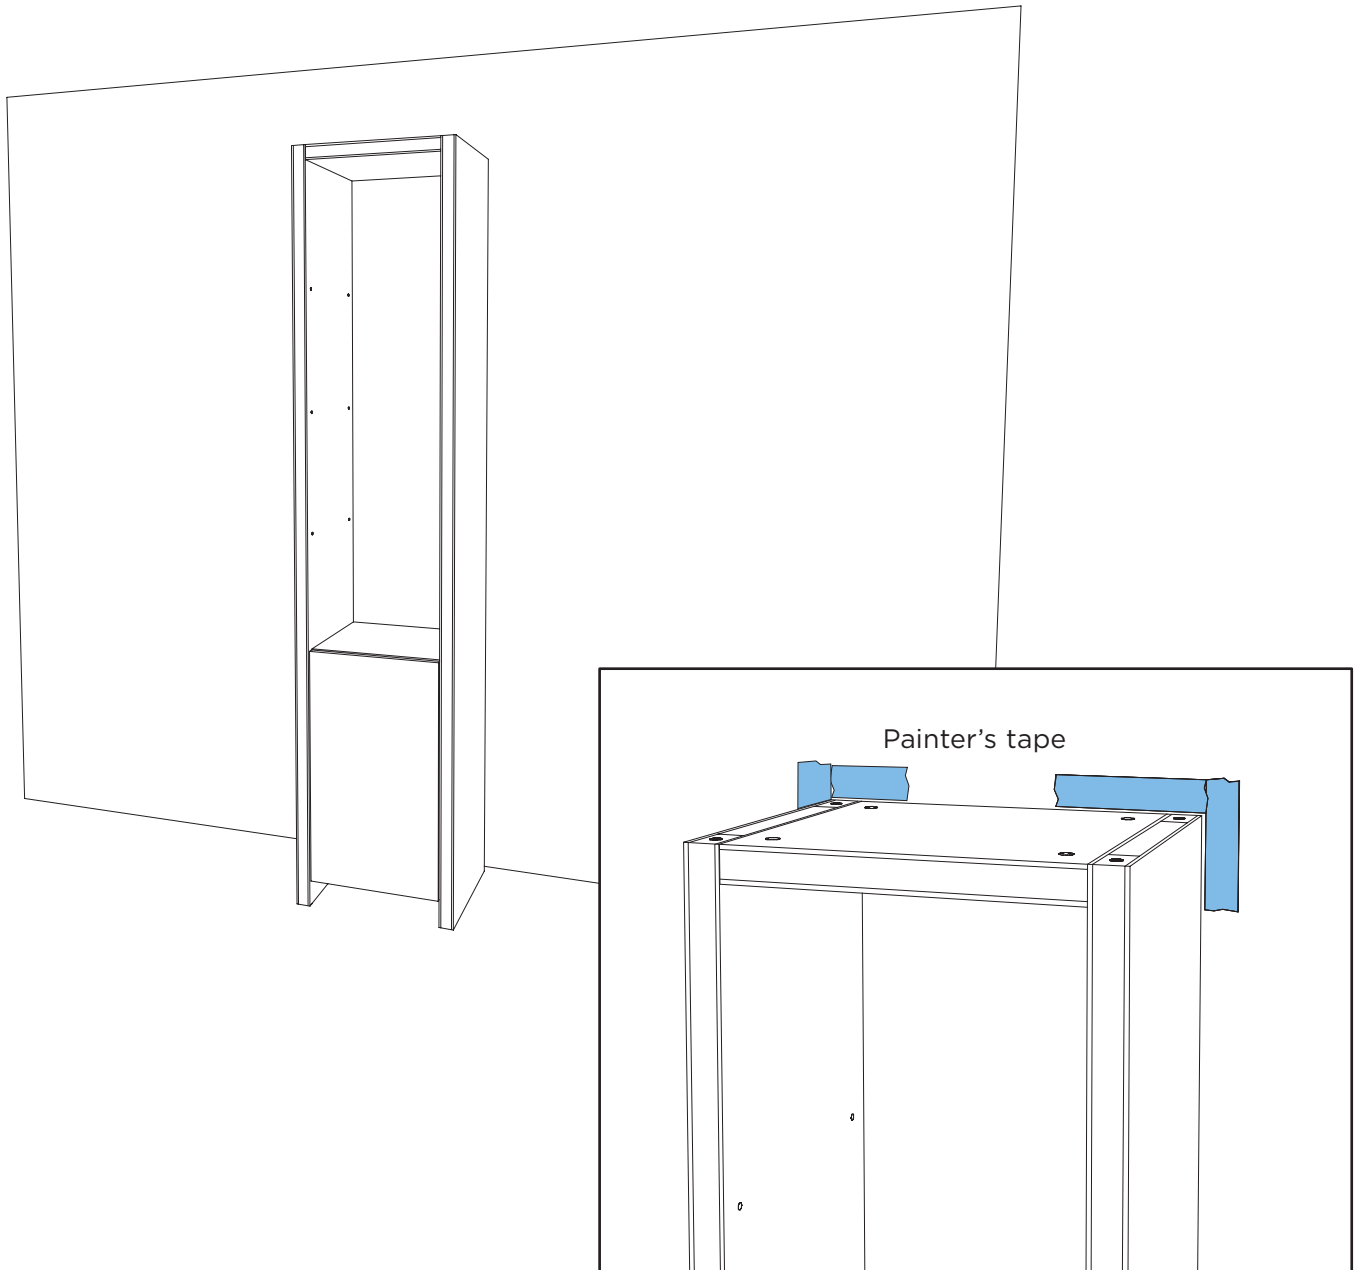


Move the cabinet to the side. Place **(H5) Wall Brackets** on the wall (flush with top and 1/4" (7mm) away from the edge) and mark hole locations on the wall using a pencil. Drill holes at these locations for wall inserts.

Choose **(H8)** or **(H9) Wall Anchors** appropriate for your wall type.

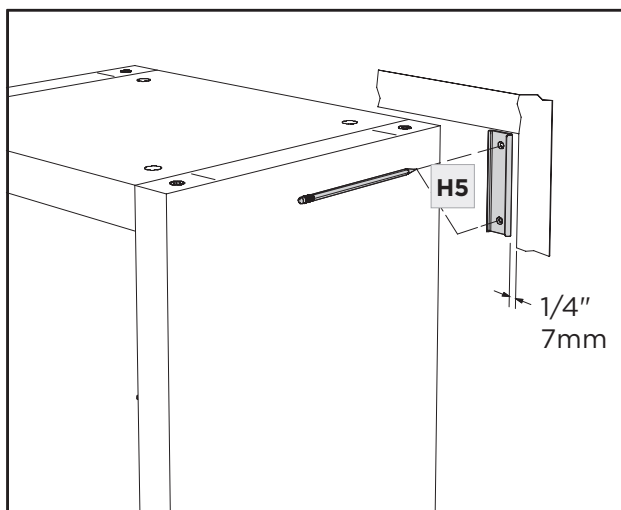


	PART/DESCRIPTION	QTY
	H5-WALL BRACKET	2
	H7-SCREW	4
	H8-ANCHOR	4
	H9-ANCHOR	4

Choose wall anchors based on your walls:


- H8**  Sheetrock Anchor
- H9**  Plaster/Brick/Block Anchor


Insert **(H8)** or **(H9) Wall Anchors** into the holes and attach **(H5) Wall Brackets** to the wall using **(H7) Anchor Screws**.

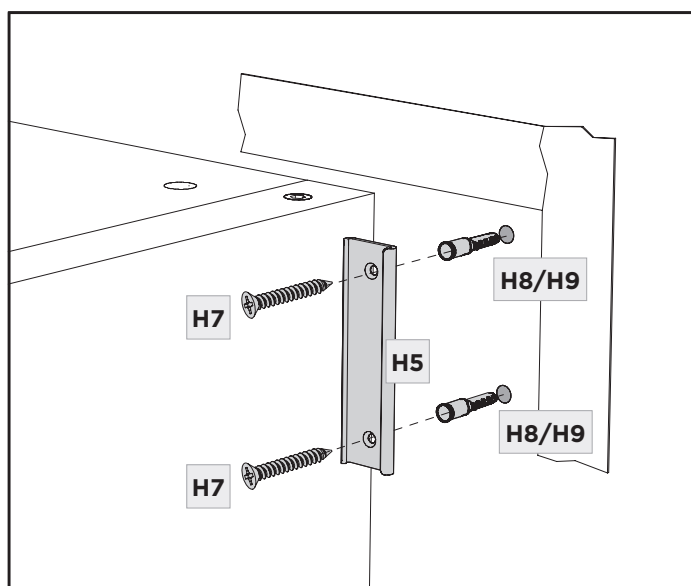



Re-position your Linea cabinet in front of the **(H5) Wall Brackets**. Stand on a step ladder and slide **(H6) Cabinet Brackets** down into the slot in **(H5) Wall Brackets** and tighten using **(H10) Bracket Screws** and **(T2) Hex Driver**.

	PART/DESCRIPTION	QTY
	T2-HEX DRIVER	1
	H6-CABINET BRACKET	2
	H10-BRACKET SCREW	2

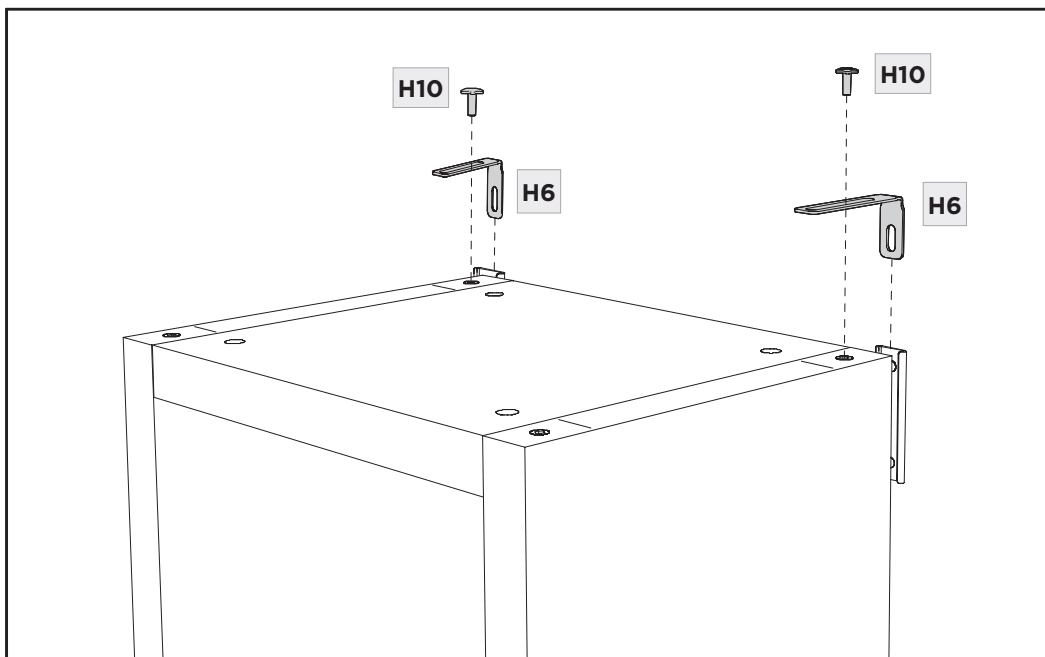



STEP 10. INSTALL SHELVES AND LEVEL

ASSEMBLY

Attach **16 (H11) Shelf Pins** into the threaded holes using a **(T1) Phillips Screwdriver**—choose preferred interior shelf height. Install **(C6) Outer Glass Shelves** on the shelf pins, tilting the glass slightly to avoid hitting side panels. Tilt and install **(C7) Inner Glass Shelf** inside the cabinet.


Use **(T3) Leveler Wrench** to level the cabinets.



	PART/DESCRIPTION	QTY
	T1-PHILLIPS SCREWDRIVER	1
	T3-LEVELER WRENCH	1
	H11-SHELF PIN	16

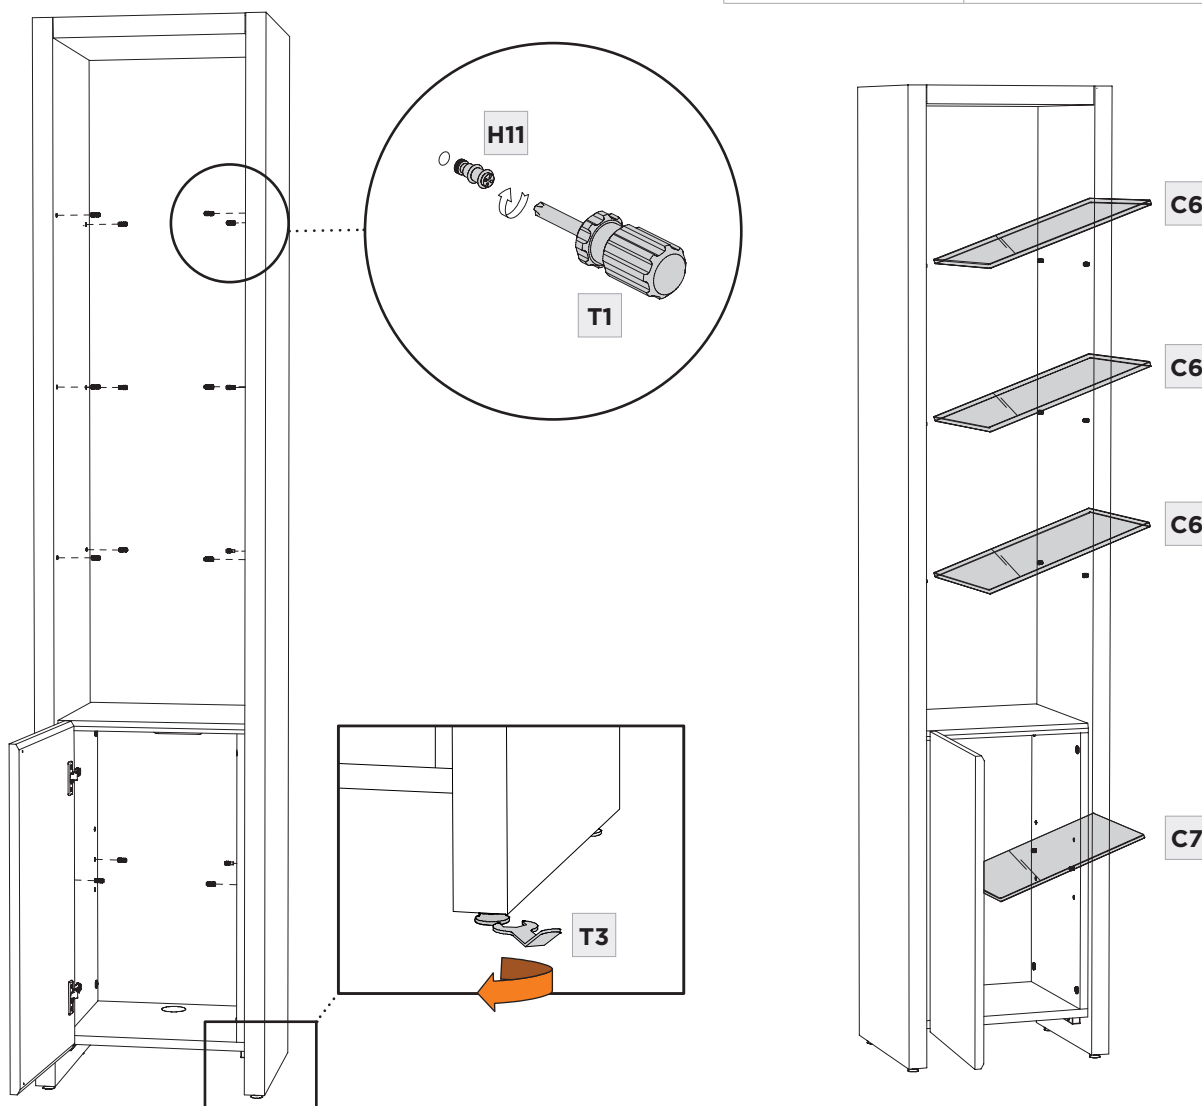

The door on your Linea 580001 Cabinet can be attached to the opposite side (if desired), allowing the door to swing to the right. Remove the 2 screws holding each hinge plate to the side of the cabinet using **(T1) Phillips Screwdriver** and flip the door (top becomes bottom) and attach to the threaded holes on the opposite side using the same screws.


Proceed to **page 30**.

	PART/DESCRIPTION	QTY
	T1-PHILLIPS SCREWDRIVER	1

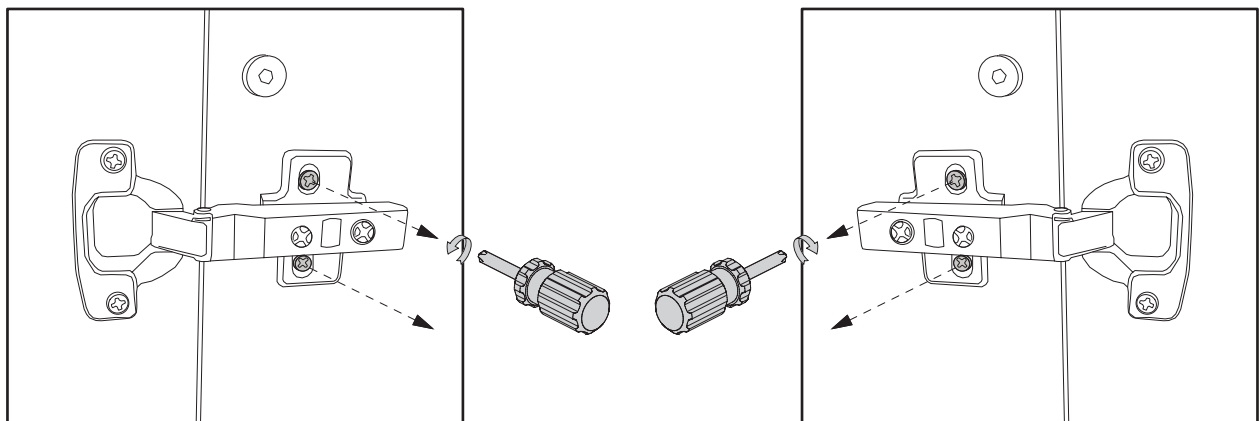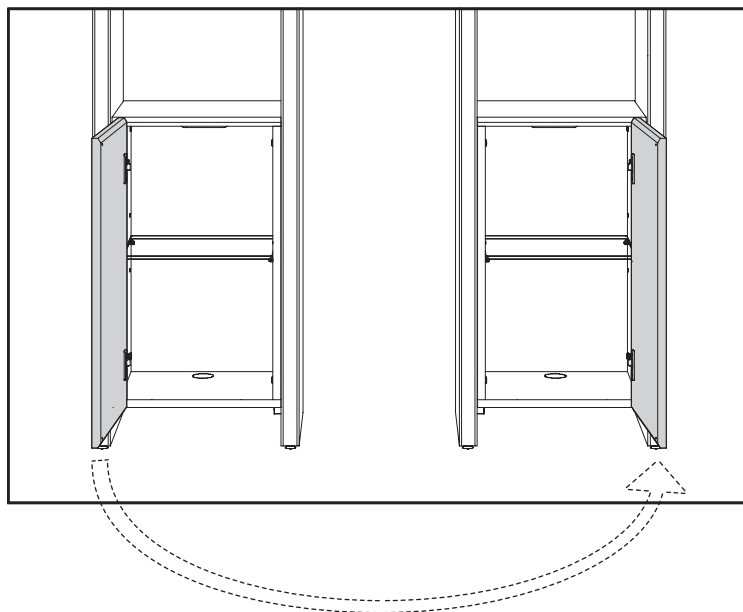


Endless Possibilities


Linea can be configured in endless ways. Below are a few examples. Configurations up to 3 units wide may be assembled on the floor, stood up and carefully positioned. It is also possible to assemble 1 unit, stand it up, and add additional units to it. Every configuration requires 1 base unit and then additional units. Base units come with 2 end panels, and each add on unit always includes 1 inner panel.

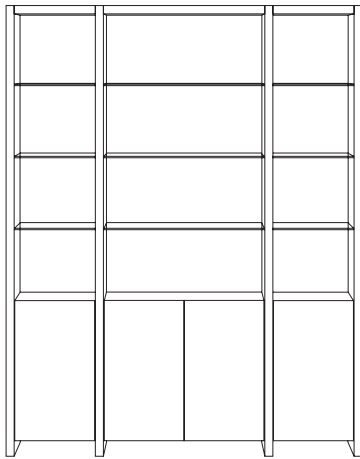


580001 + 580004 + 580003

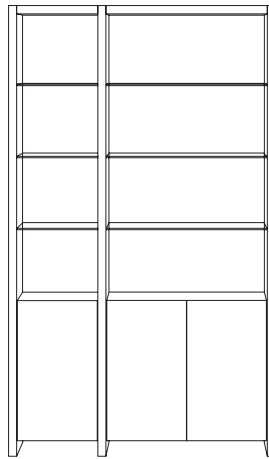


580001 + 580004

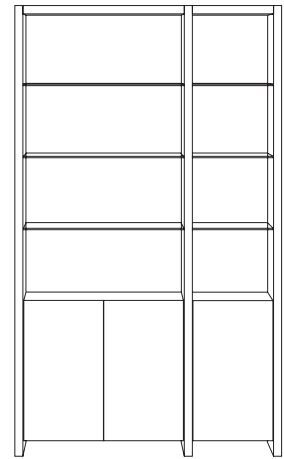

580002 + 580003

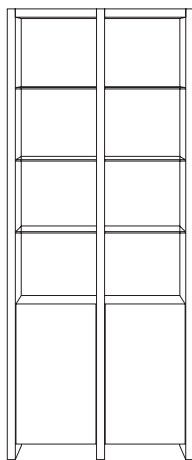

580001 + 580003

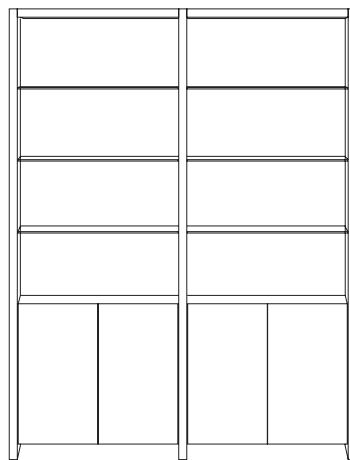


580002 + 580004

HYBRID KIT

Hybrid Assembly

The following pages will show how to assemble a kit of 2 units shown below—which is a 580002 and a 580003. Your configuration may differ, but the assembly method will be the same.



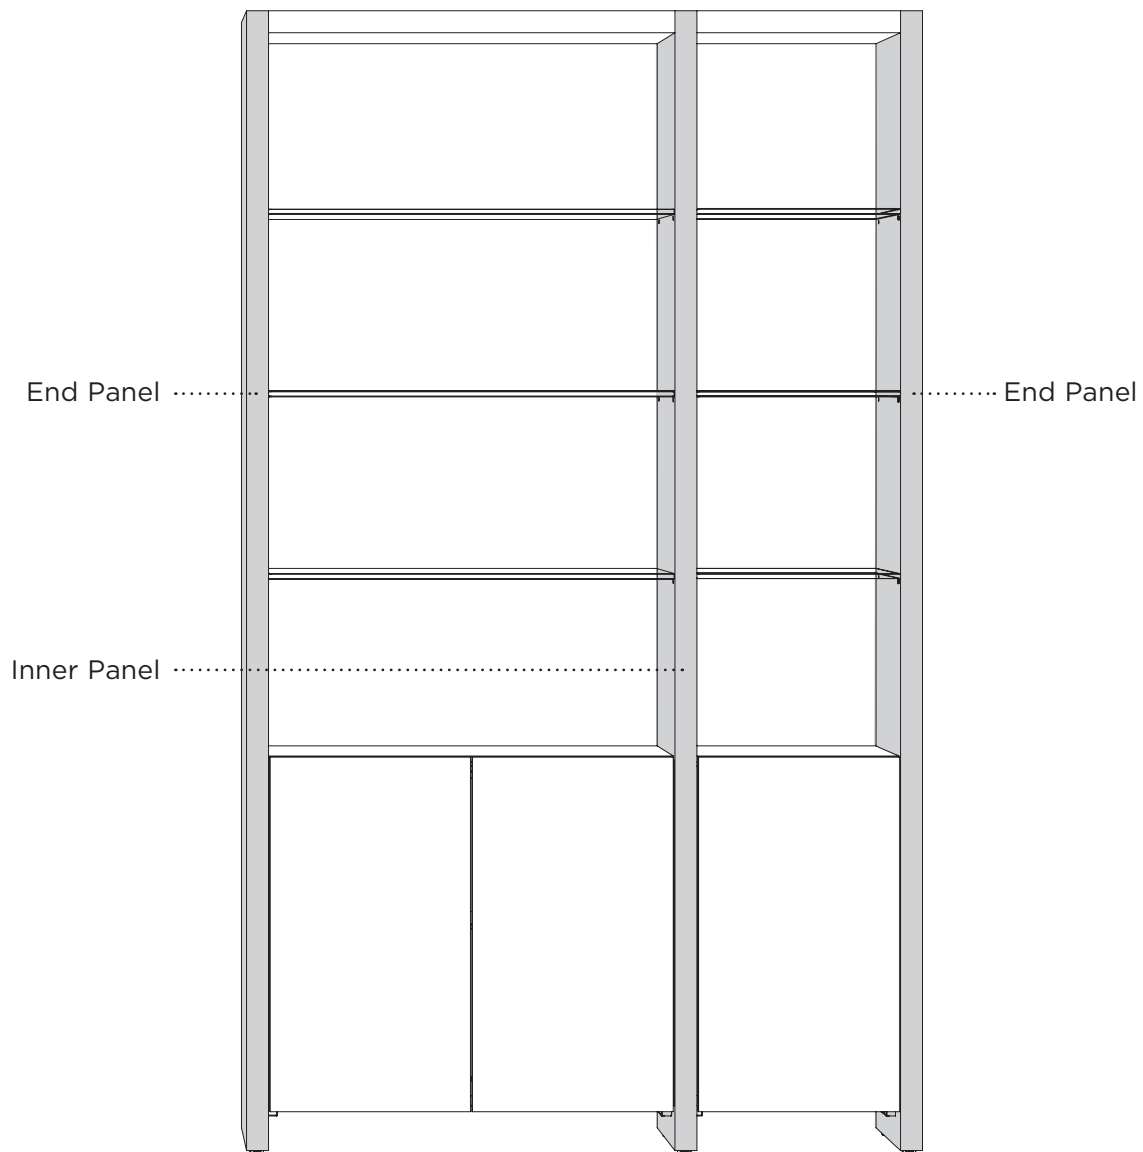



580002 (Base) + 580003 (Add-on)

STEP 1. ATTACH CABINET BLOCKS TO PANELS



ASSEMBLY


Attach **(C3) Cabinet Blocks** to a **(C1) End Panel** and a **(C2) Inner Panel** using **(H1) Screws** and **(T2) Hex Driver**.

	PART/DESCRIPTION	QTY
	T2-HEX DRIVER	1
	H1-SCREW	4 per unit
	C3-CABINET BLOCK	2 per unit

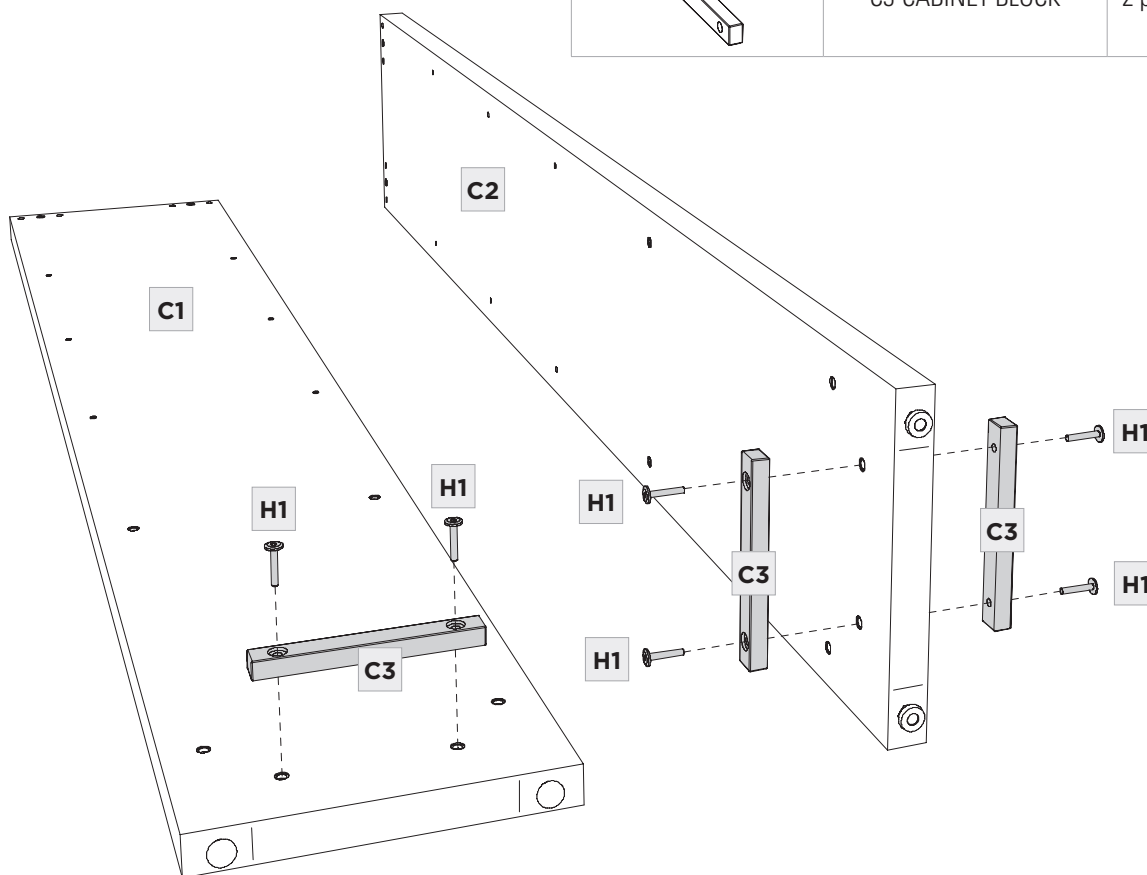

Find the sets of 3 holes near the top edge of the **(C1) End Panel** and **(C2) Inner Panel**. Screw **(H2) Cam Bolts** into the threaded holes using **(T1) Phillips Screwdriver** and push **(H3) Wooden Dowels** into the outer holes.

	PART/DESCRIPTION	QTY
	T1-PHILLIPS SCREWDRIVER	1
	H2-CAM BOLT	4 per unit
	H3-WOODEN DOWEL	8 per unit


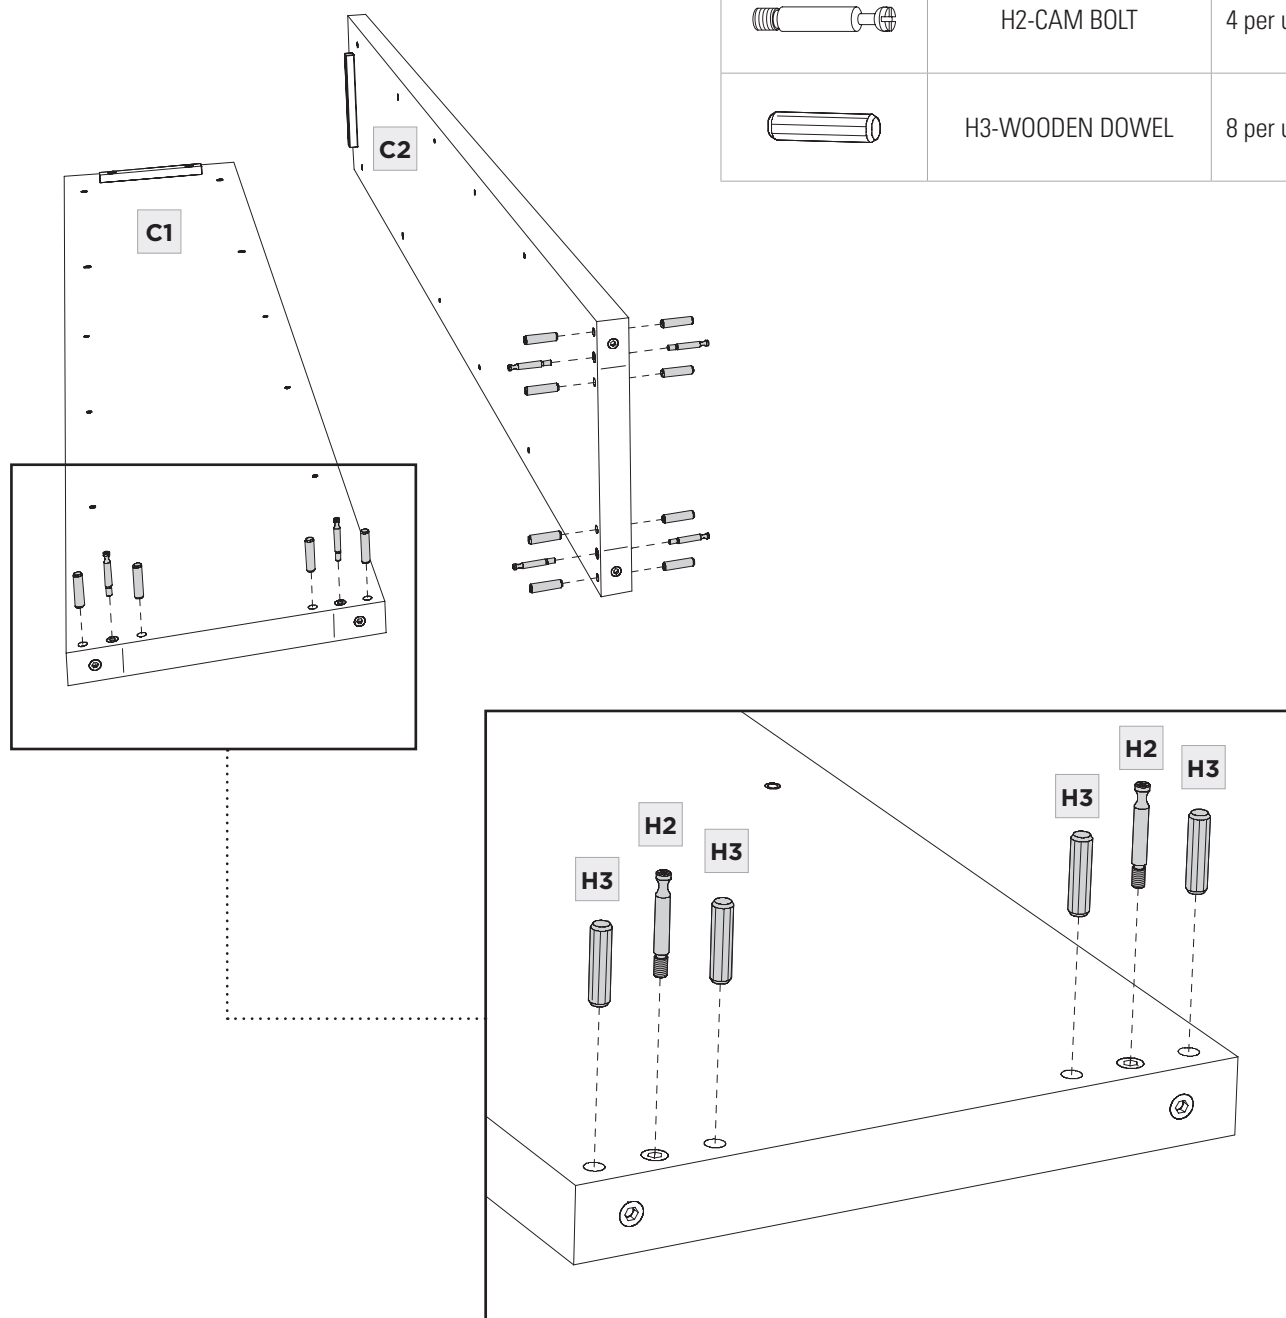


STEP 3. INSERT BARREL NUTS

ASSEMBLY

Insert **4 (H4) Barrel Nuts** into the holes on the top of the **(C4) Top Panel**, making sure that the hole on the side of the barrel nuts align with the holes on the edges of the panel.

	PART/DESCRIPTION	QTY
	H4-BARREL NUT	4

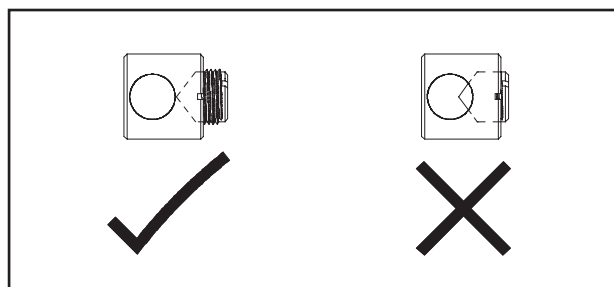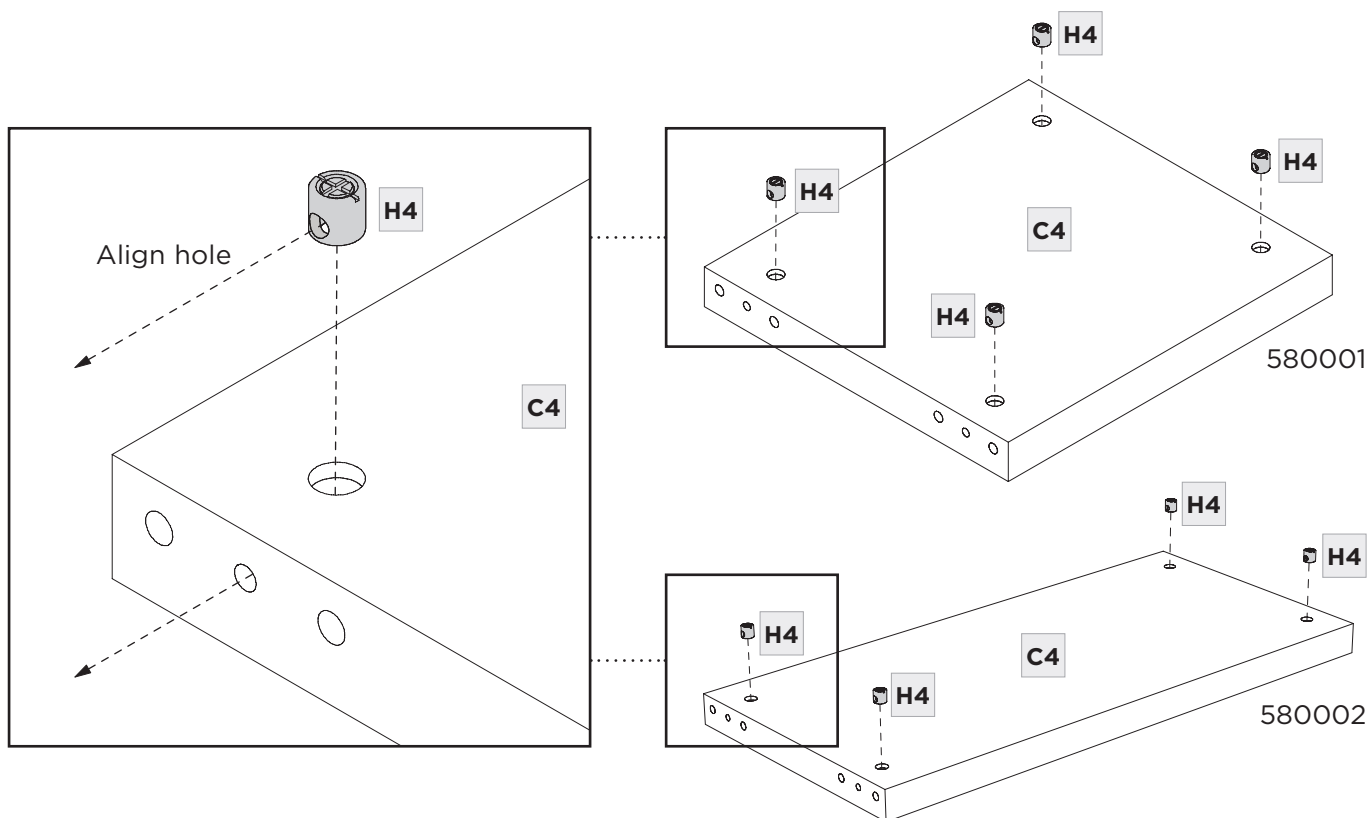


NOTE: Look into the side hole of the barrel nuts and make sure, the set screw is not blocking the hole.


If the hole is blocked, unscrew set screw a few turns until the hole is clear, which will allow the cam bolts to enter.

Attach **(C4) Top Panel** to **(C1) End Panel** and **(C2) Inner Panel** by sliding dowels and cam bolts into the holes on the edge of **(C4) Top Panel**.

If cams don't go into barrel nuts, check to make sure the barrel nut is aligned with the side hole and make sure the set screw is loosened before insertion of the cam bolts.

Tighten barrel nuts using **(T1) Phillips Screwdriver** with a clockwise turn. Position cabinets as shown. Make sure the door is facing upward.



	PART/DESCRIPTION	QTY
	T1-PHILLIPS SCREWDRIVER	1

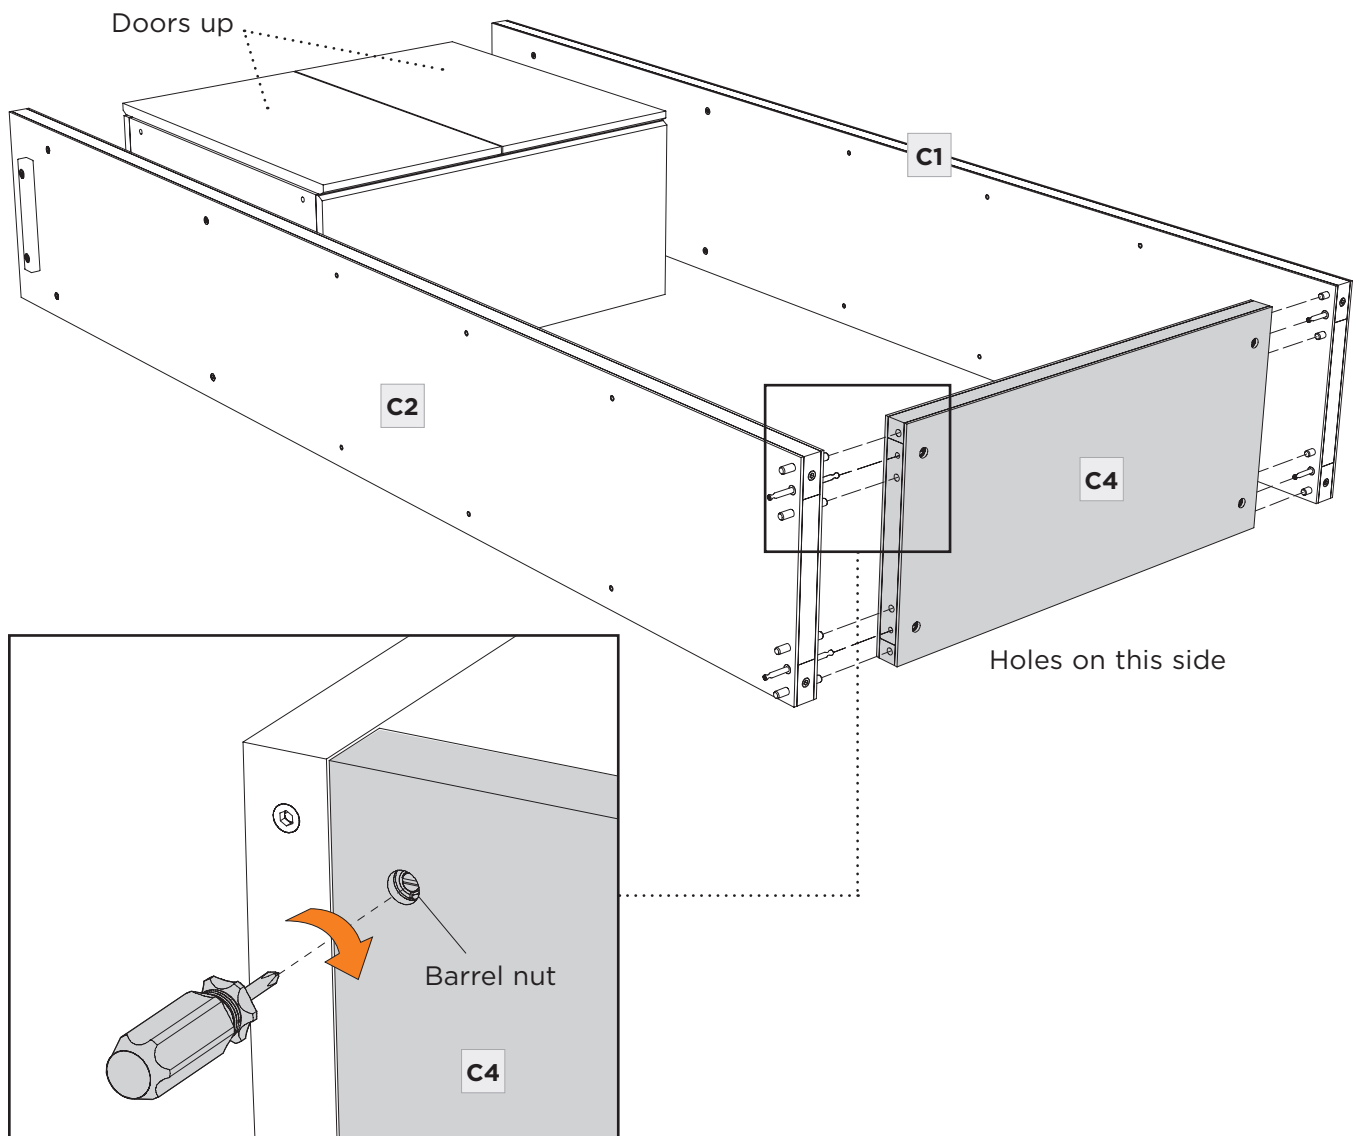



STEP 5. ATTACH CABINET

ASSEMBLY


Making sure the bottom of the cabinet is against the **(C3) Cabinet Blocks**, carefully open the cabinet doors and attach the **(C5) Cabinet** to **(C1) End Panels** and **(C2) Inner Panels** using **8 (H1) Screws** per cabinet and tighten with **(T2) Hex Driver**.

	PART/DESCRIPTION	QTY
	T2-HEX DRIVER	1
	H1-SCREW	8

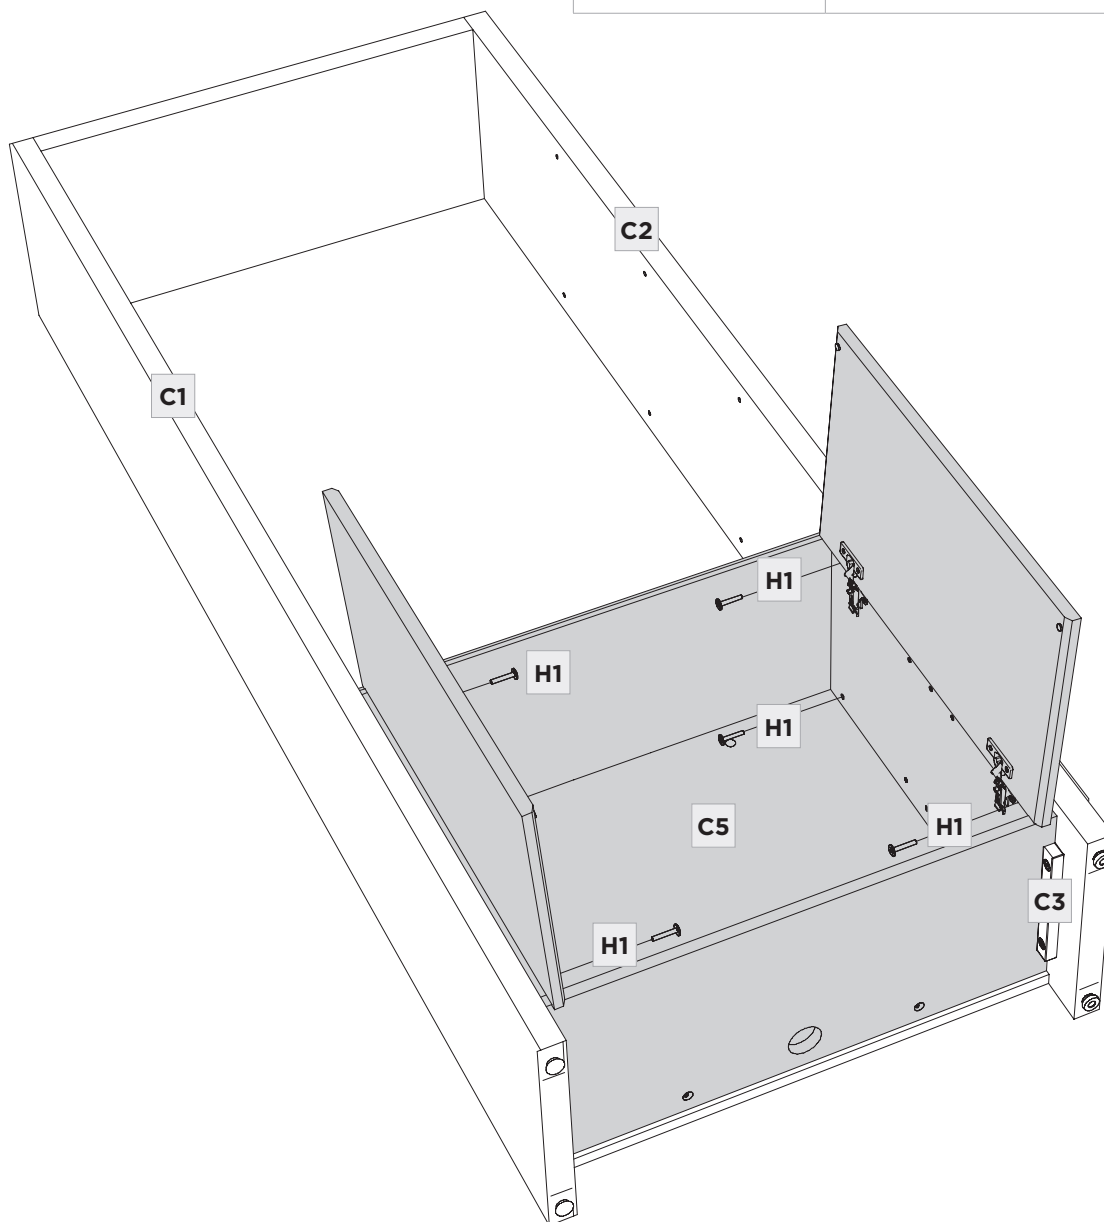


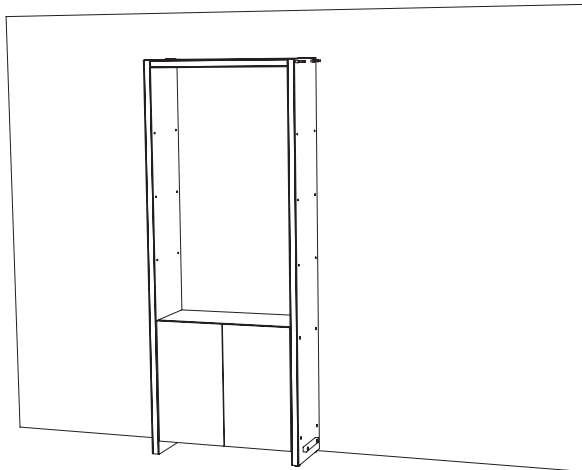**6A-1: Inline Against Wall**

Option A: With help from **at least 1** other person, carefully stand the cabinets onto their base. Carefully lift and slide into position flat along a wall.

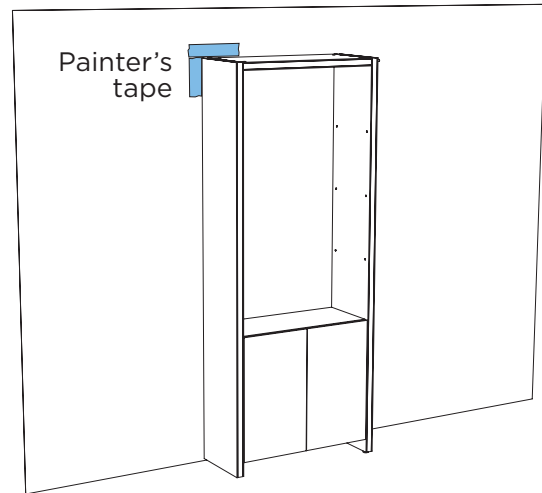**6A-2: Inline Against Wall**

Option A: Attaching your Linea Cabinet to the wall **is required** to ensure your safety. Use painter's tape to mark at least 1 upper back corner of the unit, as shown. It is recommended to attach the 2 outer corners of multiple units.

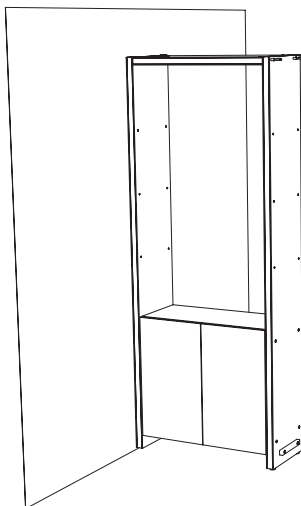**6B-1: Perpendicular Variation**


Option B: With help from **at least 1** other person, carefully stand the cabinets onto their base. Carefully lift and slide into position as a peninsula extending perpendicular to a wall.


**6B-2: Perpendicular Variation**

Option B: Attaching your Linea Cabinet to the wall **is required** to ensure your safety. Use painter's tape to mark at least 1 upper back corner of the unit, as shown. It is recommended to attach the 2 outer corners of multiple units.

Move the cabinet to the side. Place **(H5) Wall Brackets** on the wall (flush with top and 1/4" (7mm) away from the edge) and mark hole locations on the wall using a pencil. Drill holes at these locations for wall inserts.

Choose **(H8)** or **(H9) Wall Anchors** appropriate for your wall type.

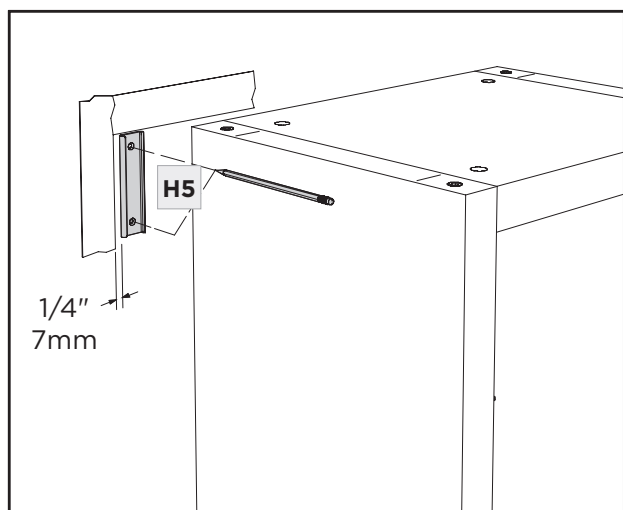


	PART/DESCRIPTION	QTY
	H5-WALL BRACKET	2
	H7-SCREW	4
	H8-ANCHOR	4
	H9-ANCHOR	4

Choose wall anchors based on your walls:


- H8**  Sheetrock Anchor
- H9**  Plaster/Brick/Block Anchor

Insert **(H8)** or **(H9) Wall Anchors** into the holes and attach **(H5) Wall Brackets** to the wall using **(H7) Anchor Screws**.

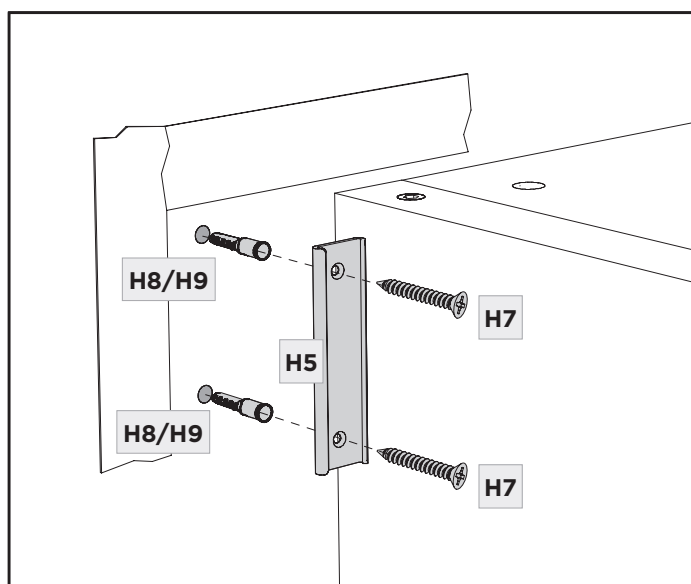




Re-position your Linea cabinet in front of the **(H5) Wall Brackets**. Stand on a step ladder and slide one **(H6) Cabinet Bracket** down into the slot in **(H5) Wall Brackets** and tighten using **(H10) Bracket Screws** and **(T2) Hex Driver**. Save the second **(H5) Wall Bracket** for the final unit in the inline assembly.

	PART/DESCRIPTION	QTY
	T2-HEX DRIVER	1
	H6-CABINET BRACKET	2
	H10-BRACKET SCREW	2

Inline Against Wall

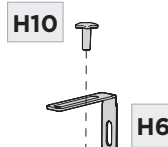

H10



H6

H10



H6




Perpendicular Variation


STEP 9. ATTACH CABINET BLOCK(S) TO PANEL(S)

ASSEMBLY

Attach **(C3) Cabinet Block** to the next panel in the series using **(H1) Screws** and **(T2) Hex Wrench**.

Note: If you assemble the final unit in the series, this will be a **(C1) End Panel**. If you are attaching additional units, this will be a **(C2) Inner Panel**. Attach **(C3) Cabinet Blocks** and **(H1) Screws** to both sides of the **(C2) Inner Panel**.


	PART/DESCRIPTION	QTY
	T2-HEX DRIVER	1
	H1-SCREW	4 per unit
	C3-CABINET BLOCK	2 per unit


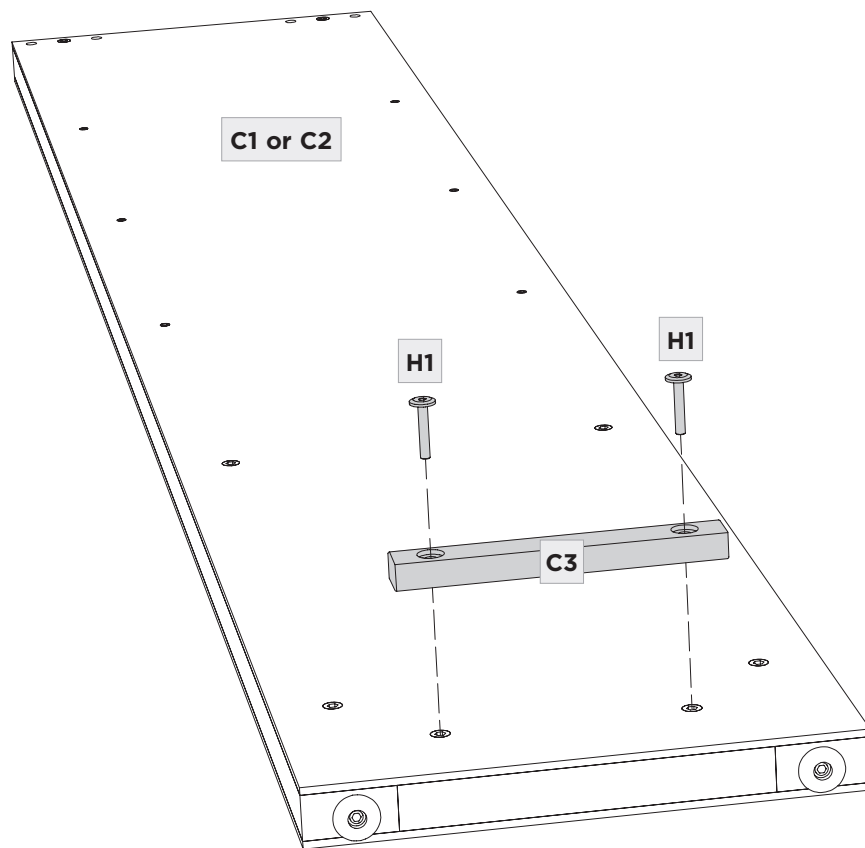


ASSEMBLY

STEP 10. INSTALL CAMS AND DOWELS

Find the sets of 3 holes near the top edge of the panel. Screw **(H2) Cam Bolts** into the threaded holes using **(T1) Phillips Screwdriver** and push **(H3) Wooden Dowels** into the outer holes.

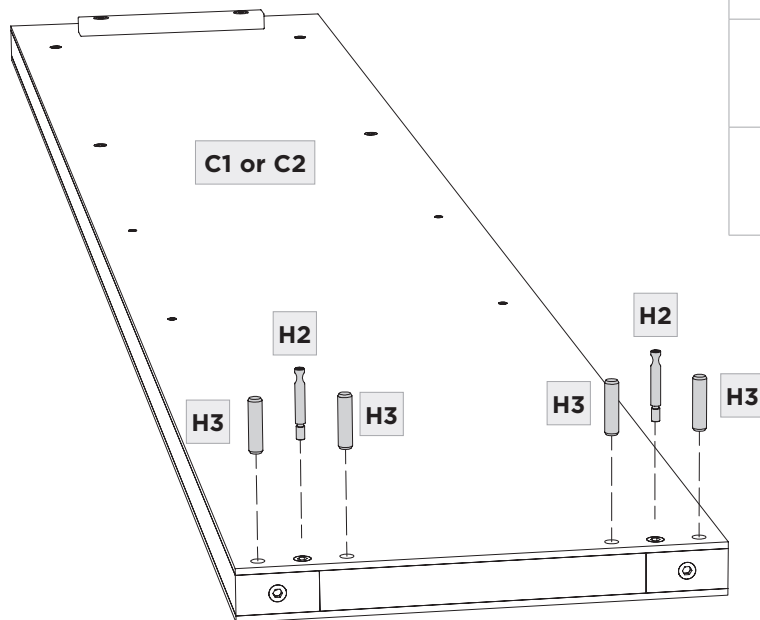

	PART/DESCRIPTION	QTY
	T1-PHILLIPS SCREWDRIVER	1
	H2-CAM BOLT	4 per unit
	H3-WOODEN DOWEL	8 per unit


ASSEMBLY


STEP 11. ATTACH TOP PANEL

Attach **(C4) Top Panel** to the **(C1) End Panel** by sliding dowels and cam bolts into the holes on the edge of **(C4) Top Panel**.

If cams don't go into barrel nuts, check to make sure the set screw is loosened before insertion of the cam bolts. **(See page 23.)**

Tighten barrel nuts using **(T1) Phillips Screwdriver** with a **clockwise** turn.

	PART/DESCRIPTION	QTY
	T1-PHILLIPS SCREWDRIVER	1

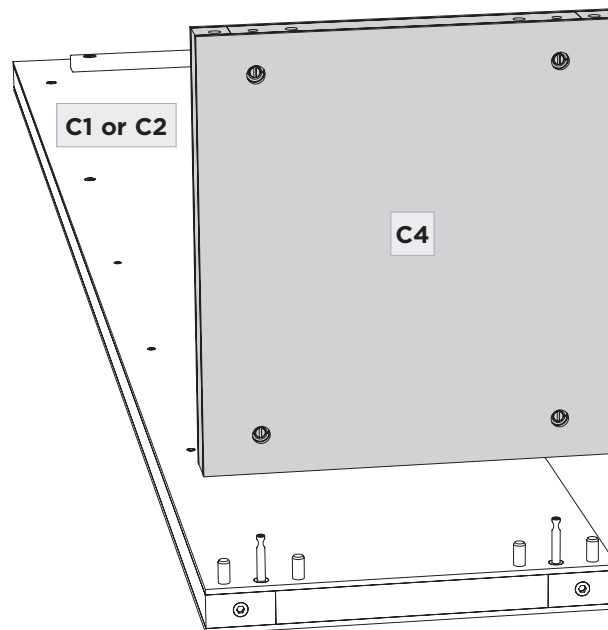


STEP 12. ATTACH TOP PANEL TO DIVIDER PANEL

2 PERSON TASK




ASSEMBLY

With help from at least 1 other person, carefully stand the top panel and end panel assembly onto its base and connect it to the **(C2) Inner Panel** by sliding the dowels and cam bolts into the holes on the edge of the **(C4) Top Panel**.

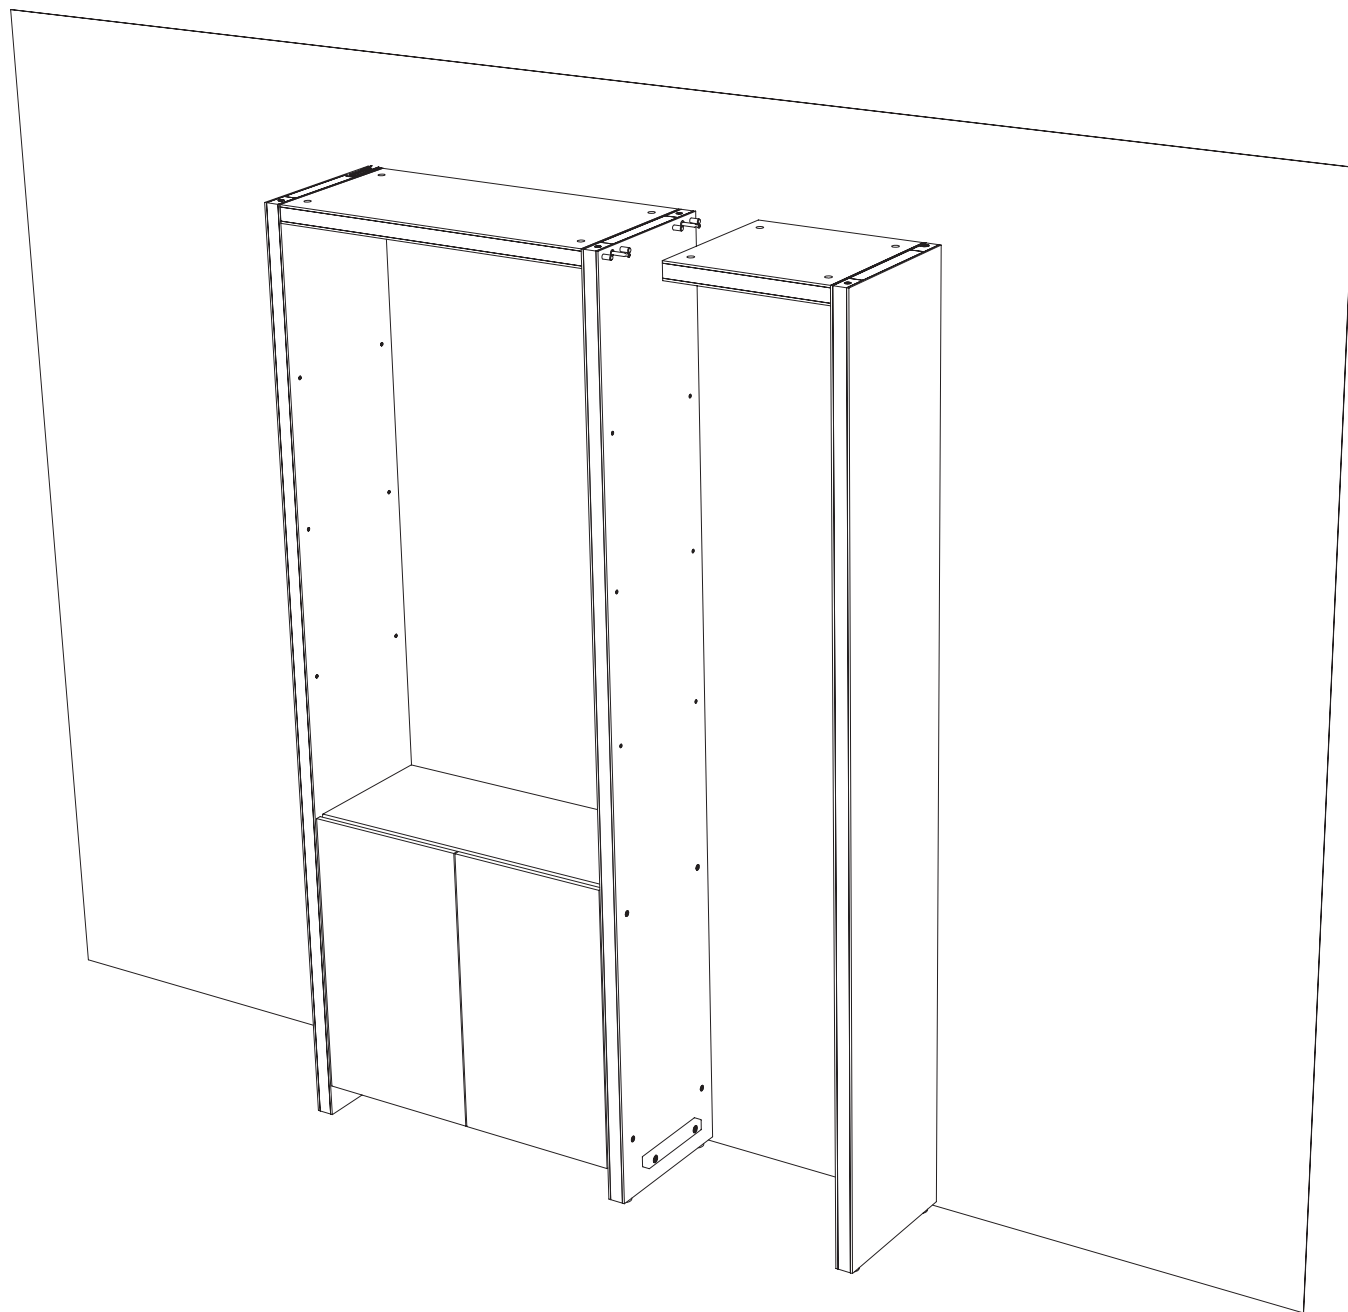


If this is the final unit in the series, follow steps 13-15 to connect to the wall. If you will be attaching additional units, skip to step 16.

Use painter's tape to mark at least 1 upper back corner of the last unit in the series, as shown.

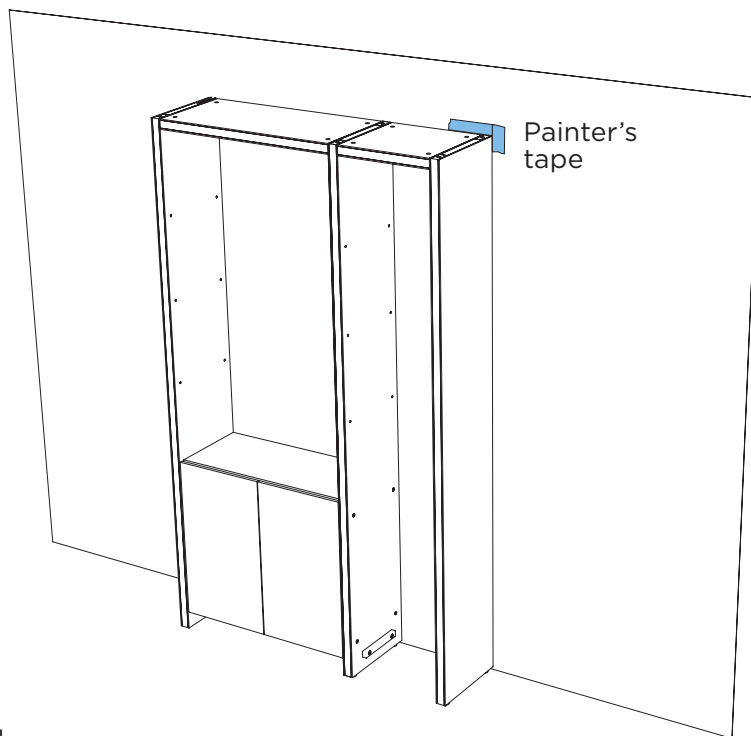




Remove add on panel.

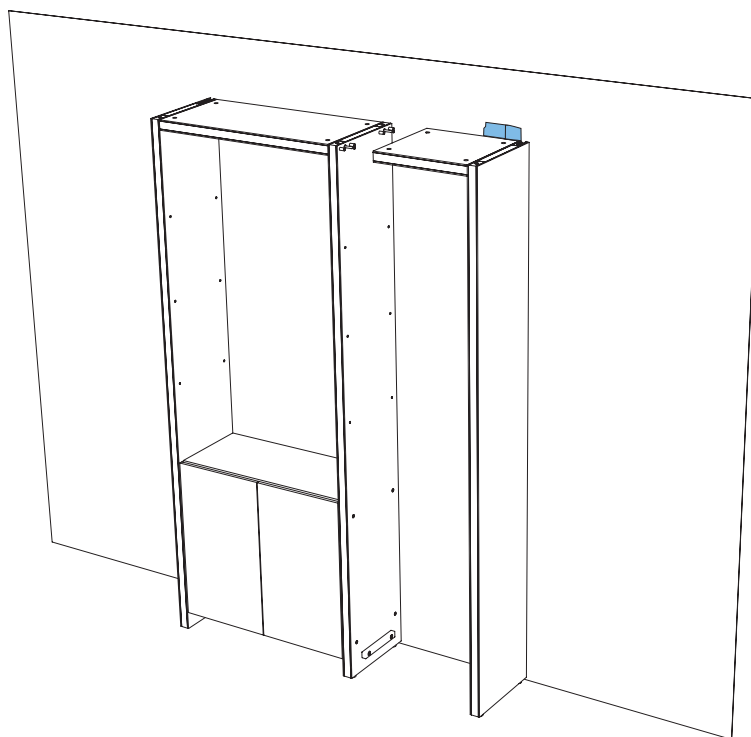

Move the cabinet to the side. Place **(H5) Wall Brackets** on the wall (flush with top and 1/4" (7mm) away from the edge) and mark hole locations on the wall using a pencil. Drill holes at these locations for wall inserts.

Choose **(H8)** or **(H9) Wall Anchors** appropriate for your wall type.

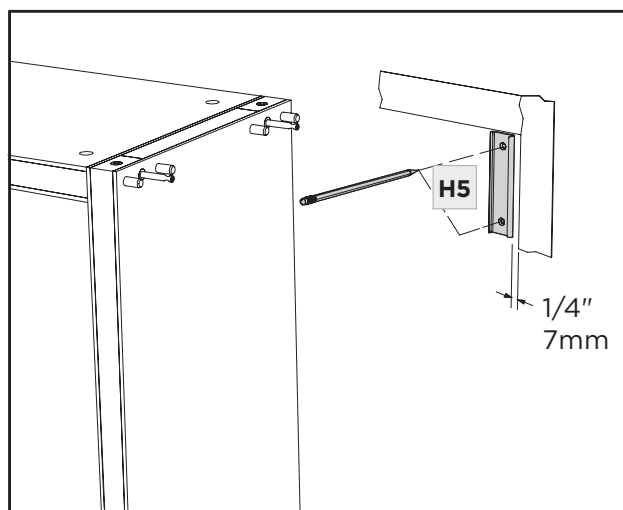


	PART/DESCRIPTION	QTY
	H5-WALL BRACKET	2
	H7-SCREW	4
	H8-ANCHOR	4
	H9-ANCHOR	4

Choose wall anchors based on your walls:

- H8**  Sheetrock Anchor
- H9**  Plaster/Brick/Block Anchor


Insert **(H8)** or **(H9) Wall Anchors** into the holes and attach **(H5) Wall Brackets** to the wall using **(H7) Anchor Screws**.

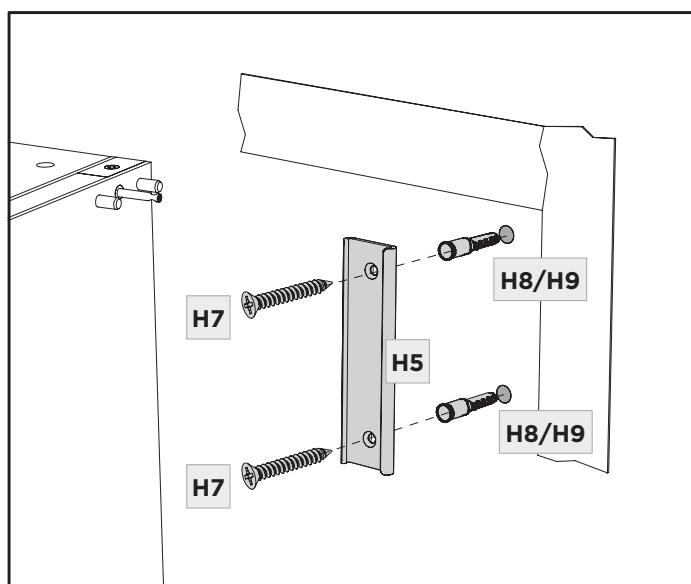




With help from at **least 1 other person**, carefully stand the top panel and end panel assembly onto its base and connect it to the **(C2) Inner Panel** by sliding the dowels and cam bolts into the holes on the edge of the **(C4) Top Panel**.

Install second wall bracket if this is the final unit.

	PART/DESCRIPTION	QTY
	T2-HEX DRIVER	1
	H6-CABINET BRACKET	1
	H10-BRACKET SCREW	1

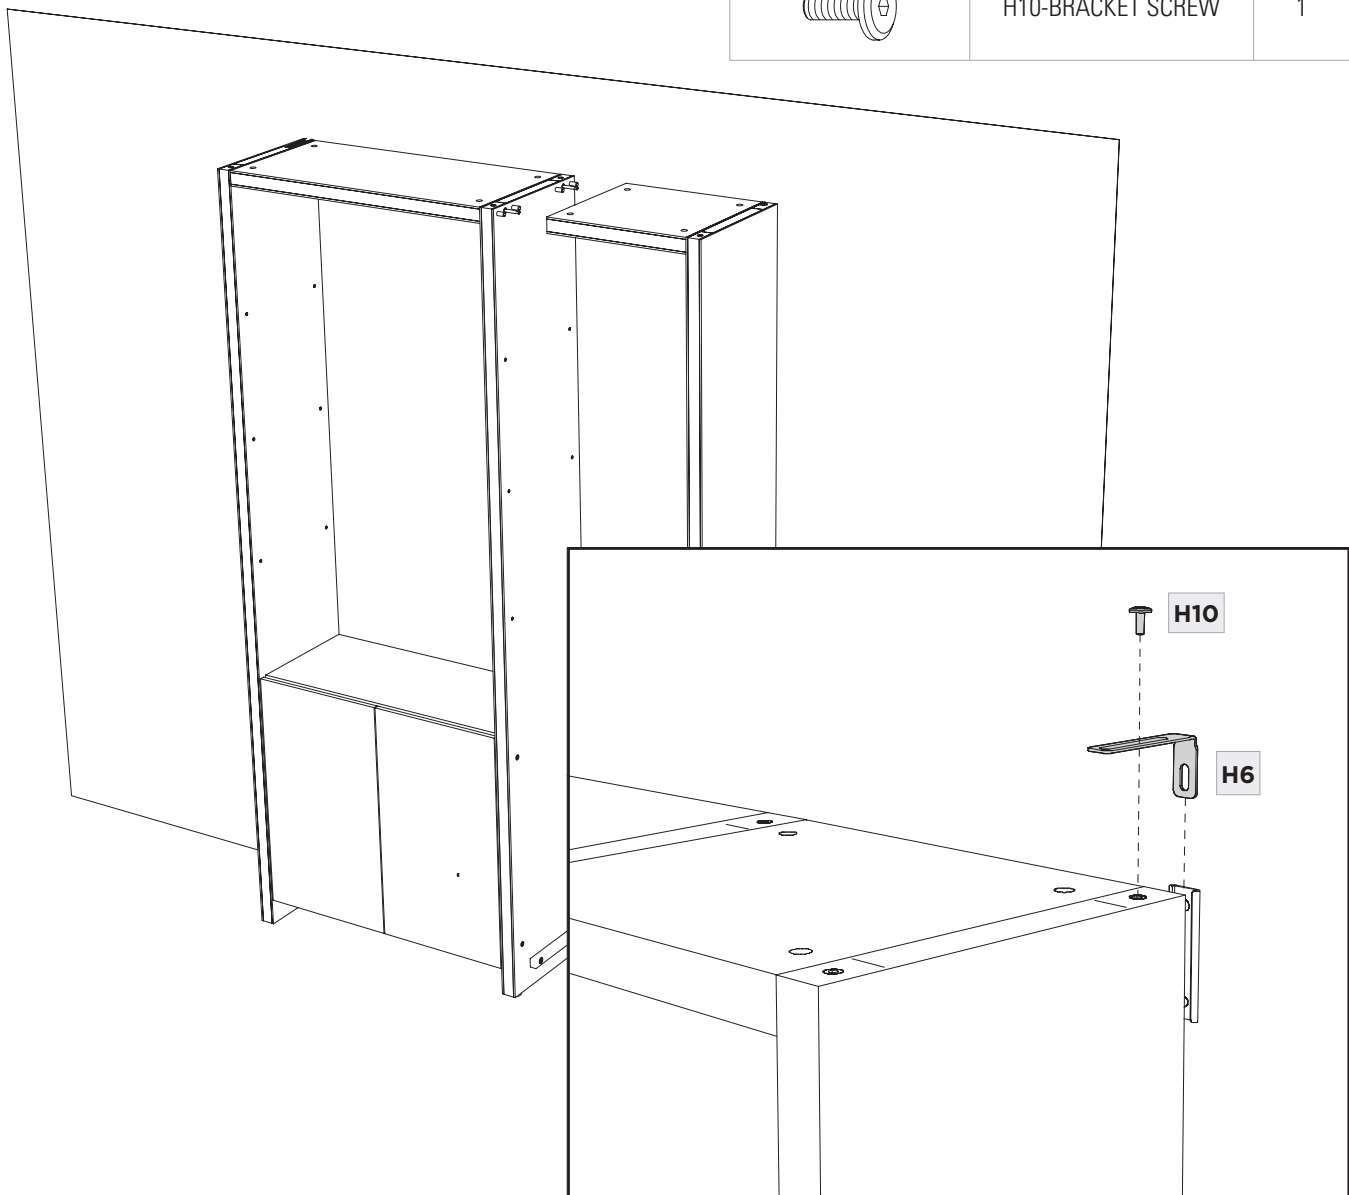


STEP 16. INSTALL CABINET

2 PERSON TASK






ASSEMBLY

With the help of at **least 1 other person**, carefully slide the **(C5) Cabinet** onto the **(C3) Cabinet Blocks**. Slide the cabinet back until the door is flush with the front edges of the **(C1) End Panel** and **(C2) Inner Panel**.

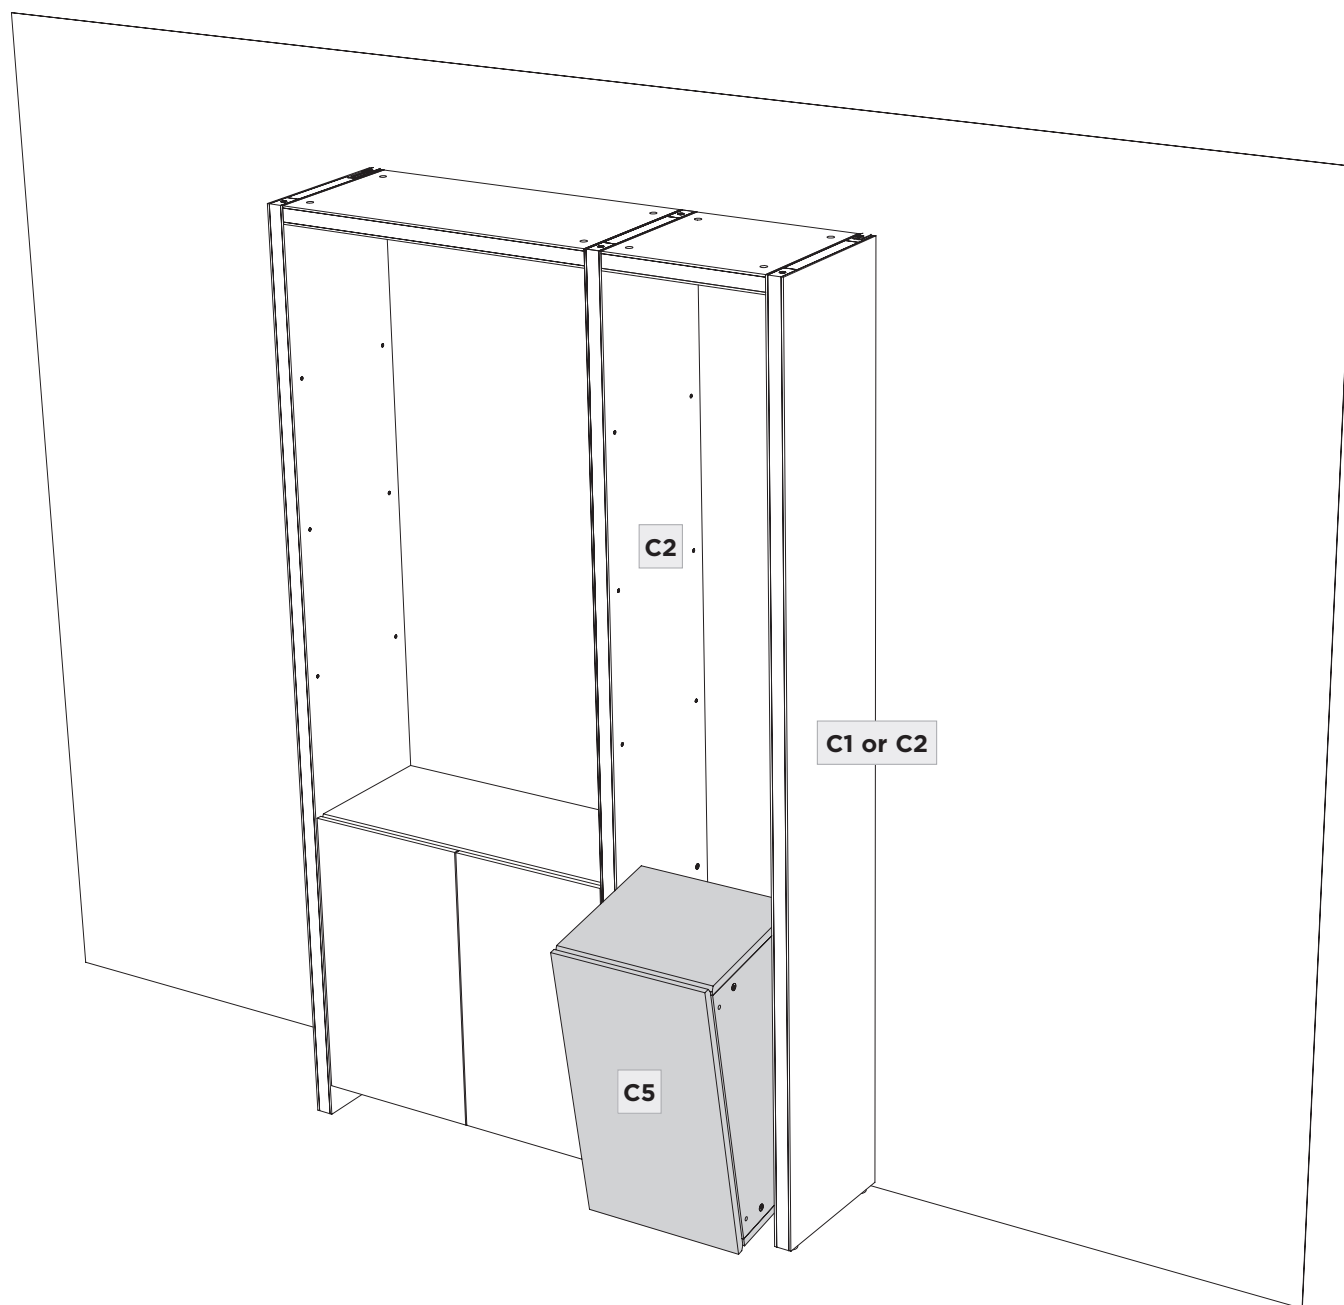

Carefully open the cabinet door(s) and attach the **(C5) Cabinet** to **(C1) End Panel** and **(C2) Inner Panel** using **8 (H1) Screws** and tighten with **(T2) Hex Driver**.

	PART/DESCRIPTION	QTY
	T2-HEX DRIVER	1
	H1-SCREW	8

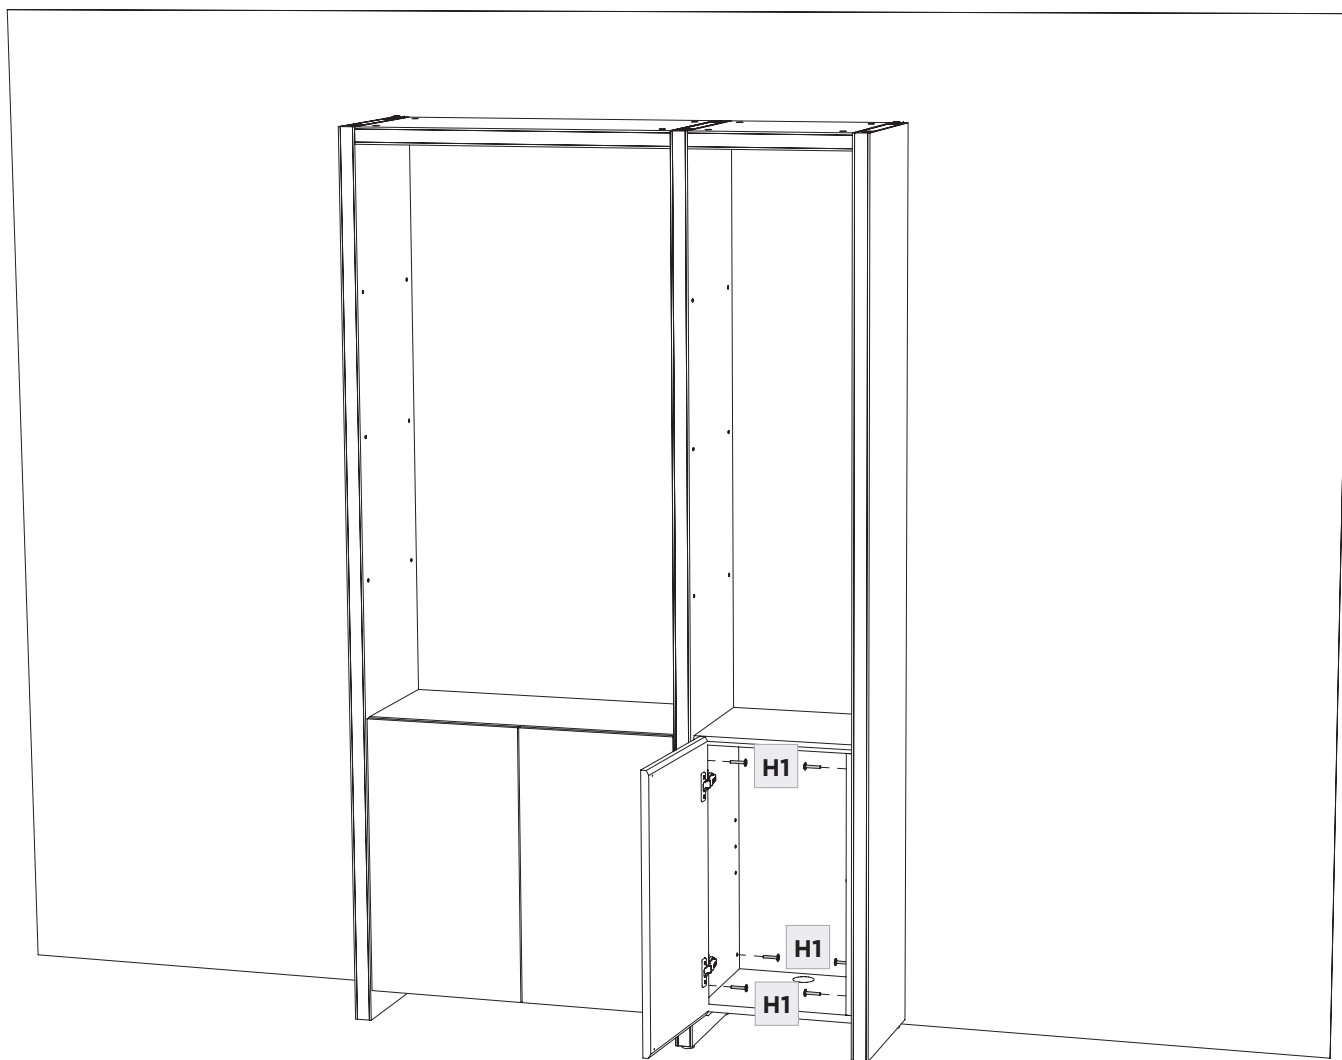


STEP 18. INSTALL SHELVES AND LEVEL



ASSEMBLY

Attach **16 (H11) Shelf Pins** into the threaded holes of each cabinet section using a **(T1) Phillips Screwdriver**—choose preferred interior shelf height. Install **(C6) Outer Glass Shelves** on the shelf pins, tilting the glass slightly to avoid hitting side panels. Tilt and install **(C7) Inner Glass Shelf** inside the cabinet.

Use **(T3) Leveler Wrench** to level the cabinets.


To change 580001 door hinges, **see page 18**.

	PART/DESCRIPTION	QTY
	T1-PHILLIPS SCREWDRIVER	1
	T3-LEVELER WRENCH	1
	H11-SHELF PIN	16 per unit

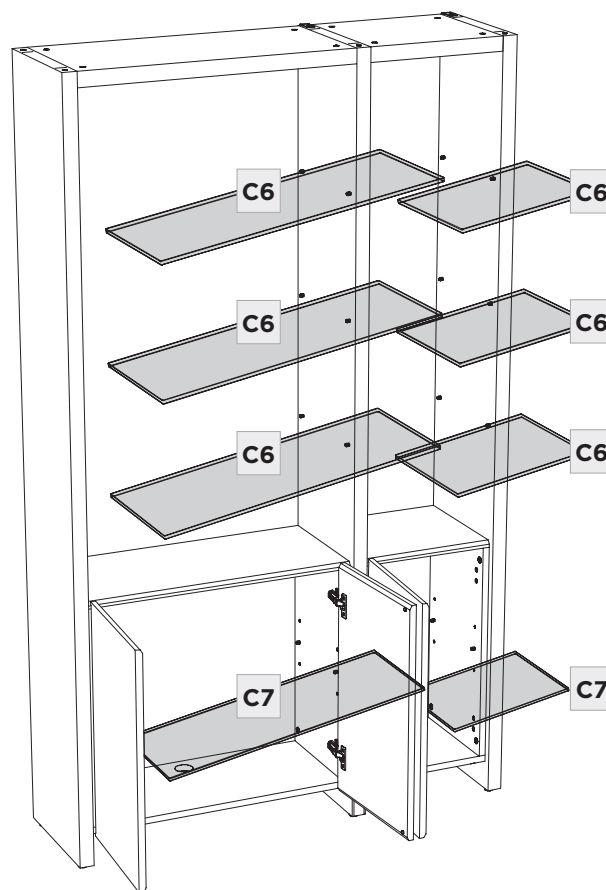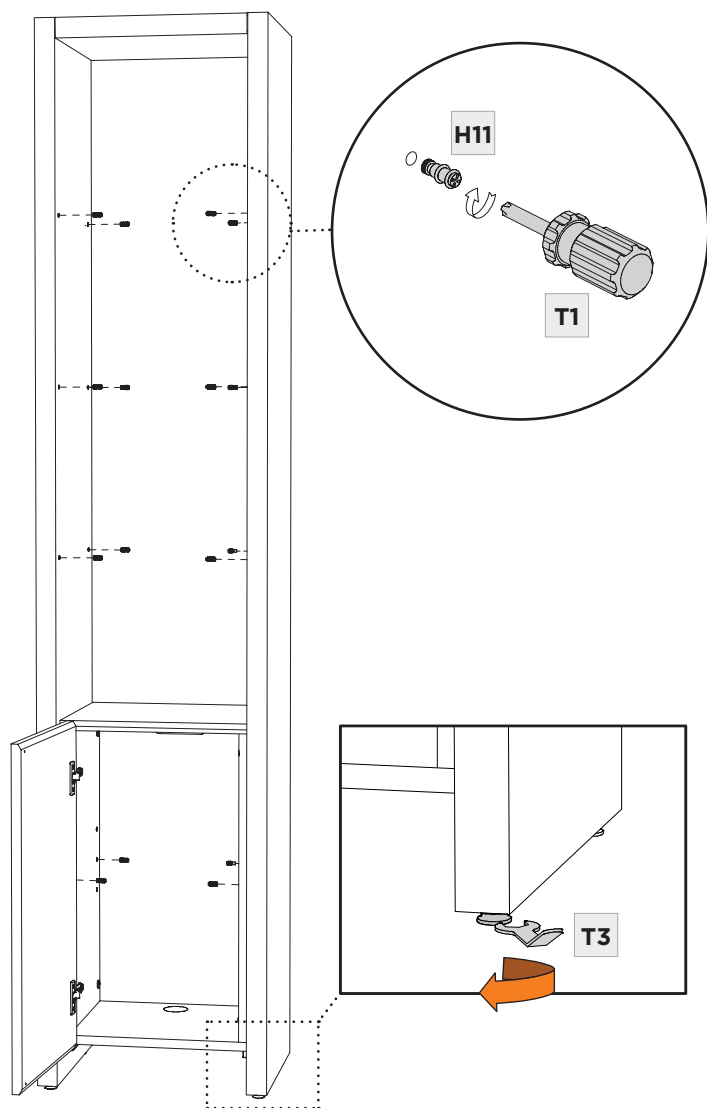


The doors on your cabinet should be evenly spaced, and the doors should open and close freely without rubbing against the door frame. If the cabinet's doors appear out of alignment, this condition can be corrected with minor adjustments to the European hinges on each door.

Because these hinges are adjustable, adjusting one hinge can sometimes cause the need for adjustments to other hinges. But with a few adjustments, you can modify the orientation of the cabinet doors to make sure that they hang perfectly within your cabinet.

	PART/DESCRIPTION	QTY
	T1-PHILLIPS SCREWDRIVER	1

Use a **(T1) Phillips Screwdriver** to adjust the door hinges:

- By adjusting **Screw 1**, the door will move LEFT or RIGHT within the frame. Make minor adjustments at both top and bottom hinges for best results.
- By loosening both **Screws 2** on both hinges, the door can move UP or DOWN. Retighten the screws.
- By adjusting **Screw 3** the entire door will move IN or OUT, opening or closing the gap between the door frame and cabinet. (This screw rarely needs adjustment.)

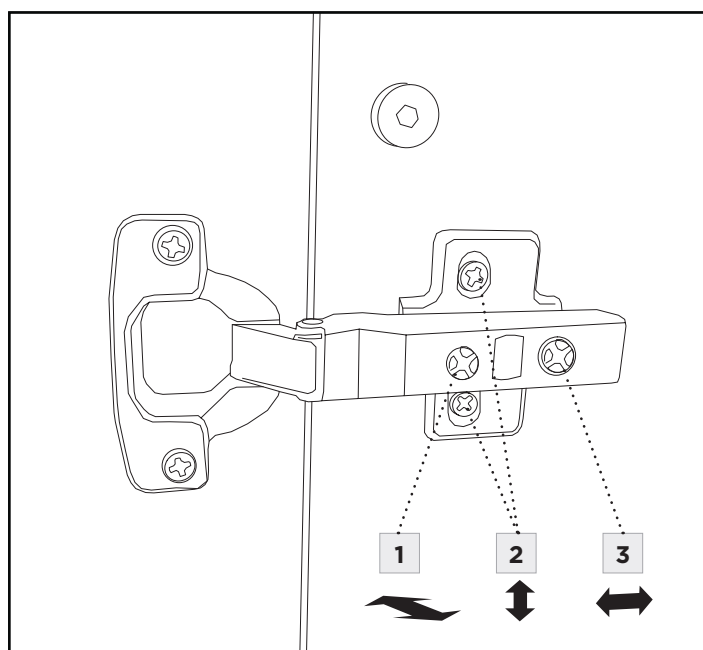

Your BDI furniture has been constructed with the finest materials, carefully manufactured, and designed to last a lifetime. Regular furniture care will prolong your enjoyment and keep it looking its best. Here are some general tips for taking care of BDI furniture. Your surfaces may vary.

GLASS

Glass surfaces are maintained using household glass cleaner and a paper towel or cloth.

SATIN-ETCHED GLASS

This uniquely smooth-to-the-touch glass surface can be regularly maintained using household glass cleaner and a paper towel or cloth.

A 'Magic Eraser' removes minor scratches or scuffs not eliminated using a paper towel or cloth. 'Magic Eraser' is a melamine foam product available at any grocery store or home improvement center. Dampen the entire glass surface and the Magic Eraser, then rub the whole surface in broad, even strokes using moderate pressure. Clean and dry the surface with a paper towel. Check for results and repeat as necessary. Any scratches or scuffing not eliminated by one of the above methods can often be addressed by 'refreshing' the glass. This process should not be required more than once per 6-12 months. See this brief video for the simple method: www.bdiusa.com/glass

WOOD

Wood surfaces should be cleaned with a slightly damp (not saturated) cloth or paper towel. Do not use glass cleaner on wood. If moisture remains, dry the surface with another cloth. If needed, a gentle, non-abrasive cleanser may be used, but wipe away all cleaner residue and dry the surface with a cloth.

BDI's wood finishes feature natural hardwood solids and veneers. Wood is a product of nature and—unlike man-made materials that can be manufactured to strict and consistent specifications—has natural imperfections that are part of its appeal and character. Every piece of wood differs from every other, even when coming from the very same tree. As such, grain, texture, and tone variation should be expected from one panel or piece of furniture to the next.

While BDI's stained wood finishes are stable in tone & appearance, all finishes are subject to some degree of discoloration with prolonged exposure to direct sunlight. Please avoid positioning your BDI cabinet in any area with ample direct sunlight. To learn more about the features of natural wood, visit www.bdiusa.com/wood

METAL, PORCELAIN, & PAINTED SURFACES

Surfaces should be cleaned with a slightly damp (not saturated) cloth or paper towel. If moisture remains, dry the surface with another cloth. If needed, a gentle, non-abrasive cleanser may be used, but be sure to wipe away all cleaner residue and dry the surface with a cloth.

WARRANTY

BDI warrants to the original purchaser that for the below-stated warranty term, BDI will replace any product, part, or component covered by this warranty that fails under normal use as a result of a defect in material or workmanship. The decision to replace a complete product versus the part or component in question will be at BDI's sole discretion.

Residential Use: BDI Furnishings carry warranty coverage for three (3) years from the date of product delivery, as shown on your sales receipt/documentation. Select chairs carry coverage for five (5) years from the date of product delivery.

Commercial Use: BDI Furnishings carry warranty coverage for one (1) year from the date of product delivery, as shown on your sales receipt/documentation. Select chairs carry coverage for five (5) years from the date of the product delivery, based on an 8-hour daily use pattern.

BDI reserves the right to refine or update its warranty from time to time. See the complete and latest warranty document at www.bdiusa.com/warranty.

PRODUCT REGISTRATION

Registering your new BDI product allows us to send you important product updates, service information, and helpful hints related to your BDI products.

Register today, and you will be entered to win free a BINK table from BDI: www.bdiusa.com/register



WARNING

SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM FURNITURE TIP-OVER. TO HELP PREVENT TIP-OVER:

- **DO NOT** allow children to hang on the open doors
- **DO NOT** allow children to climb on the cabinets
- **ALWAYS** attach your Linea shelving to a wall
- **FAILURE** to secure your Linea shelving to a wall can lead to SERIOUS INJURY OR DEATH

USE OF TIP-OVER RESTRAINT MAY REDUCE—BUT NOT ELIMINATE—THE RISK OF TIP-OVER.



These distinctive product configurations are protected by US and international patents, trade dress, and/or copyright laws. Linea & BDI are trademarks of Becker Designed, Inc. All rights reserved. ©2026, BDI | V.07.02.2026

Made in China.